
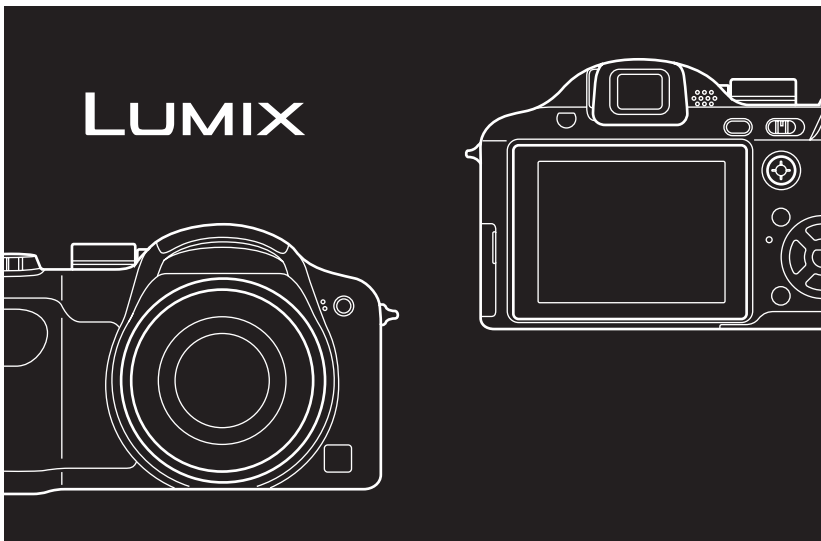


Panasonic®

Operating Instructions

Digital Camera

Model No. **DMC-FZ7**

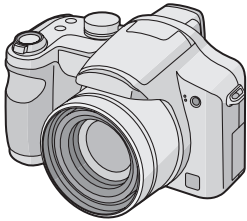

LEICA
DC VARIO-ELMARIT

Before connecting, operating or adjusting this product, please read the instructions completely.

For USA assistance, please call: 1-800-272-7033 or send e-mail to : digitalstillcam@panasonic.com

For Canadian assistance, please call: 1-800-561-5505 or visit us at www.panasonic.ca

PP

VQT0V63

Dear Customer,

We would like to take this opportunity to thank you for purchasing this Panasonic Digital Camera. Please read these Operating Instructions carefully and keep them handy for future reference.

Information for Your Safety

WARNING
TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES AND DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE. DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Carefully observe copyright laws. Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

- Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.
- SD Logo is a trademark.
- Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.

The socket outlet shall be installed near the equipment and easily accessible or the mains plug or an appliance coupler shall remain readily operable.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.



A lithium ion/polymer battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

FCC Note: (U.S. only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Trade Name: Panasonic
 Model No.: DMC-FZ7
 Responsible party: Panasonic Corporation of North America
 One Panasonic Way, Secaucus, NJ 07094
 Support Contact: Panasonic Consumer Electronics Company
 1-800-272-7033

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003




Panasonic
DMC-FZ7

-If you see this symbol-

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

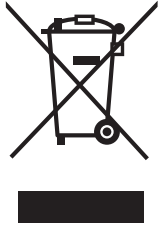

■ Care of the camera

- **Do not strongly shake or bump the camera.** The camera may stop operating normally, pictures may not be recorded or the lens may be damaged.
- Retract the lens before carrying the camera.
- Retract the lens before playing back pictures.
- **Sand or dust may cause the camera to malfunction. Make sure that sand or dust does not get into the lens or the terminals when using the camera on a beach etc.**
- Make sure that water does not get into the camera when using it on a rainy day or on a beach.
- **If water or seawater splashes on the camera, wet a soft cloth with tap water, wring it well and use it to wipe the camera body carefully. Then, wipe the camera again with a dry cloth.**

■ About the LCD monitor/Viewfinder

- **Do not press the LCD monitor with excessive force. Uneven colors may appear on the LCD monitor and it may malfunction.**
- Condensation may form on the LCD monitor in places with large temperature differences. Wipe the condensation with a soft, dry cloth.
- If the camera is cold when you turn it on, the picture on the LCD monitor/Viewfinder will be slightly darker than usual at first. However, the picture will return to normal brightness when the internal temperature of the camera increases.

Extremely high precision technology is employed to produce the LCD monitor/Viewfinder screen. However there may be some dark or bright spots (red, blue or green) on the screen. This is not a malfunction. The LCD monitor/Viewfinder screen has more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. The spots will not be recorded on pictures on a card.

■ About the Lens


- Do not press the lens with excessive force.
- Do not leave the camera with the lens facing the sun as it may cause the camera to malfunction. Also, be careful when you leave the camera outside or near a window.
- When there is dirt (water, oil, and fingerprints, etc.) on the surface of the lens, the picture may be affected. Lightly wipe the surface of the lens with a soft, dry cloth before and after taking pictures.

■ About Condensation (When the lens or the Viewfinder is fogged up)

- Condensation occurs when the ambient temperature or humidity changes as described below. Be careful of condensation since it causes lens stains, fungus and camera malfunction.
 - When the camera is taken from the cold outdoors to the warm indoors.
 - When the camera is taken from outside to inside an air-conditioned car.
 - When cool wind from an air conditioner etc. blows directly on the camera.
 - In humid places
 - To prevent condensation, put the camera in a plastic bag until the temperature of the camera is close to the ambient temperature. If condensation occurs, turn the camera off and leave it for about 2 hours. The fog will disappear naturally when the temperature of the camera becomes close to the ambient temperature.
- ### ■ When not using the camera for a long period of time
- Store the battery in a cool and dry place with a relatively stable temperature. [Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40% to 60%]
 - Always remove the battery and the card from the camera.
 - If the battery is left inserted in the camera it will discharge even if the camera is turned off. If the battery continues to be left in the camera, it will discharge excessively and may become unusable even if charged.
 - When storing the battery for a long period of time, we recommend charging it once a year. Remove the battery from the camera and store it again after it has completely discharged.
 - We recommend storing the camera with a desiccant (silica gel) when you keep it in a closet or a cabinet.

About The Mode Dial

Adjust part **A** to the desired mode.
The mode dial can be rotated 360°. Rotate it slowly and surely to adjust to each mode. (Do not adjust it to parts where there is no mode.)

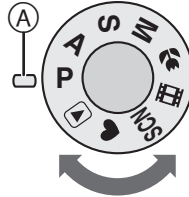

P : Program AE mode (P25)

The exposure is automatically adjusted by the camera.

A : Aperture-priority AE mode (P53)

The aperture value is automatically determined by the shutter speed you set.

S : Shutter-priority AE mode (P53)

The shutter speed is automatically determined by the aperture value you set.

M : Manual exposure mode (P56)

The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.

: Macro mode (P51)

This mode allows you to take a close-up picture of a subject.

: Motion picture mode (P68)

This mode allows you to record motion pictures.

SCN : Scene mode (P58)

This mode allows you to take pictures depending on the recording scenes.

♥ : **Simple mode (P29)**

This mode is recommended for beginners.

▶ : **Playback mode (P35)**

This mode allows you to play back recorded pictures.

■ **About indications in these operating instructions**



Modes indicated here allow you to use the functions or settings described on this page. Set the mode dial to any of the modes to use the functions or settings.



Convenient or helpful information for use of the camera is described.

■ **About illustrations in these operating instructions**


Please note that the appearance of the product, the illustration or the menu screen are a little different from those in actual use.

■ **About illustrations of the cursor button and joystick**

In these operating instructions, the operations on the cursor button are described as illustrated as shown.

Cursor button

e.g.: When you press the ▼ button

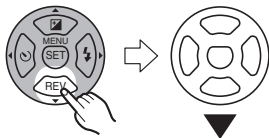


Joystick

e.g.: When you tilt the joystick right



 e.g.: When you press the center of the joystick



Contents

Before Use

| | |
|-----------------------------------|---|
| Information for Your Safety | 2 |
| About The Mode Dial | 5 |

Preparation

| | |
|--|----|
| Standard Accessories | 9 |
| Names of the Components | 9 |
| Quick Guide | 11 |
| Charging the Battery with the Charger ... | 12 |
| About the Battery (charging/ number of recordable pictures) | 12 |
| Inserting/Removing the Battery | 13 |
| Inserting/Removing the Card | 14 |
| About the Card | 15 |
| Attaching the Lens Cap/Strap | 16 |
| Attaching the Lens Hood | 17 |
| Setting Date/Time (Clock Set) | 19 |
| About the Setup Menu | 20 |

Basic

| | |
|--|----|
| Taking Pictures | 25 |
| Taking Pictures in Simple Mode | 29 |
| Taking Pictures with the Zoom | 31 |
| • Using the Optical Zoom | 31 |
| • Using the Extended Optical Zoom (EZ) | 31 |
| • Using the Digital Zoom Further extending the zoom | 32 |
| Checking the Recorded Picture (Review) | 34 |
| Playing Back Pictures | 35 |
| Deleting Pictures | 36 |

Advanced

| | |
|---|----|
| About the LCD Monitor/Viewfinder | 38 |
| • Changing the information displayed | 38 |

| | |
|--|----|
| • Brightening the LCD Monitor (Power LCD/High angle mode) | 41 |
| Taking Pictures using the Built-in Flash | 42 |
| Taking Pictures with the Self-timer | 46 |
| Compensating the Exposure | 47 |
| Taking Pictures using Auto Bracket | 48 |
| Optical Image Stabilizer | 49 |
| Taking Pictures using Burst Mode | 50 |
| Taking Close-up Pictures | 51 |
| Aperture-priority AE | 53 |
| Shutter-priority AE | 53 |
| Manual exposure | 54 |
| Aperture Value and Shutter Speed | 55 |
| Taking Pictures with Manual Focus | 56 |
| Scene Mode | 58 |
| – Portrait mode | 59 |
| – Soft skin mode | 59 |
| – Scenery mode | 60 |
| – Sports mode | 60 |
| – Night portrait mode | 60 |
| – Night scenery mode | 61 |
| – Panning mode | 61 |
| – Food mode | 62 |
| – Party mode | 62 |
| – Candle light mode | 62 |
| – Fireworks mode | 63 |
| – Starry sky mode | 63 |
| – Baby mode 1/Baby mode 2 | 64 |
| – Snow mode | 65 |
| – High Sensitivity mode | 65 |
| Recording which day of the vacation you take the picture | 66 |
| Motion Picture Mode | 68 |
| Displaying Multiple Screens (Multi Playback) | 70 |
| Displaying pictures by recording date (Calendar playback) | 71 |
| Using the Playback Zoom | 72 |
| Playing Back Motion Pictures/ Pictures with Audio | 73 |

Menu Settings

| | |
|---------------------------------|----|
| Using the [REC] Mode Menu | 74 |
|---------------------------------|----|

| | | | |
|--|----|---|----|
| • [W.BALANCE] Adjusting the hue for a more natural picture..... | 75 | • [PROTECT] Preventing accidental erasure of pictures..... | 92 |
| • [SENSITIVITY] Setting the light sensitivity | 77 | • [AUDIO DUB.] Adding audio after taking pictures | 93 |
| • [ASPECT RATIO] Setting the aspect ratio of pictures..... | 77 | • [RESIZE] Making the picture smaller | 94 |
| • [PICT.SIZE]/[QUALITY] Setting a picture size and quality that matches your use of the pictures..... | 78 | • [TRIMMING] Enlarging a picture and trimming it..... | 95 |
| • [AUDIO REC.] Recording still pictures with audio | 79 | • [ASPECT CONV.] Changing the aspect ratio of a 16:9 picture..... | 96 |
| • [METERING MODE] Deciding the method to measure brightness..... | 80 | • [FORMAT] Initializing the card..... | 96 |
| • [AF MODE] Setting the focus method..... | 80 | | |
| • [CONT.AF] Continuously focusing on a subject | 81 | | |
| • [AF ASSIST LAMP] Focusing in low light conditions becomes easier | 82 | | |
| • [COL.EFFECT] Setting color effects for the recorded pictures..... | 82 | | |
| • [PICT.ADJ.] Adjusting the picture quality for the recorded pictures..... | 82 | | |
| • [FLIP ANIM.] Connecting images to create a motion picture file | 83 | | |
| • [CONVERSION] Using an optional lens | 85 | | |
| Using the [PLAY] mode menu | 87 | | |
| • [SLIDE SHOW] Playing back pictures in order for a fixed duration..... | 88 | | |
| • [FAVORITE] Setting your favorite pictures..... | 89 | | |
| • [ROTATE DISP.]/[ROTATE] To display the picture rotated..... | 89 | | |
| • [DPOF PRINT] Setting the picture to print and the number of prints | 91 | | |

Connecting to other equipment


| | |
|---|-----|
| Connecting to a PC..... | 98 |
| Printing the Pictures..... | 100 |
| Playing Back Pictures on a TV Screen | 104 |

Others

| | |
|---|-----|
| Using the MC Protector/ND Filter | 105 |
| Screen Display..... | 106 |
| Cautions for Use | 108 |
| Message Display | 110 |
| Troubleshooting..... | 112 |
| Number of recordable pictures and available recording time | 117 |
| Specifications..... | 120 |
| Digital Camera Accessory System | 122 |
| Digital Camera Accessory Order Form (For USA Customers)..... | 123 |
| Request for Service Notice (For USA Only)..... | 124 |
| Limited Warranty (For USA Only) | 125 |
| Customer Services Directory (For USA Only)..... | 127 |
| Index | 128 |
| Spanish Quick Use Guide/ Guía rápida en español..... | 130 |

Standard Accessories


Check that all the accessories are included before using the camera.

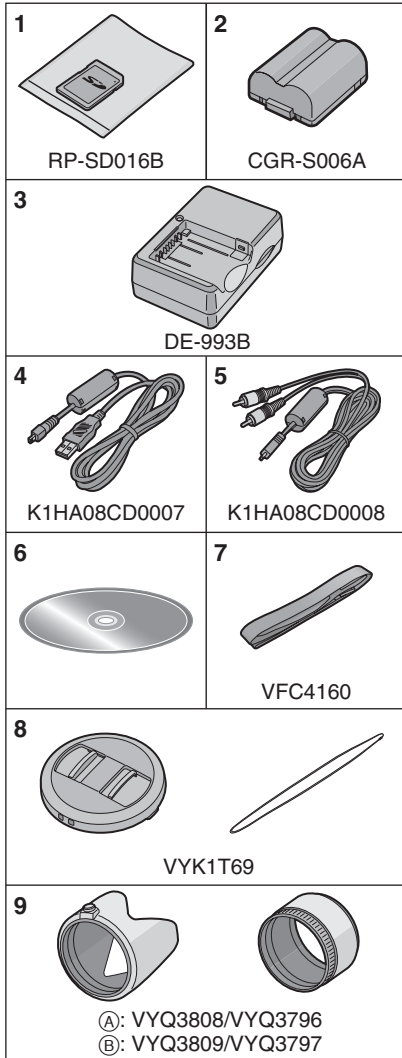


- 1 SD Memory Card (16 MB)
(Indicated as “Card” in the text)
- 2 Battery Pack
(Indicated as “Battery” in the text)
- 3 Battery Charger
(Indicated as “Charger” in the text)
- 4 USB Connection Cable
- 5 AV Cable
- 6 CD-ROM
- 7 Shoulder Strap
- 8 Lens Cap/Lens Cap String
- 9 Lens Hood/Hood Adaptor
 - (A): Silver
 - (B): Black

• For information about optional accessories, refer to the “Digital Camera Accessory System”. (P122)


Names of the Components

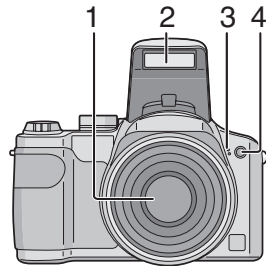

- 1 Lens (P4)
- 2 Flash (P42)
- 3 Microphone (P68, 79, 93)
- 4 Self-timer indicator (P46)
AF assist lamp (P82)

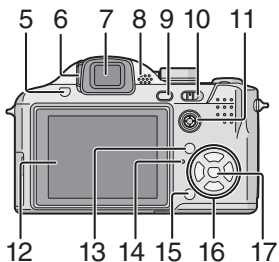


- 5 Flash open button (P42)
- 6 Diopter adjustment dial (P39)
- 7 Viewfinder (P38, 106)
- 8 Speaker (P73)
- 9 [EVF/LCD] button (P38)
- 10 Camera ON/OFF switch (P11)
- 11 Joystick (P26, 35, 36, 53, 54)
- 12 LCD monitor (P38, 106)
- 13 [DISPLAY/LCD MODE] button (P38, 106)
- 14 Status indicator (P25)
- 15 Single or burst mode button (P50)/Delete button (P36)
- 16 Cursor buttons
 - ◀/Self-timer button (P46)
 - ▼/[REV] button (P34)
 - ▶/Flash Setting button (P42)
 - ▲/Exposure compensation (P47)/Auto bracket (P48)/White balance fine adjustment (P76)/Flash output adjustment (P45)/Backlight compensation in simple mode (P30) button
- 17 [MENU/SET] button (P20)

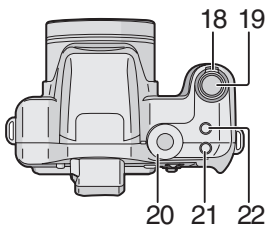


- 18 Zoom lever (P31)

- 19 Shutter button (P25, 68)
- 20 Mode dial (P5)
- 21 AF/MF button (P54)
- 22 Optical image stabilizer button (P49)

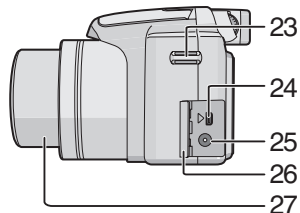

- 23 Strap eyelet (P16)
- 24 [DIGITAL/AV OUT] Socket (P98, 100, 104)
- 25 [DC IN] Socket (P98, 100)
 - Always use a genuine Panasonic AC adaptor (DMW-AC7; optional).
 - The camera cannot charge the battery even if the AC adaptor (DMW-AC7; optional) is connected.
- 26 Terminal door
- 27 Lens Barrel

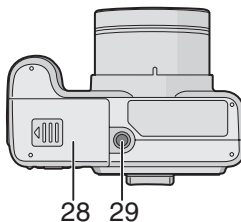


- 28 Card/Battery door (P13, 14)
- 29 Tripod receptacle
 - When you use a tripod, make sure it is stable when the camera is attached to it.

Quick Guide


This is an overview of how to record and playback pictures with the camera. For each step, be sure to refer to the pages indicated in brackets.

1 Charge the battery. (P12)

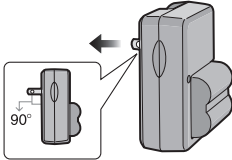


- The battery is not charged when the camera is shipped. Charge the battery before use.

2 Insert the battery and the card. (P13, 14)

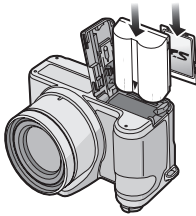


3 Turn the camera on to take pictures.

- Set the clock. (P19)

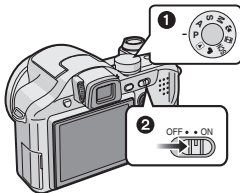

- 1 Set the mode dial to [P].
- 2 Press the shutter button to take pictures. (P25)

4 Play back the pictures.

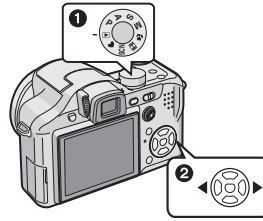


- 1 Set the mode dial to [⏮].
- 2 Select the picture you want to view. (P35)


Charging the Battery with the Charger

The battery is not charged when the camera is shipped. Charge the battery before use.

1 Insert the battery terminals and attach the battery to the charger.

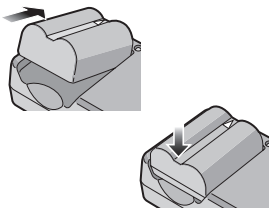


2 Connect the charger to the electrical outlet.

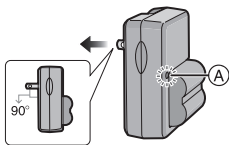

- Charging starts when the [CHARGE] indicator (A) lights green.
- Charging is complete when the [CHARGE] indicator (A) turns off (after about 120 minutes).

3 Detach the battery after charging is complete.

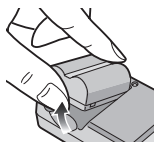

- After charging is completed, be sure to disconnect the AC cable from the electrical outlet.

- The battery becomes warm after using it and during and after charging. The camera also becomes warm during use. This is not a malfunction.
- The battery will be exhausted if left for a long period of time after being charged. Recharge the battery when it is exhausted.
- **Use the dedicated charger and battery.**
- **Charge the battery with the charger indoors.**
- **Do not disassemble or modify the charger.**

About the Battery

(charging/number of recordable pictures)

■ Battery indication

The remaining battery power appears on the screen. [It does not appear when you use the camera with the AC adaptor connected (DMW-AC7; optional).]



- The battery indication turns red and blinks. (The status indicator blinks when the LCD monitor turns off.) Recharge the battery or replace it with fully charged battery.

■ The battery life

The number of recordable pictures (By CIPA standard in program AE mode)

| | |
|-------------------------------|--|
| Number of recordable pictures | Approx. 320 pictures (Approx. 160 min) |
|-------------------------------|--|

Recording conditions by CIPA standard

- Temperature: 23 °C (73.4 °F)/
- Humidity: 50% when LCD monitor is on.*
- Using the supplied SD Memory Card (16 MB).
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on. (When the optical

image stabilizer function is set to [MODE1])

- **Recording once every 30 seconds** with full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turn the camera off every 10 recordings.
- CIPA is an abbreviation of [Camera & Imaging Products Association].

✧ The number of recordable pictures decreases when the power LCD function or high angle function (P41) are used.

The number of recordable pictures varies depending on the recording interval time. If the recording interval time becomes longer, the number of recordable pictures decreases. [e.g. When recording once every 2 minutes, the number of recordable pictures decreases to about 80.]

The number of recordable pictures when using the Viewfinder
(Recording conditions comply with CIPA standard.)

| | |
|--------------------------------------|---|
| Number of recordable pictures | Approx. 340 pictures (Approx. 170 min) |
|--------------------------------------|---|

Playback time when using the LCD monitor

| | |
|----------------------|-----------------|
| Playback time | Approx. 300 min |
|----------------------|-----------------|

The number of recordable pictures and playback time will vary depending on the operating conditions and storing condition of the battery.

■ Charging

| | |
|----------------------|-----------------|
| Charging time | Approx. 120 min |
|----------------------|-----------------|

Charging time and number of recordable pictures with the optional battery pack (CGR-S006A) are the same as above.

- The [CHARGE] indicator lights when charging starts.

■ Charging lamp

- The battery is over discharged (discharged excessively). In a while, the lamp will light up and normal charging will start.
- When the battery temperature is excessively high or low, the [CHARGE] lamp flashes and the charging time will be longer than normal.
- When the operating time of the camera becomes extremely short even after properly charging the battery, the life of the battery may have expired. Buy a new battery.


■ Charging conditions

- Charge the battery in a temperature between 10 °C to 35 °C (50 °F to 95 °F). (The battery temperature should also be the same.)
- The performance of the battery may temporarily deteriorate and the operating time may become shorter in low temperature conditions (e.g. skiing/snowboarding).

Inserting/Removing the Battery

- Check that the camera is turned off and that the lens is retracted.
- Close the flash.

1 Slide the release lever in the direction of arrow and open the card/battery door.

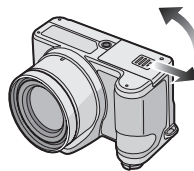


- **Always use genuine Panasonic batteries (CGR-S006A).**

2 Insert:

Insert the charged battery fully paying attention to its direction.


Remove:

Slide the lock (A) to remove the battery.

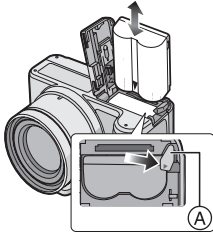

3 1 Close the card/battery door.

2 Slide the release lever in the direction of the arrow.

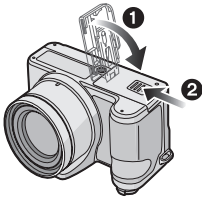


- Remove the battery after use.
- When a fully charged battery has been inserted for more than 24 hours, the clock setting is stored (in the camera) for at least 3 months even if the battery is removed. (If you insert a battery that is not sufficiently charged, the length of time that the clock setting is stored may become less.) However, the clock setting is cancelled after this length of time. In this case, set the clock again. (P19)
- **Do not remove the card or the battery while the card is being accessed. The data may be damaged. (P15)**

- Do not remove the battery with the camera turned on since the settings on the camera may not be stored properly.
- The supplied battery is designed only for the camera. Do not use it with any other equipment.

Inserting/Removing the Card

- Check that the camera is turned off and that the lens is retracted.
- Prepare an SD Memory Card (supplied) or a MultiMediaCard (optional).
- Close the flash.

1 Slide the release lever in the direction of the arrow and open the card/battery door.

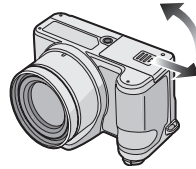


2 Insert:

Insert the card fully until it clicks and it is locked.

Remove:


Push the card until it clicks, then pull the card out upright.

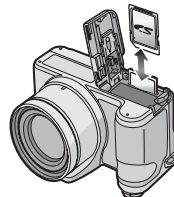

- Check the direction of the card.
- Do not touch the connection terminals on the back side of the card.

- The card may be damaged if it is not fully inserted.

- 3 **1 Close the card/battery door.**
- 2 Slide the release lever in the direction of the arrow.**

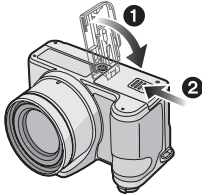

- If the card/battery door cannot be completely closed, remove the card and insert it again.




- **The card and the data may be damaged if it is inserted or removed while the camera is on.**
- **We recommend using Panasonic's SD Memory Card.**

About the Card

■ Access to the card

The card access indication (A) lights red when pictures are being recorded onto the card.

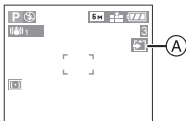

When the card access indication lights, pictures are being read or deleted or the card is being formatted. Do not:

- turn the camera off.
 - remove the battery or the card.
 - shake or impact the camera.
- The card and the data may be damaged or the camera may not operate normally.

■ About handling a card

Transfer important pictures/motion pictures from your card to your PC periodically (P98). The data on the card may be damaged or lost due to electromagnetic waves, static electricity, the camera breaking down or a defective card.

- Do not format the card on your PC or other equipment. Format it on the camera only to ensure proper operation. (P97)

■ SD Memory Card (supplied) and MultiMediaCard (optional)

- The SD Memory Card and MultiMediaCard are small, lightweight, removable external cards.
- The reading/writing speed of an SD Memory Card is fast. The SD Memory Card is equipped with a Write-Protect switch (B) that can inhibit writing and formatting a card. (When the switch is slid to the [LOCK] side, it is not possible to write or delete data on the card and format it. When the switch is unlocked, these functions become available.)

SD Memory Card



- On this unit, you can use SD Memory Cards of the following capacity (from 8 MB to 2 GB).

**8 MB, 16 MB, 32 MB, 64 MB, 128 MB,
256 MB, 512 MB, 1 GB, 2 GB
(Maximum)**

Please confirm the latest information on the following website.

<http://panasonic.co.jp/pavc/global/cs>

(This Site is English only.)

- Refer to P117 for information about the number of recordable pictures and the available recording time for each SD Memory Card.
- This unit supports SD Memory Cards formatted in FAT12 system and FAT16 system based on SD Memory Card Specifications.
- This unit does not support recording motion pictures on MultiMediaCards. We recommend using High Speed SD Memory Cards when recording motion pictures. (P68)

 


- The reading/writing speed of a MultiMediaCard is slower than an SD Memory Card. When a MultiMediaCard is used, the performance of certain features may be slightly slower than advertised.
- Keep the Memory Card out of reach of children to prevent swallowing.


Attaching the Lens Cap/Strap

■ Lens Cap (supplied)


1 Pass the string through the hole on the lens cap.



2 Pass the same string through the hole on the camera.

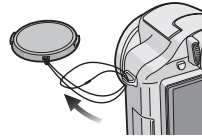


3 Attach the lens cap.

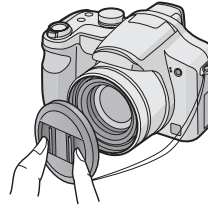


- When you turn the camera off, carry the camera or play back the pictures, attach the lens cap to protect the surface of the lens.
- Detach the lens cap before turning on the camera in the recording mode.
- Be careful not to lose the lens cap.

■ Strap (supplied)

1 Pass the strap through the hole at the strap eyelet.

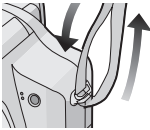

2 Pass the strap through the stopper and fasten the strap.

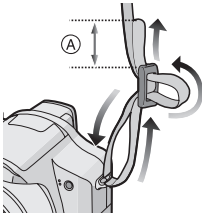

(A): Pull the strap 2 cm or more.




- Attach the strap to the other side of the camera being careful not to twist it.
- Check that the strap is firmly attached to the camera.
- Attach the strap so that you can see the "LUMIX" logo.

Attaching the Lens Hood

In bright sunlight or backlight, the lens hood will minimize lens flare and ghosting. The lens hood cuts off excess lighting and improves the picture quality.


- Check that the camera is turned off and that the lens is retracted.
- Close the flash.

1 Attach the hood adaptor (supplied).

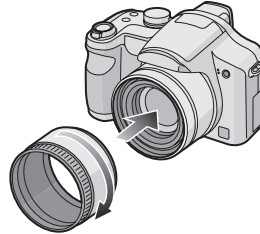


- Do not tighten the hood adaptor too much.

2 Place the camera upside down, align the mark on the lens hood with the mark (A) on the camera and then insert the lens hood.

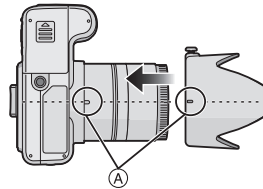


3 Tighten the screw.

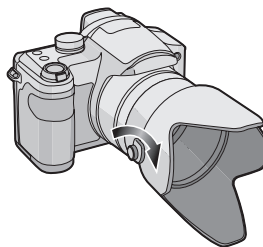

- Check if the screw is loose and then attach the lens hood.
- Do not tighten the screw too much.


■ Removing the hood adaptor

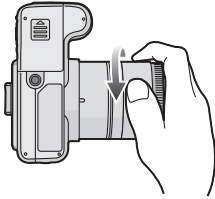


- Hold the edge of the hood adaptor to remove it.

■ Temporarily storing the lens hood


1 Loosen the screw and remove the lens hood.

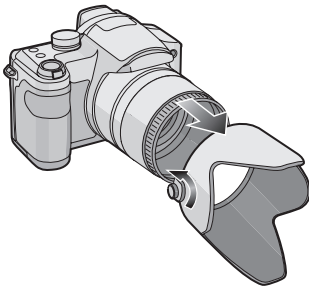

2 Reverse the lens hood.

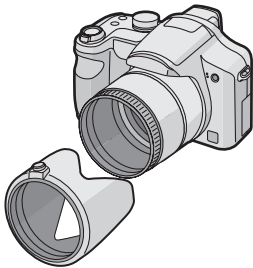


3 Attach the lens hood with the screw facing upwards and then tighten the screw again.

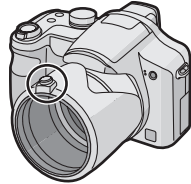

- Make sure the screw is loose and then attach the lens hood.
- Do not tighten the screw too much.

4 Attach the lens cap.

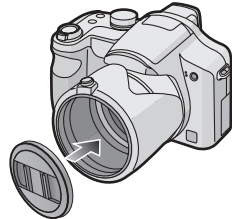

- Ensure that the lens cap is firmly attached.
- Do not take a picture while the lens hood is temporarily stored.





- When taking pictures with flash with the lens hood attached, the lower portion of the photo may turn dark (vignetting effect) and the control of the flash may be disabled because the photo flash may be obscured by the lens hood. We recommend detaching the lens hood.
- When using the AF assist lamp in the dark, detach the lens hood.
- For details on how to attach the MC protector and the ND filter, refer to P105.
- You cannot attach the conversion lenses or filters and the close-up lens when the hood adaptor is attached.

- The lens adaptor (DMW-LA2; optional) is necessary to attach a conversion lenses and filters.
- If any accessories are lost, customers in the USA should contact Panasonic's parts department on 1 800 833-9626 and customers in Canada should contact 1 800 561-5505 for further information about obtaining replacement parts.

Setting Date/Time (Clock Set)

■ Initial setting

The clock is not set so the following screen appears when you turn the camera on.

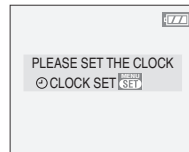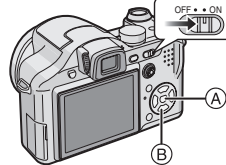


(A): [MENU/SET] button

(B): Cursor buttons

- The screen disappears after about 5 seconds. Turn the camera off and on again.

1 Press [MENU/SET].

2 Press ▲/▼/◀/▶ to select the date and time.

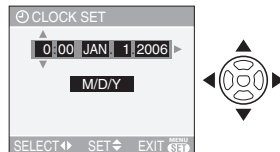


- ◀/▶: Select the desired item.
- ▲/▼: Set the display order for the date and time.

3 Press [MENU/SET] several times to close the menu.

- Turn the camera off after finishing setting the clock. Then turn it on and check that the clock setting is correct.

■ Changing the clock setting

- 1 Press [MENU/SET] to display the menu and then press ◀.
- 2 Press ▼ to select the [SETUP] menu icon [⏏] and then press ▶.
- 3 Press ▲/▼ to select [CLOCK SET] and then press ▶. Set as shown previously.

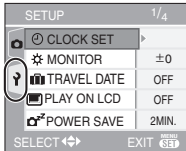


- When a fully charged battery has been inserted for more than 24 hours, the clock setting is stored (in the camera) for at least 3 months even if the battery is removed.
- You can set the year from 2000 to 2099. The 24-hour system is used.
- If the date is not set in the camera it will not be printed when you use a photo printing service, even if the store provides a date printing option for your photographs. (P92)


About the Setup Menu

- Set items as required. (Refer to P21 to 24 for each menu item.)
- Menu items differ depending on the mode selected with the mode dial (P5). The following example shows how to set [BEEP] when program AE mode [P] is selected.
- Select [RESET] to return the settings to the initial settings at the time of purchase. (P23)


1 Press [MENU/SET] and then press ◀.

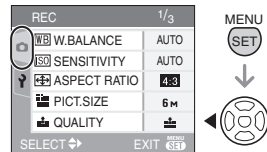

2 Press ▼ to select the [SETUP] menu icon [⏏] and then press ▶.

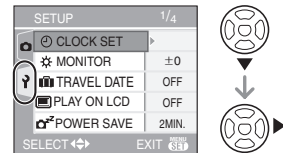


3 Press ▲/▼ to select the menu item.

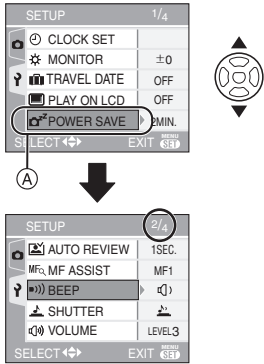

- Press ▼ at (A) to switch to the next menu screen.

4 Press ►, press ▲/▼ to select the setting and then press [MENU/SET].

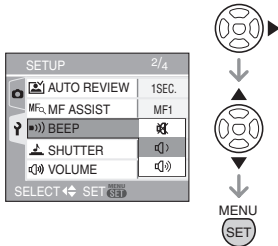


5 Press [MENU/SET] to close the menu.

- You can also press the shutter button half way to close the menu.

■ About the menu screen items

- There are 4 menu screens (1/4, 2/4, 3/4 and 4/4).
- You can switch menu screens from any menu item by rotating the zoom lever.

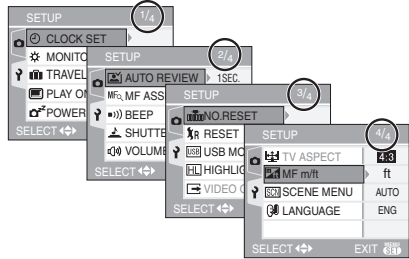

⌚ [CLOCK SET]

Press [MENU] to display the [SETUP] menu and select the item to set. (P20)
Change date and time. (P19)

☀ [MONITOR/VIEWFINDER]

Press [MENU] to display the [SETUP] menu and select the item to set. (P20)
Adjust the brightness of the LCD monitor (when pictures appear on the LCD monitor) or Viewfinder (when pictures appear on the Viewfinder) in 7 steps.

- The [MONITOR/VIEWFINDER] setting also affects simple mode [♥].

📅 [TRAVEL DATE]


Press [MENU] to display the [SETUP] menu and select the item to set. (P20)

[SET]: When taking a picture, the date on which it was taken is recorded.

[OFF]: When taking a picture, the date on which it was taken it is not recorded.

- Refer to P66 for information about setting [TRAVEL DATE].


 **[PLAY ON LCD]**

Press [] to display the [SETUP] menu and select the item to set. (P20)

[ON]: If you were using the viewfinder to record, the display automatically switches to the LCD monitor when reviewing or playing back pictures. (P39)

[OFF]: Does not automatically switch.


 **[POWER SAVE]**

Press [] to display the [SETUP] menu and select the item to set. (P20)


[1MIN.]/[2MIN.]/[5MIN.]/[10MIN.]:

Power save mode is activated (the camera is automatically turned off to save the battery life) if the camera has not been used for the time selected on the setting.

[OFF]: Power save mode is not activated.

- Press the shutter button halfway or turn the camera off and on to cancel power save mode.
- In simple mode [, power save mode is fixed to [2MIN.].
- When using the AC adaptor (DMW-AC7; optional), connecting to a PC or a printer, recording or playing back motion pictures and during a slide show, power save mode is not activated. (However, the setting for power save mode is fixed to [10MIN.] while pausing a slide show or playing back a manual slide show.)

 **[AUTO REVIEW]**

Press [] to display the [SETUP] menu and select the item to set. (P20)


 
[1SEC.]: The recorded picture automatically appears on the screen for about 1 second.


[3SEC.]: The recorded picture automatically appears on the screen for about 3 seconds.


[ZOOM]: The recorded picture automatically appears on the screen for about 1 second. It is

then enlarged 4 times and appears for about 1 second. This mode is useful for confirming focus. Pictures recorded using auto bracket or burst mode and pictures with audio are not enlarged even if [ZOOM] is selected.

[OFF]: The recorded picture does not automatically appear.

- The auto review function is not activated in motion picture mode [- When pictures are recorded in auto bracket (P48) or burst mode (P50), the auto review function is activated regardless of the setting on the auto review function. (The picture is not enlarged.)
- The auto review function is activated while pictures with audio (P79) are being recorded regardless of its setting. (The picture is not enlarged.)
- When the quality is set to [TIFF], the auto review function works until the end of recording onto the card. (The picture is not enlarged.)
- The auto review setting is disabled when using auto bracket or burst mode, in motion picture mode [, when [AUDIO REC.] is set to [ON] or when the quality is set to [TIFF].

 **[MF ASSIST]**
(Recording mode only)

Press [] to display the [SETUP] menu and select the item to set. (P20)


In manual focus, the assistance screen appears on the center of the screen to facilitate focusing on the subject. (P56)

[MF1]: The center of the screen is enlarged. You can adjust the focus while determining the composition of the whole of the screen.

[MF2]: The whole of the screen is enlarged. This is convenient for adjusting the focus in Wide angle shots.

 
[OFF]: The screen is not enlarged.


•)) [BEEP]

Press [] to display the [SETUP] menu and select the item to set. (P20)


[]: No operation sound

[]: Soft operation sound


[]: Loud operation sound


- The [BEEP] setting also affects simple mode [].


 [SHUTTER]

Press [] to display the [SETUP] menu and select the item to set. (P20)


Set to select the volume of shutter sound.

[]: No shutter sound

[]: Soft shutter sound

[]: Loud shutter sound


 [VOLUME]

Press [] to display the [SETUP] menu and select the item to set. (P20)

The volume of speakers can be adjusted in 7 steps from level 6 to 0.


- When you connect the camera to a TV, the volume of the TV speakers does not change.

 [NO.RESET]


Press [] to display the [SETUP] menu and select the item to set. (P20)

Set this when you want the file number of the next recording to start from 0001. (The folder number is updated and the file number starts from 0001.)

- A folder number between 100 and 999 can be assigned.
When the folder number reaches 999, the number cannot be reset. We recommend formatting the card after saving the data on a PC or elsewhere.
- To reset the folder number to 100, format (P97) the card first and then use this function to reset the file number.
A reset screen for the folder number will then appear. Select [YES] to reset the folder number.

- Refer to P99 for detailed information about the file number and the folder number.
- The [NO.RESET] setting also affects simple mode [].


 [RESET]

Press [] to display the [SETUP] menu and select the item to set. (P20)


The [REC] or [SETUP] menu settings are reset to the initial settings.

- The birthday setting for [BABY1]/[BABY2] (P64) in scene mode and the number of days that have passed since the departure date for [TRAVEL DATE] (P66) are also reset when the [SETUP] menu settings are reset. Also, [FAVORITE] (P89) is fixed to [OFF] and [ROTATE DISP.] (P89) is fixed to [ON].
- The folder number and the clock setting are not changed.

 [USB MODE]

Press [] to display the [SETUP] menu and select the item to set. (P20)

Select the USB communication system after or before connecting the camera to your PC or your printer with the USB connection cable (supplied).

 SELECT ON CONNECTION]:

Select either [PC] or [PictBridge (PTP)] if you connected the camera to a PC or a printer supporting PictBridge.

 PC]:


Set after or before connecting to a PC.

 PictBridge (PTP):

Set after or before connecting to a printer supporting PictBridge.

- When [PC] is selected, the camera is connected via the USB Mass Storage communication system.
- When [PictBridge (PTP)] is selected, the camera is connected via the PTP (Picture Transfer Protocol) communication system.

[HL] [HIGHLIGHT]


Press [] to display the [SETUP] menu and select the item to set. (P20)

[ON]: When the auto review or review function is activated, a white saturated area appears blinking in black and white. (P39)

[OFF]: No highlight display

[➔] [VIDEO OUT]

(Playback mode only) (P104)


Press [] to display the [SETUP] menu and select the item to set. (P20)

[NTSC]: Video output is set to NTSC system.

[PAL]: Video output is set to PAL system.

[⊞] [TV ASPECT]

(Playback mode only)

Press [] to display the [SETUP] menu and select the item to set. (P20)

[16:9]:


Select this if connecting the camera to a 16:9 TV.

[4:3]:

Select this if connecting the camera to a 4:3 screen TV.

- This is suitable for displaying pictures recorded with a [**16:9**] aspect on the full screen of a 16:9 TV. Pictures recorded with a [**4:3**] or [**3:2**] aspect are displayed with black bands on the left and right of the screen.
- When [**4:3**] is selected, pictures recorded with a [**16:9**] or [**3:2**] aspect are displayed with black bands on the top and bottom of the screen.
- When you select [**16:9**] and use the AV cable (supplied) for output (P104), pictures are displayed vertically on the LCD monitor.


[m] [MF m/ft]

Press [] to display the [SETUP] menu and select the item to set. (P20)

[m]: In manual focus, the distance to the subject is displayed in meters.

[ft]: In manual focus, the distance to the subject is displayed in feet.


[SCN] [SCENE MENU]

Press [] to display the [SETUP] menu and select the item to set. (P20)

[AUTO]: [SCENE MODE] menu appears automatically when setting the mode dial to scene mode. Select the desired scene mode. (P58)

[OFF]: [SCENE MODE] menu does not appear when setting the mode dial to scene mode and the camera is operated in scene mode currently selected. If you change the scene mode, press [MENU/SET] to display the [SCENE MODE] menu and then select the desired scene mode.

[Q] [LANGUAGE]

Press [] to display the [SETUP] menu and select the item to set. (P20)

Set the language on the menu screen from the following languages. Set to the desired language with ▲/▼ and store it with [MENU/SET].

[ENGLISH]: English

[DEUTSCH]: German

 

[FRANÇAIS]: French

[ESPAÑOL]: Spanish

[ITALIANO]: Italian

[中文]: Chinese (Traditional)

[日本語]: Japanese

- If you set a different language by mistake, select [] from the menu icons to set the desired language.
- The [LANGUAGE] setting also affects simple mode [].


Taking Pictures



The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.


- Remove the lens cap.

- 1 Turn the camera on.
- 2 Select program AE mode [P].

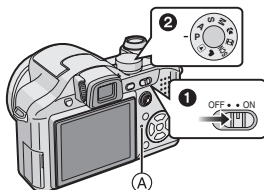

- The status indicator (A) lights for approximately 1 second if you turn the camera on when using the LCD monitor.
- The status indicator continues to light if you turn the camera on when using the Viewfinder. The status indicator blinks when the remaining battery power is low.

- 2 Aim the AF area (1) to the point you want to focus on and then press the shutter button halfway.

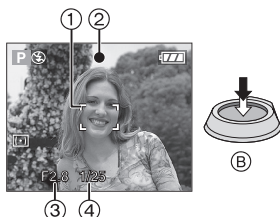

- (B): Press the shutter button halfway to focus.
- The focus indication (2) lights and then the aperture value (3) and the shutter speed (4) are displayed.
- If 9-area-focusing or 3-area-focusing (High speed) is used in AF mode, the

- AF area does not appear until the subject is brought into focus. (P80)
- The AF area displayed is bigger than usual when using the digital zoom or when taking pictures in dark places. (P80)
- Refer to P26 for information about Program shift.

| | When the subject is not focused | When the subject is focused |
|------------------|----------------------------------|-----------------------------|
| Focus indication | Blinks (green) | On (green) |
| AF area | Turns white to red or no AF area | Turns white to green |
| Sound | Beeps 4 times | Beeps 2 times |

- 3 Take a picture.



- (C): Press the shutter button fully to take the picture.



- We recommend checking that the clock is set properly before taking pictures. (P19)
- When you press the shutter button, the screen may become bright or dark for a moment. This function allows easy adjustment of focus and the recorded picture will not be affected.
- When a time is set for power save (P22), the camera automatically turns off if you do not operate it within the set time. To operate the camera again, press the shutter button halfway or turn the camera off and on.
- To avoid picture noise, we recommend decreasing the ISO sensitivity, setting


[NOISE REDUCTION] in [PICT.ADJ.] to [HIGH] or setting every item except [NOISE REDUCTION] to [LOW]. (P83). (ISO sensitivity is set to [AUTO] when the camera is shipped. Therefore, when taking pictures indoors etc. the ISO sensitivity increases.)

■ Program shift

In program AE mode, you can change the preset aperture value and shutter speed without changing the exposure. This is called program shift.

You can make the background more blurred by decreasing the aperture value or record a moving subject more dynamically by slowing the shutter speed when taking a picture in program AE mode.


- Press the shutter button halfway and then use the joystick to activate program shift while the aperture value and the shutter speed are displayed on the screen (about 10 seconds).

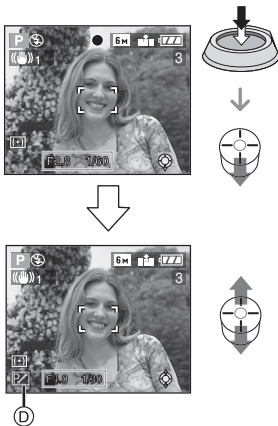

- The program shift indication **D** appears on the screen when program shift is activated.
- Program shift is cancelled if the camera is turned off or the joystick is moved up and

down until the programme shift indication disappears.

■ Example of program shift

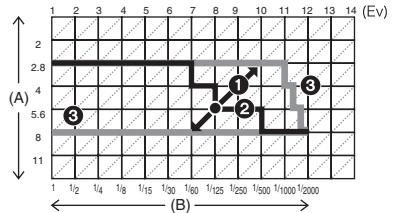

(A): Aperture value

(B): Shutter speed

① Program shift amount

② Program shift line chart

③ Program shift limit




- If the exposure is not adequate when the shutter button is pressed halfway, the aperture value and shutter speed turns red.
- Program shift is canceled and the camera returns to normal program AE mode if more than 10 seconds pass after program shift is activated. However, the program shift setting is memorized.
- Depending on the brightness of the subject, program shift may not be activated.

■ Tips for taking good pictures

- Hold the camera gently with both hands, keep your arms still at your side and stand with your feet slightly apart.
- Make sure the camera does not shake when you press the shutter button.
- Do not cover the microphone or the AF assist lamp with your fingers or other objects.
- Do not touch the front of the lens.
- If the LCD monitor screen is difficult to see because of light from the sun etc. shining on it, we recommend using your hand or

another object to block the light when using the camera.

When recording with LCD Monitor

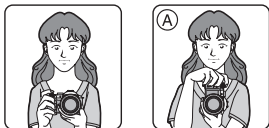

When recording with Viewfinder



(A): When holding the camera vertically

■ Direction detection function

Pictures recorded with the camera held vertically are played back vertically (rotated). (Only when [ROTATE DISP.] (P89) is set to [ON])

- Pictures may not be displayed vertically if they were taken with the camera aimed up or down.
- Pictures cannot be displayed vertically when recording motion pictures or creating flip animations.

■ When you want to take a subject outside the AF area (AF/AE Lock)

When recording a picture of people with a composition like the following picture, you will not be able to focus the camera on the subject because the people are outside the AF area.



In this case,


- 1 Aim the AF area at the subject.
- 2 Press the shutter button halfway to fix the focus and the exposure.

- The focus indication lights when the subject is focused.

3 Press and hold the shutter button halfway while moving the camera as you compose the picture.

4 Press the shutter button fully.


- You can repeatedly retry AF/AE lock before pressing the shutter button fully.

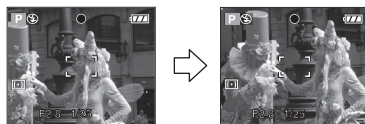


■ Focusing

- The focus range is 30 cm (0.98 feet) to ∞ (Wide), 2 m (6.56 feet) to ∞ (Tele). Use macro mode when recording close-up pictures. (P51)
 - If the distance between the camera and the subject is beyond the focus range of the camera, the picture may not be properly focused even if the focus indication lights.
 - In the following cases, the camera will not focus on subjects properly.
 - When there are both near and distant subjects in a scene.
 - When there is dirt or dust on glass between the lens and the subject.
 - When there are illuminated or glittering objects around the subject.
 - When taking a picture in dark places.
 - When the subject is moving fast.
 - When the scene has low contrast.
 - When jitter occurs.
 - When recording a very bright subject.
- We recommend taking pictures using prefocus (P58) and AF/AE lock. In dark places, the AF assist lamp (P82) may turn on to focus on the subject.
- Even when the focus indication appears and the subject is focused, it is canceled if you release the shutter button. Press the shutter button halfway again.

■ Preventing jitter (camera shake)

- Be careful of jittering when pressing the shutter button.
- If jitter could occur because of slow shutter speed, the jitter alert  appears.

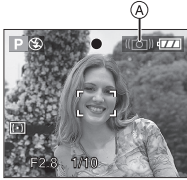

- When the jitter alert appears, we recommend using a tripod. If you cannot use a tripod, be careful how you hold the camera (P26). The use of the self-timer prevents jittering caused by pressing the shutter button when you are using a tripod (P46).
- Shutter speed will be slower particularly in the following cases. Keep the camera still from the moment the shutter button is pressed until the picture appears on the screen. We recommend using a tripod.
 - Slow sync./Red-eye reduction (P42)
 - [NIGHT PORTRAIT] (P60)
 - [NIGHT SCENERY] (P61)
 - [PARTY] (P62)
 - [CANDLE LIGHT] (P62)
 - [FIREWORKS] (P63)
 - [STARRY SKY] (P63)
 - When you set to a slow shutter speed (P53, 54)

■ Exposure

- If you press the shutter button halfway when the exposure is not adequate, the aperture value and the shutter speed turn red. (They do not turn red when the flash is activated.)
- The brightness of the screen may differ from the brightness of the recorded pictures especially when recording in low light conditions.
- When most of the subjects on the screen are bright (e.g. a blue sky on a clear day, a

snowy field etc.), the recorded pictures may become dark. In this case, compensate the exposure value on the camera. (P47)

Taking Pictures in Simple Mode




This mode allows beginners to take pictures easily. Only the basic functions appear in the menu to make operations simple.

Basic menu settings

1 Press [MENU/SET].

2 Press ▲/▼ to select the desired menu item and then press ►.

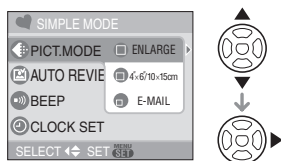

3 Press ▲/▼ to select the desired setting and then press [MENU/SET].

4 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

Settings in Simple mode

[PICT.MODE]

| | |
|---------------|--|
| ENLARGE | Suitable for enlarging the pictures to be printed to 8"×10" size, letter size etc. |
| 4"×6"/10×15cm | Suitable for regular size printing. |
| E-MAIL | Suitable for attaching pictures to e-mails or adding pictures to websites. |

[AUTO REVIEW]

| | |
|-----|--|
| OFF | The recorded picture does not automatically appear. |
| ON | The recorded picture automatically appears on the screen for about 1 second. |

[BEEP]

| | |
|------|----------------------|
| OFF | No operation sound |
| LOW | Soft operation sound |
| HIGH | Loud operation sound |

[CLOCK SET]

Change date and time. (P19)

- If [4"×6"/10×15cm] or [E-MAIL] are set in [PICT.MODE], the extended optical zoom is activated and the zoom ratio is extended to a maximum of 16.5×. (P31)
- The settings for [BEEP] and [CLOCK SET] in simple mode are also applied to other recording modes.
- The settings for [MONITOR/VIEWFINDER] (P21), [NO.RESET] (P23) and [LANGUAGE] (P24) also effect simple mode.


Other Settings in Simple mode

In simple mode, other settings are fixed as follows. For more information about each setting, refer to the page indicated.

- [POWER SAVE] (P22): [2MIN.]
- Self-timer (P46): 10 seconds
- Optical Image Stabilizer (P49): [MODE1]
- Burst speed (P50): Low speed (2 frames/second)
- [W.BALANCE] (P75): [AUTO]
- [SENSITIVITY] (P77): [AUTO]

- [ASPECT RATIO]/[PICT.SIZE]/[QUALITY] (P77, 78):
 - [] [ENLARGE]:
 - 4:3 / [6M] (6M)/Fine
 - [] 4"×6"/10×15cm]:
 - 3:2 / [2.5M] (2.5M EZ)/Standard
 - [] E-MAIL]:
 - 4:3 / [0.3M] (0.3M EZ)/Standard
- [AF MODE] (P80):
 - [] (1-area-focusing)
- [AF ASSIST LAMP] (P82):
 - [ON]
- [METERING MODE] (P80):
 - [] (Multiple)
- You cannot use the following functions in simple mode.
 - High angle mode
 - White balance fine adjustment
 - Exposure compensation
 - Flash output adjustment
 - Auto bracket
 - [AUDIO REC.]
 - [D.ZOOM]
 - [COL.EFFECT]
 - [PICT.ADJ.]
 - [CONT.AF]
 - [HIGHLIGHT]
 - [PLAY ON LCD]
 - Out-of-frame display
 - Recording guide line
- You cannot set the following items in simple mode.
 - [TRAVEL DATE]
 - [CONVERSION]

■ Focus range in simple mode

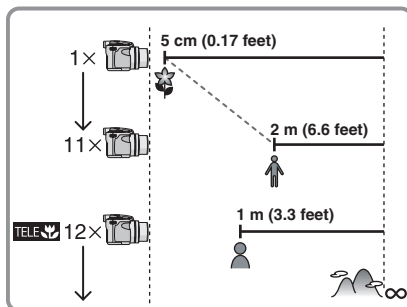

- The zoom magnification values will change when using the extended optical zoom.
- Refer to P51 for the tele-macro.

■ The Backlight Compensation

Backlight refers to when light comes from the back of a subject.

In this case, the subject, such as a person, will become dark.

If you press , [] (compensating backlight ON indication) (A) appears and the backlight compensation function is activated. This function compensates the backlight by brightening the whole of the picture.



- If you press while [] is displayed, [] disappears and the backlight compensation function is canceled.
- We recommend using the flash when you use the backlight compensation function. (When using the flash, it is fixed to Forced ON [].)
- The flash setting is fixed to AUTO/Red-eye reduction [] when the backlight compensation function is set to [OFF].

Taking Pictures with the Zoom

Using the Optical Zoom



You can make people and subjects appear closer with the 12× optical zoom and landscapes can be recorded in wide angle.

■ To make subjects appear closer use (Tele)

Rotate the zoom lever towards Tele.

- When the setting for picture size is [6M] (6M).



■ To make subjects appear further away use (Wide)

Rotate the zoom lever towards Wide.

- When the setting for picture size is [6M] (6M).



- The optical zoom is set to Wide (1×) when the camera is turned on.
- Depending on the zoom magnification, the picture may have some distortion. Distortion will be more visible when using


a wider area of the zoom lens as you move closer to the subject.

- Depending on the zoom magnification, the picture may have some colored fringes around the subject. This is called chromatic aberration and may be more visible when recording distant subjects.
- If you use the zoom function after focusing on the subject, focus on the subject again.
- The indicated zoom magnification is an approximation.
- The lens barrel (P10) extends or retracts according to the zoom position. Take care not to interrupt the motion of the lens barrel while the zoom lever is rotated.
- In motion picture mode [H], the zoom magnification is fixed to the value set at the start of recording.
- **When you rotate the zoom lever, you may hear some sound from the camera or the camera may be shaken. This is not a malfunction.**

Using the Extended Optical Zoom (EZ)



This camera has a 12× optical zoom. However, if the picture size is not set to the highest setting for each aspect ratio [4:3 / 3:2 / 16:9], a maximum of 16.5× optical zoom can be achieved with no picture quality deterioration.

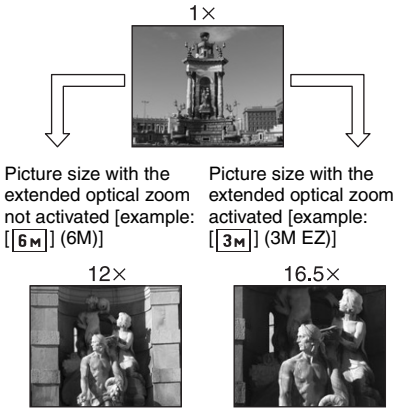

Picture size with the extended optical zoom not activated [example: **[6M]** (6M)] Picture size with the extended optical zoom activated [example: **[3M]** (3M EZ)]

■ **Picture size and maximum zoom magnification**

(○: Available, —: Not available)

| Aspect ratio | Picture size | Maximum zoom magnification | Extended optical zoom |
|--------------|-------------------------|----------------------------|-----------------------|
| 4:3 | [6M] (6M) | 12× | — |
| 3:2 | [5M] (5M) | | |
| 16:9 | [4.5M] (4.5M) | | |
| 4:3 | [4M] (4M EZ) | 14.7× | ○ |
| | [3M] (3M EZ) | 16.5× | |
| | [2M] (2M EZ) | | |
| | [1M] (1M EZ) | | |
| | [0.3M] (0.3M EZ) | | |
| 3:2 | [2.5M] (2.5M EZ) | 16.5× | ○ |
| 16:9 | [2M] (2M EZ) | | |

■ **Extended optical zoom mechanism**

When you set the picture size to **[3M]** (3M EZ) (3 million pixels), the 6M (6 million pixels) CCD area is cropped to the center

3M (3 million pixels) area, allowing a picture with a higher zoom effect.



- Refer to P77 for aspect ratio settings, P78 for picture size and P29 for simple mode [**♥**].
- “EZ” is an abbreviation of [Extended optical Zoom].
- You can further enhance the zoom magnification with the extended optical zoom without worrying about further picture distortion.
- If you set a picture size that activates the extended optical zoom, the extended optical zoom icon [**Z**] is displayed on the screen when you use the zoom function.
- The zoom movement becomes quicker near the [W] (1×) when using the extended optical zoom.
- The indicated zoom magnification is an approximation.
- The on-screen zoom indication may not change consecutively if you rotate the zoom lever near the Tele position when the extended optical zoom is used. This is not a malfunction.
- In motion picture mode [**⏏**] and [HIGH SENS.] in scene mode, the extended optical zoom does not work.

Using the Digital Zoom
Further extending the zoom



A maximum of 48× zoom can be achieved with the 12× optical zoom and the 4× digital zoom when [D.ZOOM] is set to [ON] in the [REC] menu. However, if a picture size that can use extended optical zoom is selected, a maximum of 66× zoom can be achieved with the 16.5× extended optical zoom and the 4× digital zoom.


■ Menu operation

1 Press [MENU/SET].

- When a scene mode is selected, press \blacktriangleleft in the [SCENE MODE] menu (P58), press \blacktriangledown to select the [REC] menu icon $\left[\text{REC} \right]$ and then press \blacktriangleright .

2 Press $\blacktriangle/\blacktriangledown$ to select [D.ZOOM] and then press \blacktriangleright .

3 Press \blacktriangledown to select [ON] and then press [MENU/SET].

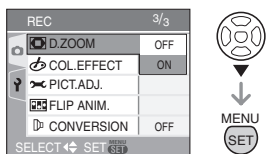

4 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

■ Entering the digital zoom range

The on-screen zoom indication may momentarily stop moving when you rotate the zoom lever to the extreme Tele position. You can enter the digital zoom range by continuously rotating the zoom lever to Tele or releasing the zoom lever once and then rotating it to Tele again.

- [OFF]:
 - [ON]:
- ① Optical zoom
 ② Digital zoom
 ③ Extended optical zoom



- When using the digital zoom, the AF area on the center of the screen is displayed and it is bigger than usual. (P81)
- In digital zoom, the larger the picture the lower the picture quality.
- In the digital zoom range, the stabilizer function may not be effective.
- When using the digital zoom, we recommend using a tripod and the self-timer (P46) for taking pictures.
- The indicated zoom magnification is an approximation.
- The digital zoom does not work in simple mode $\left[\heartsuit \right]$ or [HIGH SENS.] in scene mode.
- The digital zoom is temporarily set to [OFF] in the following cases.
 - When [CONVERSION] on the [REC] menu is set to $\left[\text{E.Z} \right]$ (P85)

Checking the Recorded Picture (Review)



You can check the recorded pictures while still in [REC] mode.

1 Press ▼ [REV].




- The last recorded picture appears for about 10 seconds.
- Review is canceled when the shutter button is pressed halfway or the ▼ [REV] is pressed again.
- You can check other pictures by pressing ◀/▶.
- When the recorded pictures are too bright or too dim, compensate the exposure. (P47)

2 Rotate the zoom lever towards [Q] [T] to enlarge the picture.

- Rotate the zoom lever to [Q] [T] for a 4× magnification and then rotate it even more for a 8× magnification. When you rotate the zoom lever towards [] [W] after enlarging the picture, the magnification becomes lower.

3 Press ▲/▼/◀/▶ to move the position.

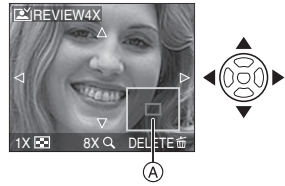

- When you change the magnification or the position to be displayed, the zoom position indication (A) appears for about 1 second so that you can check the enlarged area.

■ Deleting the recorded picture during Review (Quick deletion)

- 1 Press [].
- 2 Press ▲ to select [YES].
- 3 Press [MENU/SET].




- Once deleted, pictures cannot be recovered. Double-check pictures before deleting them.
- Multiple pictures or all the pictures can be deleted. For information about how to delete pictures, refer to P36.

Playing Back Pictures




Press ◀/▶ to select the picture.

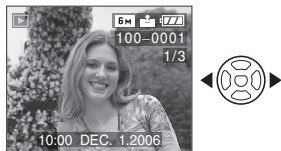

◀: Play back the previous picture

▶: Play back the next picture

 - You can also use the joystick for operation.
- The first recorded picture will be displayed after the last recorded picture.
- When [ROTATE DISP.] (P89) is set to [ON], pictures recorded by holding the camera vertically are played back vertically.



■ Fast forwarding/Fast rewinding

Press and hold ◀/▶ during playback



◀: Fast rewind

▶: Fast forward

- You can also use the joystick for operation.
- The file number (A) and the picture number (B) only change one by one. Release ◀/▶ when the number of the

desired picture appears to play back the picture.

- If you press and hold ◀/▶, the number of files forwarded/rewound at one time increases. The actual number of files forwarded/rewound at one time depends on the number of files recorded.
- In review playback in recording mode and in multi playback (P70), the pictures can only be forwarded or rewound one by one.



- This camera is based on the DCF standard (Design rule for Camera File system) which was established by the Japan Electronics and Information Technology Industries Association (JEITA).
- The file format that can be played back on the camera is JPEG. (In some cases, even JPEG pictures cannot be played back.)
- The LCD monitor may not be able to display the details of the recorded pictures. You can use the playback zoom (P72) to check the details of the pictures.
- If you play back pictures that have been recorded with other equipment, the picture quality may deteriorate. (The pictures are displayed as [THUMBNAIL IS DISPLAYED] on the screen.)
- If you change a folder name or file name on your PC, the pictures may not play back on the camera.
- If you play back a non-standard file, the folder/file number is indicated by [—] and the screen may turn black.
- Depending on the subject, an interference fringe may appear on the screen. This is called moire. This is not a malfunction.

Deleting Pictures



■ To delete a single picture

1 Select the picture with ◀/▶.



- ◀: Play back the previous picture
- ▶: Play back the next picture
- You can also use the joystick for operation.

2 Press [MENU].

3 Press ▲ to select [YES] and then press [MENU/SET].




- While the picture is being deleted, [MENU] appears on the screen.

■ To delete [MULTI DELETE]/
[ALL DELETE]


1 Press [MENU] twice.

2 Press ▲/▼ to select [MULTI DELETE] or [ALL DELETE] and then press [MENU/SET].

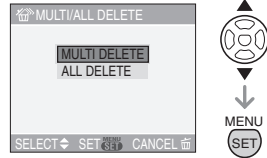

- If you select [MULTI DELETE], perform steps 3 onwards.
- If you select [ALL DELETE], perform steps 5 onwards.
- When [FAVORITE] (P89) is set to [ON], [ALL DELETE EXCEPT ★] appears. If you select [ALL DELETE EXCEPT ★], perform steps 5 onwards. (However, if none of the pictures have [★] displayed, you cannot select [ALL DELETE EXCEPT ★] even if [FAVORITE] is set to [ON].)

3 Press ◀/▶ to select the picture and then press ▼ to set. (Only when selecting [MULTI DELETE])

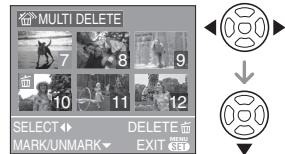

- Repeat the above procedure.
- [MENU] appears on the selected pictures. If ▼ is pressed again, the setting is canceled.
- The icon [] blinks red if the selected picture is protected and cannot be deleted. Cancel the protect setting and then delete the picture. (P92)

4 Press [MENU].

5 Press ▲ to select [YES] and then press [MENU/SET] to set.

(Screen when selecting [MULTI DELETE])




- [DELETE ALL PICTURES?] is displayed when using [ALL DELETE] and [DELETE ALL EXCEPT ★?] is displayed when using [ALL DELETE EXCEPT ★].
- If you press [MENU/SET] while deleting pictures using [ALL DELETE] or [ALL DELETE EXCEPT ★], the deleting will stop halfway.



- **Once deleted, pictures cannot be recovered. Double-check pictures before deleting them.**
- Do not turn off the camera while deleting.
- When deleting pictures, use a battery with sufficient battery power (P12) or the AC adaptor (DMW-AC7; optional).
- It is possible to delete up to 50 pictures at one time using [MULTI DELETE].
- The greater the number of pictures the longer it takes to delete them.
- If there are pictures that are protected [🔒] (P92), do not conform to the DCF standard (P35) or are in a card with the Write-Protect switch slid to the [LOCK] side (P15), they are not deleted even if [ALL DELETE] or [ALL DELETE EXCEPT ★] is selected.

About the LCD Monitor/Viewfinder

Changing the information displayed

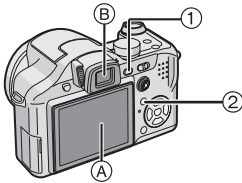

① Switching the LCD monitor/Viewfinder

Press the [EVF/LCD] button to switch the monitor screen.

- Ⓐ LCD monitor (LCD)
- Ⓑ Viewfinder (EVF)


- When the LCD monitor turns on, the Viewfinder turns off (and vice versa).

② Selecting the screen to be used

Press the [DISPLAY] button to change the display.


- When the menu screen appears, the [DISPLAY] button is not activated. In multi playback (P70) or playback zoom (P72), while playing back motion pictures (P68) and during a slide show (P88), you can only select “Normal display” or “No display”.

In simple mode [♥]

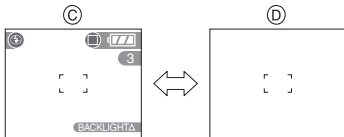

- Ⓒ Normal display
- Ⓓ No display

In recording mode

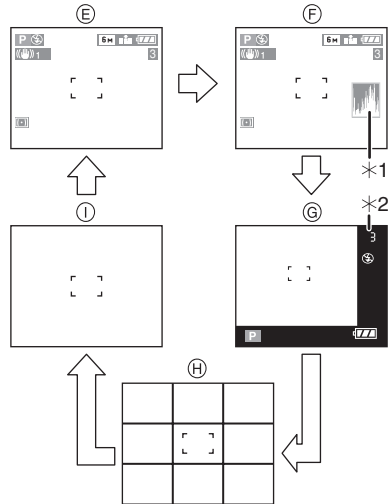


- Ⓔ Normal display
- Ⓕ Display with histogram
- Ⓖ Out-of-frame display
- Ⓗ No display (Recording guide line)

- Ⓓ No display
- *1 Histogram

- *2 When the number of pictures remaining is more than 1000 or the time remaining in motion picture mode is more than 1000 seconds, [9999] is displayed.

In playback mode

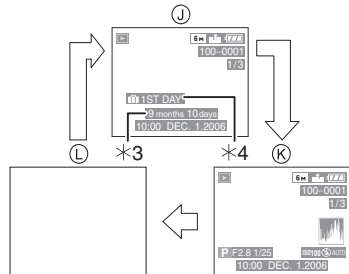

- Ⓙ Normal display

- Ⓚ Display with recording information and histogram
- Ⓛ No display
- *3 Displayed if [BIRTHDAY SET.] and [WITH AGE] were set in [BABY1]/[BABY2] (P64) in scene mode before taking pictures.
- *4 The number of days that have passed since the travel date are displayed if [TRAVEL DATE] (P66) is set.



- In [NIGHT PORTRAIT] (P60), [NIGHT SCENERY] (P61), [FIREWORKS] (P63) and [STARRY SKY] (P63) in scene mode, the lines are grey.

■ Out-of-frame display



Recording information is displayed on the bottom and left edges of the screen. You can therefore concentrate on the subject when taking pictures without being obstructed by information displayed on the screen.

■ Diopter adjustment

Adjust the diopter to suit your vision so that you can see the Viewfinder clearly.

- Close the LCD monitor and press the [EVF/LCD] button to display the viewfinder.

Look at the display on the Viewfinder and rotate the diopter adjustment dial to where the screen is clearest.

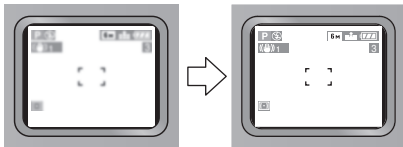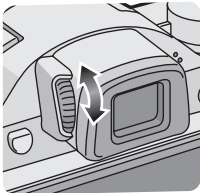

■ Monitor priority

When [PLAY ON LCD] is set to [ON] on the [SETUP] menu (P22), the LCD monitor is turned on in the following cases.

You can save the time it would take to switch the display to the LCD monitor even when using the Viewfinder to record.

- When switching from recording mode to playback mode.
- When reviewing pictures. (P34)
- When turning the camera on in playback mode.

■ Recording guide line

When you align the subject on the horizontal and vertical guide lines or the cross point of these lines, you can take pictures with well-designed composition by viewing the size, the slope and the balance of the subject.




■ Highlight display

When setting [HIGHLIGHT] to [ON] on the [SETUP] menu (P24) while the auto review or review function is activated, any white saturated area (extremely bright or glistening part) on the picture appears blinking in black and white.

- If you compensate the exposure to minus, referring to the histogram and then take a picture again, it may result in a better quality picture.

No highlight display

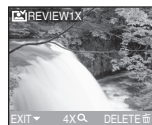


With highlight display



■ Histogram

- A histogram is a graph that displays brightness along the horizontal axis (black to white) and the number of pixels at each brightness level on the vertical axis.
- It allows you to easily check a picture's exposure.
- It is very useful if manual adjustments of the lens aperture and shutter speed are available, especially in those situations where automatic exposure may be difficult due to uneven lighting. Using the histogram feature allows you to get the maximum performance from your camera.
 - (A) When the values are concentrated on the left, the picture is under exposed.
 - (B) When the values are distributed evenly, the exposure is proper and the brightness is well-balanced.
 - (C) When the values are concentrated on the right, the picture is over exposed.

Example of histogram

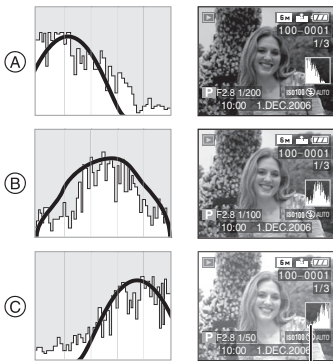

- (A) Under Exposed
 (B) Properly Exposed
 (C) Over Exposed
 *Histogram




- **When the recorded picture and the histogram do not match each other under the following conditions, the histogram is displayed in orange.**
 - When the flash is activated
 - When the flash is closed
 - ① When the brightness of the screen is not correctly displayed in dark places
 - ② When the exposure is not adequately adjusted
- The histogram is an approximation in recording mode.
- The histogram of a picture may not match in recording mode and playback mode.
- The histogram displayed in this camera does not match histograms displayed by picture editing software used in PCs etc.
- Check for any white saturated areas with the highlight display when the auto review or review function is activated. (P39)
- The histogram does not appear in simple mode [♥] or motion picture mode [H] and during multi playback and playback zoom.


Brightening the LCD Monitor (Power LCD/High angle mode)




1 Press [LCD MODE] (A) for one second.

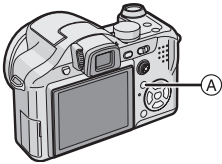


2 Press ▲/▼ to select a mode.

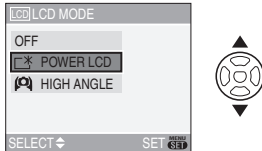

| | |
|---------------------------|--|
| <p>[*]: POWER LCD</p> | <p>The LCD monitor becomes brighter and easier to see in recording mode even when taking pictures outdoors.</p> |
| <p>[]: HIGH ANGLE</p> | <p>The LCD monitor is easier to see when taking pictures with the camera held high above your head. This is useful when you cannot get close to the subject because there is a person in the way. (However it becomes more difficult to see when looked at straight on.)</p>  |
| <p>[OFF]</p> | <p>The LCD monitor returns to the normal brightness.</p> |

3 Press [MENU/SET].

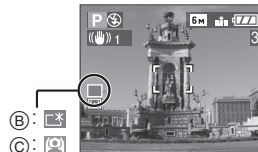

Ⓑ: POWER LCD

Ⓒ: HIGH ANGLE

- The [POWER LCD] or [HIGH ANGLE] icon appears.


■ Canceling High angle mode or Power LCD

- If you press and hold [LCD MODE] again for 1 second the screen shown in step 2 is displayed. Select [OFF] to cancel Power LCD mode or High angle mode.



- The brightness of the pictures displayed on the LCD monitor is adjusted when Power LCD mode or High angle mode is activated. Therefore, some subjects may look different on the LCD monitor. However, this does not affect the recorded pictures.
- The LCD monitor automatically returns to normal brightness after 30 seconds when recording in Power LCD mode. Press any button to make the LCD monitor bright again.
- You may not notice the High angle mode effect if the LCD monitor is difficult to see because of light from the sun etc. shining on it. In this case, we recommend using your hand or another object to block the light when using the camera.
- High angle mode is not activated in the following cases.
 - In simple mode [♥]
 - In playback mode
 - While the menu screen is displayed
 - While the review screen is displayed

Taking Pictures using the Built-in Flash

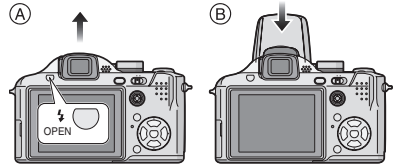

(A) To open the flash

Press the [⚡ OPEN] button.

(B) To close the flash

Press the flash until it clicks.

- Be sure to close the flash when not in use.
- The flash setting is fixed to Forced OFF [☺] while the flash is closed.

■ Switching to the appropriate flash setting

Set the flash to match the recording.

Press ► [⚡] to switch the flash setting.



- For information about flash settings that can be selected, refer to “Available flash settings by recording mode”. (P43)

⚡ A : AUTO

The flash is automatically activated when the recording conditions make it necessary.

⚡ A with eye : AUTO/Red-eye reduction ^{*1}

The flash is automatically activated when the recording conditions make it necessary. It is activated once before the actual recording to reduce the red-eye phenomenon (eyes of the subject appearing red in the picture) and then activated again for the actual recording.

- Use this when you take pictures of people in low lighting conditions.

 : **Forced ON**

The flash is activated every time regardless of the recording conditions.

- Use this when your subject is back-lit or under fluorescent light.

 : **Forced ON/Red-eye reduction** *1

- The flash setting is set to **Forced ON/Red-eye reduction** only when you set [PARTY] (P62) or [CANDLE LIGHT] (P62) in scene mode.

 : **Slow sync./Red-eye reduction** *1

If you take a picture with a dark background landscape, this feature will slow the shutter speed when the flash is activated so that the dark background landscape will become bright. Simultaneously it reduces the red-eye phenomenon.

- Use this when you take pictures of people in front of a dark background.

 : **Forced OFF**

The flash is not activated in any recording conditions.


























- Use this when you take pictures in places where the use of the flash is not permitted.


*1 The flash is activated twice. The subject should not move until the second flash is activated.

■ Available flash settings by recording mode

The available flash settings depend on the recording mode.

(○: Available, —: Not available)

| |  |  |  |  |  |  |
|---|---|---|---|---|---|---|
| P | ○ | ○ | ○ | ○ | — | ○ |
| A | ○ | ○ | ○ | ○ | — | ○ |
| S | ○ | ○ | ○ | — | — | ○ |
| M | ○ | ○ | ○ | — | — | ○ |
|  | ○ | ○ | ○ | ○ | — | ○ |
|  | — | — | — | — | — | ○ |
|  | ○ | ○ | ○ | — | — | ○ |
|  | ○ | ○ | ○ | — | — | ○ |
|  | — | — | — | — | — | ○ |
|  | ○ | ○ | ○ | — | — | ○ |
|  | — | — | — | ○ | — | ○ |
|  | — | — | — | — | — | ○ |
|  | ○ | ○ | ○ | — | — | ○ |
|  | ○ | — | ○ | — | — | ○ |
|  | — | — | — | ○ | ○ | ○ |
|  | — | — | — | ○ | ○ | ○ |
|  | — | — | — | — | — | ○ |
|  | — | — | — | — | — | ○ |
|  | ○ | ○ | ○ | — | — | ○ |
|  | ○ | ○ | ○ | — | — | ○ |
|  | ○ | — | ○ | — | — | ○ |
|  | ○ | ○ | ○ | ○ | — | ○ |
|  | — | ○*2 | —*2 | — | — | ○ |

*2 It becomes Forced ON [, when the backlight compensation function is activated.



■ The available flash range to take pictures

The available flash range to take pictures depends on the ISO sensitivity selected.










| ISO sensitivity | Available flash range |
|-----------------|--|
| AUTO | Wide |
| | 30 cm (0.98 feet) to 6 m (19.7 feet) |
| | Tele |
| | 30 cm (0.98 feet) to 5.4 m (17.7 feet) |
| ISO80 | Wide |
| | 30 cm (0.98 feet) to 2.7 m (8.86 feet) |
| | Tele |
| | 30 cm (0.98 feet) to 2.4 m (7.87 feet) |
| ISO100 | Wide |
| | 30 cm (0.98 feet) to 3 m (9.84 feet) |
| | Tele |
| | 30 cm (0.98 feet) to 2.7 m (8.86 feet) |
| ISO200 | Wide |
| | 40 cm (1.31 feet) to 4.2 m (13.8 feet) |
| | Tele |
| | 40 cm (1.31 feet) to 3.8 m (12.5 feet) |
| ISO400 | Wide |
| | 60 cm (1.97 feet) to 6 m (19.7 feet) |
| | Tele |
| | 60 cm (1.97 feet) to 5.4 m (17.7 feet) |

- The ISO sensitivity can be set to [AUTO], [ISO800] or [ISO1600] in high sensitivity mode (P65) in scene mode. The available flash range also differs.
Wide: 80 cm (2.62 feet) to 6 m (19.7 feet)

Tele: 80 cm (2.62 feet) to 5.4 m (17.7 feet)

- The available flash range is an approximation.
- Refer to P77 for the ISO sensitivity.
- Refer to P27 for the focus range.
- If ISO sensitivity is set to [AUTO] when using the flash, it will be automatically increased to a maximum of [ISO400].
- To avoid picture noises, we recommend reducing the ISO sensitivity, setting [NOISE REDUCTION] in [PICT.ADJ.] to [HIGH] or setting the items except [NOISE REDUCTION] to [LOW] to take pictures. (P83)
- In motion picture mode [, [SCENERY] (P60), [NIGHT SCENERY] (P61), [FIREWORKS] (P63) or [STARRY SKY] (P63) in scene mode, the flash setting is fixed to Forced OFF [, even if the flash is opened.

■ Shutter speed for each flash setting

| Flash setting | Shutter speed (Sec.) |
|---|-------------------------------------|
|  AUTO | 1/30 to 1/2000 |
|   AUTO/ Red-eye reduction | 1/30 to 1/2000 |
|  Forced ON   Forced ON/ Red-eye reduction | 1/30 to 1/2000 |
|   Slow sync./ Red-eye reduction | 1 to 1/2000 |
|  Forced OFF | 1 to 1/2000 (In program AE mode) |


- Refer to P55 for the Aperture-priority AE, Shutter-priority AE or Manual exposure mode.
- There may be differences in the above shutter speeds in scene mode.
 - [NIGHT SCENERY] (P61):
8 to 1/2000th
 - [FIREWORKS] (P63):
1/4th, 2 seconds

- [STARRY SKY] (P63):
15 seconds, 30 seconds, 60 seconds

■ Adjusting flash output



Adjust the flash output when the subject is small or reflection ratio is extremely high or low.

1 Press **▲** () several times until [FLASH] appears and then press **◀/▶** to set the flash output.

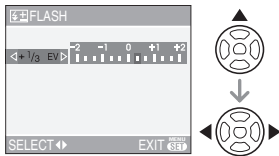




 - Select [0] to return to the original flash output.

2 Press [MENU/SET] to finish.

 - You can adjust from [-2 EV] to [+2 EV] in steps of [1/3 EV].
- When the flash output is adjusted, the flash output value appears on the upper left of the screen.
- The flash output setting is memorized even if the camera is turned off.
- In motion picture mode (), simple mode () and [SCENERY] (P60), [NIGHT SCENERY] (P61), [FIREWORKS] (P63) or [STARRY SKY] (P63) in scene mode, you cannot adjust the flash output.



- **Do not look directly at the flash at close range when it is activated.**
- **Do not bring the flash too close to objects or close the flash while it is activated. The objects may be discolored by its heat or lighting.**
- **Do not cover the photo flash with your fingers or other objects.**

- If you press the shutter button halfway when the flash is activated, the flash icon turns red.
- When the jitter alert appears, we recommend using a tripod.
- When you take a picture beyond the available flash range, the exposure may not be adjusted properly and the picture may become bright or dark.
- When the flash is being charged, the flash icon blinks red, and you cannot take a picture even when you press the shutter button fully.
- When taking a picture with the flash, the white balance is automatically adjusted [except for [] (Daylight), [] (Flash)]. However, the white balance may not be properly adjusted if the flash level is insufficient. (P75)
- When the shutter speed is fast, the flash effect may not be sufficient.
- If you repeat taking a picture, it may not actually be taken even if the flash is activated. Take a picture after the access indication disappears.
- **When taking a picture with the flash, we recommend removing the lens hood. In some cases it may not allow the scene to be illuminated properly.**
- Do not close the flash soon after the flash is activated prior to taking pictures due to AUTO/Red-eye reduction etc. It causes a malfunction.
- The red-eye reduction effect differs between people. Also, if the subject was far away from the camera or was not looking at the first flash, the effect may not be evident.
- When using a conversion lens, the built-in flash setting is fixed to Forced OFF [].
- When you set burst mode or auto bracket, only 1 picture is recorded for every flash activated.

Taking Pictures with the Self-timer



1 Press ◀ [] to select the self-timer mode.



: Self-timer set to 10 seconds




: Self-timer set to 2 seconds




No display: canceled

2 Press the shutter button halfway to focus and then press it fully to take the picture.

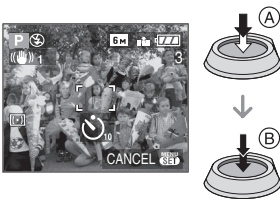

 - (A): Press the shutter button halfway to focus.
- (B): Press the shutter button fully to take the picture.
- The self-timer indicator (C) blinks and the shutter is activated after 10 seconds (or 2 seconds).
- If you press [MENU/SET] while the self-timer is set, the self-timer setting is canceled.



- When using a tripod etc., setting the self-timer to 2 seconds is a convenient way to avoid the jitter caused by pressing the shutter button.
- When you press the shutter button once fully, the subject is automatically focused just before recording. In dark places, the self-timer indicator will blink and then may turn on brightly operating as an AF assist lamp (P82) to allow the camera to focus on the subject.
- In simple mode [], the self-timer is fixed to 10 seconds.
- When you set the self-timer in burst mode, the camera starts taking a picture 2 or 10 seconds after the shutter button is pressed. The number of pictures taken at one time is fixed to 3.
- We recommend using a tripod when recording with the self-timer. (When you use a tripod, make sure the tripod is stable when the camera is attached to it.)

Compensating the Exposure



Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background. Look at the following examples.

Under exposed



Compensate the exposure towards positive.



Properly exposed



Over exposed



Compensate the exposure towards negative.

- 1 Press \blacktriangle [\pm] until [EXPOSURE] appears, compensate the exposure with $\blacktriangle/\blacktriangleright$.



- You can compensate from [-2 EV] to [+2 EV] in steps of [1/3 EV].
- Select [0 EV] to return to the original exposure.

- 2 Press [MENU/SET] to finish.

- You can also press the shutter button halfway to finish.




- EV is an abbreviation of [Exposure Value]. It refers to the amount of light given to the CCD by the aperture value and the shutter speed.
- The exposure compensation value appears on the lower left of the screen.
- The set exposure value is memorized even if the camera is turned off.
- The compensation range of the exposure will be limited depending on the brightness of the subject.
- Exposure cannot be compensated when using [STARRY SKY] in scene mode.

Taking Pictures using Auto Bracket



In this mode, 3 pictures are automatically recorded in the selected exposure compensation range each time the shutter button is pressed. You can select the picture with the desired exposure from the 3 pictures with different exposures.

1 Press \blacktriangle [\pm] several times until [AUTO BRACKET] appears, set the compensation range of the exposure with $\blacktriangle/\blacktriangleright$.

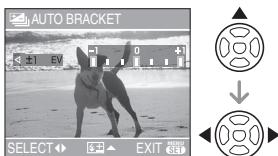

- You can select [OFF] (0), [$\pm 1/3$ EV], [$\pm 2/3$ EV] or [± 1 EV].
- When you do not use auto bracket, select [OFF] (0).

2 Press [MENU/SET] to finish.

- You can also press the shutter button halfway to finish.



- When setting auto bracket, the auto bracket icon [\pm] appears on the lower left of the screen.
- When taking pictures using auto bracket after setting the exposure compensation range, the pictures taken are based on the selected exposure compensation range. When the exposure is compensated, the exposure compensation value appears on the lower left of the screen.

 
- The auto bracket setting is canceled if the camera is turned off.
- When setting auto bracket and burst mode simultaneously, auto bracket will be performed.
- When auto bracket is set, the auto review function is activated regardless of the auto review setting. (The picture is not enlarged.) You cannot set the auto review function in the [SETUP] menu.
- When auto bracket is activated, [AUDIO REC.] cannot be used.
- The exposure may not be compensated with auto bracket depending on the brightness of the subject.
- When setting the quality to [TIFF], you cannot take pictures with the auto bracket.
- In shutter-priority AE and manual exposure, if the shutter speed is set to more than 1 second auto bracket is disabled.
- When the flash is activated or [STARRY SKY] in scene mode is selected, you can take only 1 picture.
- If the number of recordable pictures is 2 or less, you cannot take pictures by setting auto bracket.

Optical Image Stabilizer







This mode detects jitter and compensates for it.

1 Press and hold the optical image stabilizer button (A) until [STABILIZER] appears.

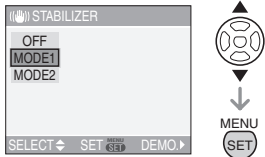

2 Press ▲/▼ to select the stabilizer function mode and then press [MENU/SET].





| | |
|--|--|
| MODE1 () | The stabilizer operates continuously and can assist during photo composition. |
| MODE2 () | The jitter is compensated for when the shutter button is pressed. There is a greater stabilizing effect. |
| OFF () | When you want to take a picture with jitter. |

■ Demonstration of the optical image stabilizer (Demonstration Mode)

Press **▶** to display the demonstration. After the demonstration ends, the screen returns to the stabilizer function mode selection menu. Press **▶** again if you want to exit the demonstration before it ends. While the

demonstration is displayed, the optical zoom is fixed to Wide (1×) and the zoom function cannot be activated. You also cannot take pictures.




- The stabilizer function may not be effective in the following cases.
 - When there is a lot of jitter.
 - When the zoom magnification is high.
 - In digital zoom range.
 - When taking pictures while following a moving subject.
 - When the shutter speed becomes slower to take pictures indoors or in dark places.
- Be careful of camera jitter when you press the shutter button.
- In simple mode [, the setting is fixed to [MODE1] and in [STARRY SKY] (P63) in scene mode it is fixed to [OFF]. The stabilizer function mode selection menu does not appear.
- In motion picture mode [, or [PANNING] in scene mode, [MODE2] cannot be set.

Taking Pictures using Burst Mode



1 Press the burst mode button to switch the burst mode setting.

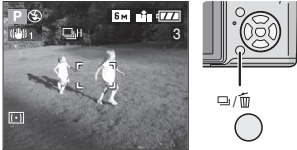

: High speed



: Low speed



: Unlimited*1



No display: canceled

*1 Depends on the memory size, battery power, picture size and quality (compression).

2 Take a picture.

- Hold down the shutter button fully to activate the burst mode.

■ Number of pictures recorded in burst mode

| | Burst speed (pictures/second) | Number of recordable pictures (pictures) | |
|--|-------------------------------|--|---------|
| | | | |
| | 3*2 | max. 7 | max. 13 |
| | 2*2 | | |
| | approx. 2 | Depends on the remaining capacity of the card. | |

*2 The burst speed is constant regardless of the transfer speed of the card.

- The number of pictures indicated is when the shutter speed is faster than 1/60 and the flash is not activated.
- In simple mode [♥], the settings become as follows. [📷] appears on the left of the screen. (P107)
 - [ENLARGE]:
 /Max. 7 pictures
 - [4"×6"/10×15cm]/[E-MAIL]:
 /Max. 13 pictures



• When the burst mode setting is set to Unlimited

- You can take pictures until the capacity of the card is full.
- The burst speed will become slower halfway. The burst speed of a MultiMediaCard becomes even slower than that of an SD Memory Card. However, the exact timing of this depends on the number of recordable pictures and the card.
- The focus is fixed when the first picture is taken.
- When the self-timer is used, the number of recordable pictures in burst mode is fixed to 3.
- Burst mode is not canceled when the camera is switched off.
- When auto bracket and burst mode are set simultaneously, auto bracket will be performed.
- The exposure and the white balance vary depending on the burst mode setting. When burst mode is set to [], they are fixed to the values set for the first picture. When the burst speed is set to [] or [], they are adjusted each time you take a picture.
- When burst mode is set, the auto review function is activated regardless of the auto review setting. (The picture is not enlarged.) You cannot set the auto review function in the [SETUP] menu.

- When burst mode is activated, [AUDIO REC.] cannot be used.
- When the flash is activated or [STARRY SKY] in scene mode is selected, you can take only 1 picture.
- You cannot take pictures in burst mode when the quality is set to [TIFF].


Taking Close-up Pictures



This mode allows you to take close-up pictures of a subject, e.g. when taking pictures of flowers. You can take pictures of a subject as close as 5 cm (0.17 feet) from the lens by rotating the zoom lever upmost to Wide (1×).

As you rotate the zoom lever towards Tele, the distance from the subject that you can take close-up pictures increases in steps up to a maximum of 2 m (6.6 feet). (11×)

■ Focus range

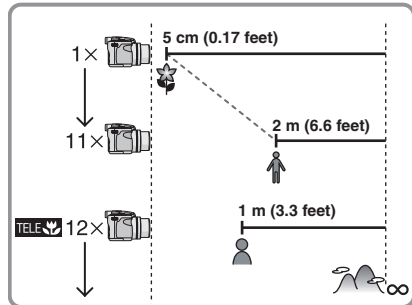

- The zoom magnification values will change when using the extended optical zoom.

■ Tele-macro function



When you rotate the zoom lever upmost to Tele, you can take pictures approaching the subject at a distance up to 1 m (3.3 feet) from the lens. (The tele-macro icon


[TELE] appears.) It is convenient when

taking close-up pictures of flowers blooming near the ground while standing up or when taking close-up pictures of insects from a distant position.



- We recommend using a tripod and the self-timer (P46) in macro mode.
- When a subject is close to the camera, the effective focus range (depth of field) is significantly narrowed. Therefore, if the distance between the camera and the subject is changed after focusing on the subject, it may become difficult to focus on it again.
- In tele macro mode, the depth of field is narrowed and camera jitter occurs easier than usual. Therefore, when you cannot use a tripod, we recommend taking pictures with a brightness equivalent to having the aperture value set to F4.0 or a higher number and the shutter speed is set to 1/125th of a second or faster to keep the depth of field and the performance of the stabilizer function.
- If the distance between the camera and the subject is beyond the focus range of the camera, the picture may not be properly focused even if the focus indication lights.
- Macro mode gives priority to a subject close to the camera. Therefore, if the distance between the camera and the subject is more than 1 m (3.3 feet) it takes longer to focus on it in macro mode than program AE mode.
- The available flash range is about 30 cm (0.98 feet) to 6 m (19.7 feet) (Wide). (When the ISO sensitivity is set to [AUTO].)
- If you focus on the subject at 2 m (6.6 feet) or less distant position with tele-macro function when setting the optical zoom magnification in 12× and then rotate the zoom lever for setting the optical zoom magnification to 11× or less, the subject becomes unfocused. In this

case, press the shutter button halfway or operate the camera to focus on the subject again.

- We recommend setting the flash to Forced OFF [] when you take pictures at close range.
- When you take pictures at close range, the resolution of the periphery of the picture may decrease slightly. This is not a malfunction.

Aperture-priority AE




Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

1 Tilt the joystick towards ▲/▼ to set the aperture value.



2 Take a picture.

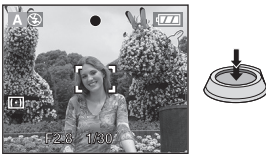

- Refer to P55 for the available aperture values and the shutter speed.
- Set the aperture value to a higher number when the subject is too bright. Set the aperture value to a lower number when the subject is too dim.
- The brightness of the screen and the recorded pictures may differ. Check the pictures using the review function or playback mode.
- The ISO sensitivity cannot be set to [AUTO]. (P77) (The ISO sensitivity is automatically set to [ISO100] when you switch from [AUTO] to Aperture-priority AE or Shutter-priority AE.)

- The aperture value and the shutter speed displayed on the screen turn red when the exposure is not adequate.

Shutter-priority AE




When you want to take a sharp picture of a fast moving subject, set with a faster shutter speed. When you want to create a trail effect, set to a slower shutter speed.

1 Tilt the joystick towards ▲/▼ to set the shutter speed.



2 Take a picture.

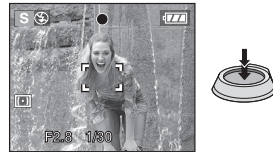

- Refer to P55 for the available aperture values and the shutter speed.
- The brightness of the screen may differ from the brightness of the actual pictures. Check the pictures using the review function or playback mode.
- You cannot set the following items in Shutter-priority AE.
 - Slow sync./Red-eye reduction [] (P42)
 - [AUTO] in ISO sensitivity (P77) (The ISO sensitivity is automatically set to [ISO100] when you switch from [AUTO])

to Aperture-priority AE or Shutter-priority AE.)

– The aperture value and the shutter speed turn red when the exposure is not adequate.

- We recommend using a tripod when the shutter speed is slow.

Manual exposure




Determine the exposure by manually setting the aperture value and the shutter speed.

- 1 Tilt the joystick towards ▲/▼/◀/▶ to set the aperture value and the shutter speed.



| | |
|--|--|
| | Set the aperture value and the shutter speed. |
| | Switch between the aperture value and the shutter speed. |

- 2 Press the shutter button halfway.

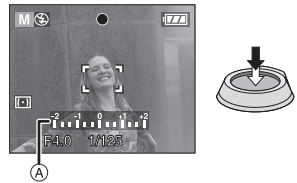

- The manual exposure assistance (A) appears for about 10 seconds to indicate the exposure.
- Set the aperture value and the shutter speed again when the exposure is not adequate.

- 3 Take the picture.



Manual Exposure Assistance

| | |
|--|--|
| | The exposure is adequate. |
| | Set to faster shutter speed or larger aperture value. |
| | Set to slower shutter speed or smaller aperture value. |

- The manual exposure assistance is an approximation. We recommend checking the pictures after taking them using the review function.



- Refer to P55 for the available aperture values and the shutter speed.
- You cannot set the following items in manual exposure.
 - Slow sync./Red-eye reduction [] (P42)
 - [AUTO] in ISO sensitivity (P77) (The ISO sensitivity is automatically set to [ISO100] when you switch from [AUTO] to Manual exposure.)
 - Exposure compensation (P47)
- The brightness of the screen may differ from the brightness of the actual pictures. Check the pictures using the review function or playback mode.
- If the exposure is not adequate, the aperture value and the shutter speed turn red when the shutter button is pressed halfway.

Aperture Value and Shutter Speed

Aperture-priority AE

| Available Aperture Value (Per 1/3 EV) | | | Shutter Speed (Sec) |
|--|------|------|------------------------|
| F8.0 | | | 8 to 1/2000 |
| F7.1 | F6.3 | F5.6 | 8 to 1/1600 |
| F5.0 | F4.5 | F4.0 | 8 to 1/1300 |
| F3.6 | F3.2 | F2.8 | 8 to 1/1000 |

Shutter-priority AE

| Available Shutter Speed (Sec) (Per 1/3 EV) | | Aperture Value |
|---|--------|----------------|
| 8 | 6 | F2.8 to F8.0 |
| 5 | 4 | |
| 3.2 | 2.5 | |
| 2 | 1.6 | |
| 1.3 | 1 | |
| 1/1.3 | 1/1.6 | |
| 1/2 | 1/2.5 | |
| 1/3.2 | 1/4 | |
| 1/5 | 1/6 | |
| 1/8 | 1/10 | |
| 1/13 | 1/15 | |
| 1/20 | 1/25 | |
| 1/30 | 1/40 | |
| 1/50 | 1/60 | |
| 1/80 | 1/100 | |
| 1/125 | 1/160 | |
| 1/200 | 1/250 | |
| 1/320 | 1/400 | |
| 1/500 | 1/640 | |
| 1/800 | 1/1000 | |
| 1/1300 | | F4.0 to F8.0 |
| 1/1600 | | F5.6 to F8.0 |
| 1/2000 | | F8.0 |

Manual exposure

| Available Aperture Value (Per 1/3 EV) | Available Shutter Speed (Sec) (Per 1/3 EV) |
|--|---|
| F2.8 to F3.6 | 60 to 1/1000 |
| F4.0 to F5.0 | 60 to 1/1300 |
| F5.6 to F7.1 | 60 to 1/1600 |
| F8.0 | 60 to 1/2000 |




- The aperture values given in the table above are values when the zoom lever is rotated to Wide.
- Depending on the zoom magnification, some of the aperture values cannot be selected.

Taking Pictures with Manual Focus




Use this function when you want to fix the focus or when the distance between the lens and the subject is determined and you do not want to activate auto focus.

1 Switch the AF/MF button **A** to [MF].

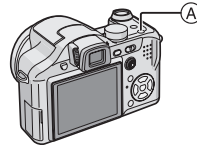

- The setting switches between AF and MF each time the AF/MF button is pressed.

2 Tilt the joystick towards **▲/▼** to focus on the subject.

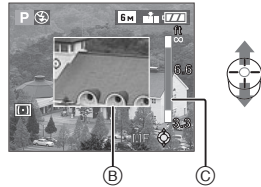

B: MF assistance

C: Focus range

- MF assistance disappears about 2 seconds after you stop operating the joystick.
- Focus range disappears about 5 seconds after you stop operating the joystick.


3 Take the picture.




■ MF ASSIST

If you tilt the joystick towards ▲/▼ when [MF ASSIST] is set to [MF1] or [MF2], MF assistance is activated and the screen is enlarged. This allows you to focus on the subject more easily.


1 Press [MENU/SET] and then press ◀.

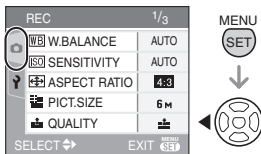


2 Press ▼ to select the [SETUP] menu icon [↵] and then press ▶.

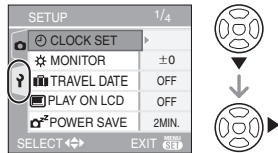

3 Press ▲/▼ to select [MF ASSIST] and then press ▶.

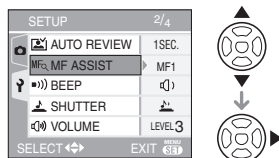

4 Press ▲/▼ to select [MF1] or [MF2] and then press [MENU/SET].

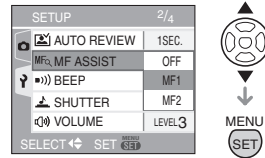


- [MF1]: The center of the screen is enlarged. You can adjust the focus while determining the composition of the whole of the screen.
- [MF2]: The whole of the screen is enlarged. This is convenient when adjusting the focus in Wide.
- [OFF]: The screen is not enlarged.

5 Press [MENU/SET] to close the menu.

- You can also close the menu by pressing the shutter button halfway.

■ Technique for Manual focus

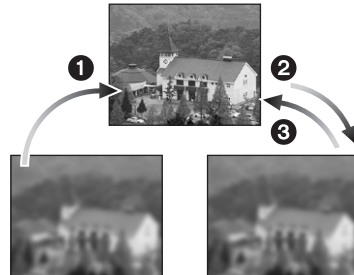

- 1 Tilt the joystick towards ▲/▼.
- 2 Tilt it a little more.
- 3 Tilt the joystick in the opposite direction to finely focus on the subject.

■ Prefocus

This is a technique for focusing in advance on the point the pictures will be taken when it is difficult to focus on the subject with auto focus due to its quick motion. [e.g. [PANNING] (P61) in scene mode]

This function is suitable when the distance between the camera and the subject is certain.



- You can also record with manual focus in motion picture mode [M]. However the focus is fixed while recording motion pictures.
- If you focus on the subject in Wide and then rotate the zoom lever to Tele, the focus may not be adequate. In this case, focus on the subject again.
- You cannot set continuous AF (P81) when manual focus is set.
- The MF assistance screen does not appear when using the digital zoom.
- The distance to the subject displayed on the screen in manual focus is an approximation of the focus position. Remember that the distance is an approximation when taking a picture.
- Use the assistance screen for a final check of the focus.
- After canceling power save mode, focus on the subject again.


Scene Mode



When you select a scene mode to match the subject and recording situation, the camera sets the optimal exposure and hue to obtain the desired picture.

- Refer to P59 to 65 for each scene menu.

1 Press ▲/▼ to select the scene mode.

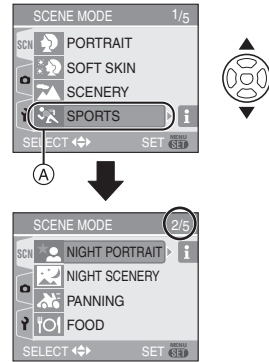


- Press ▼ at (A) to switch to the next menu screen.
- If [SCENE MODE] menu does not appear, press [MENU/SET] to display the [SCENE MODE] menu.
- When you press ►, explanations about each scene mode are displayed. (When you press ◀, the screen returns to the [SCENE MODE] menu.)

2 Press [MENU/SET].

■ About the menu screen items


- There are 5 menu screens (1/5, 2/5, 3/5, 4/5 and 5/5).
- You can switch menu screens from any menu item by rotating the zoom lever.

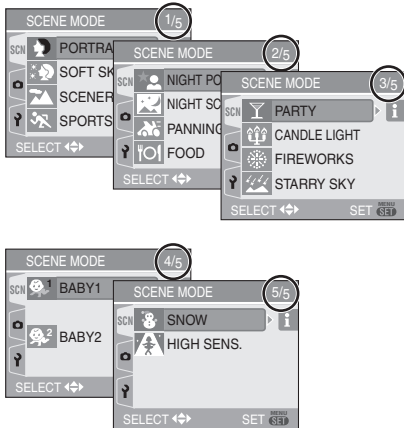

- When you take a picture with a scene mode that is not adequate for the purpose, the hue of the picture may differ from the actual scene.
- When you want to change the brightness of the picture to be recorded, compensate the exposure (P47). (However, the exposure cannot be compensated in [STARRY SKY].)
- Press ◀ and then press ▲/▼ in the [SCENE MODE] menu to select either the [REC] menu icon [📷] (P74) or the [SETUP] menu icon [⚙️] (P20) and set the desired items.
- The following cannot be set in scene mode because the camera automatically adjusts them to the optimal setting.
 - [W.BALANCE]
 - [SENSITIVITY] (excluding High sensitivity mode)
 - [METERING MODE]
 - [COL.EFFECT]
 - [PICT.ADJ.]

📷 Portrait mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)
The background is blurred and the person stands out with a healthier complexion.

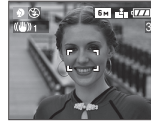

■ Technique for Portrait mode

To increase the effective of this mode:

- 1 Rotate the zoom lever as far as possible to Tele.
- 2 Move close to the subject to make this mode more effective.



- This mode is only suitable when taking pictures outdoors in the daytime.
- ISO sensitivity is fixed to [ISO80].

📷 Soft skin mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)
The camera detects the face or skin area to achieve a smoother appearance of the skin than portrait mode.



■ Technique for Soft skin mode

To make this mode more effective:

- 1 Rotate the zoom lever as far as possible to Tele.
- 2 Move close to the subject to make this mode more effective.



- This mode is only suitable when taking pictures outdoors in the daytime.
- If a part of the background etc. is a color close to skin color, this part is also smoothed.
- This mode may not be effective when there is insufficient brightness.
- ISO sensitivity is fixed to [ISO80].



Scenery mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)
The camera focuses preferentially on a distant subject. This allows you to take pictures of a wide landscape.

- Switch the AF/MF button to [AF].




- The focus range is 5 m (16.4 feet) to ∞.
- The flash setting is fixed to Forced OFF [OFF].
- The setting on the AF assist lamp is disabled.



Sports mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)
This mode allows you to take pictures of a fast moving subject e.g. when taking pictures of outdoor sports.

- Switch the AF/MF button to [AF].

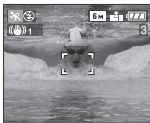

■ Technique for Sports mode

- This mode is effective when taking pictures during the day in good weather.




- This mode is suitable for taking pictures outdoors in the daytime when you are 5 m (16.4 feet) or more away from the subject.



Night portrait mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)
This mode allows you to take pictures of a subject and a landscape with near real-life brightness by using the flash and slowing down the shutter speed.

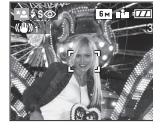

■ Technique for Night portrait mode

• Use the flash.

- Since the shutter speed becomes slower, we recommend using a tripod and the self-timer (P46) for taking pictures.
- Keep the subject still for about 1 second after taking the picture.
- We recommend rotating the zoom lever to Wide (1×) and being about 1.5 m (4.92 feet) from the subject when taking a picture.



- The focus range is 1.2 m (3.94 feet) to 5 m (16.4 feet). (Refer to P44 for the available flash range to take pictures.)
- Be sure to close the flash when not in use.
- The shutter may remain closed (max. about 1 sec.) after taking the picture because of signal processing. This is not a malfunction.
- Noise may become visible when you take pictures in dark places.


- When using the flash, Slow sync./Red-eye reduction [S/O] is selected and the flash is activated every time.
- The continuous AF setting is disabled.

Night scenery mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)

This mode allows you to record the night landscape vividly by reducing the shutter speed.

- Switch the AF/MF button to [AF].

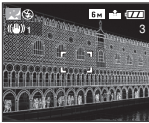

■ Technique for Night scenery mode

- Since the shutter speed becomes slower (up to about 8 sec.) use a tripod. We also recommend using the self-timer (P46) for taking pictures.



- The focus range is 5 m (16.4 feet) to ∞.
- The shutter may remain closed (max. about 8 sec.) after taking the picture because of signal processing. This is not a malfunction.
- Noise may become visible when you take pictures in dark places.
- The flash setting is fixed to Forced OFF [OFF].
- ISO sensitivity is fixed to [ISO80].
- The setting on the AF assist lamp and continuous AF are disabled.

Panning mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)


When you move the camera to follow a subject moving in one direction such as a runner or car, the background becomes a

blur and the subject stays focused. This effect is called “panning”. This mode allows you to obtain this effect easier.



■ Technique for Panning mode

To obtain good pictures in panning mode, move the camera in a horizontal plane as you take the pictures.

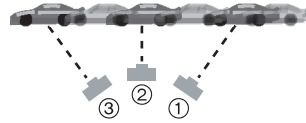

- ① Move the camera smoothly while following the subject in the viewfinder.
- ② Press the shutter button while you are moving the camera.
- ③ Move the camera continuously.

- We recommend the following:


- Using the Viewfinder. (P38)
- Selecting a subject with quick motion.
- Using prefocus. (P58)
- Use this mode with burst mode. (P50) (You can then select the best pictures from all the pictures taken.)



- The shutter speed in panning mode becomes slower to achieve the panning effect. As a result, jitter can easily occur.
- The panning function does not work well in the following situations.
 - During very bright days in summer. We recommend using an ND filter (DMW-LND52; optional). (P105)
 - When the shutter speed is faster than 1/100th.
 - When you move the camera too slowly because the subject is moving slowly. (The background will not become a blur.)

- You cannot set the stabilizer function mode to [MODE2]. When you set it to [MODE1], only vertical jitters can be compensated in panning mode.
- The ISO sensitivity is fixed to [ISO80].
- The settings on the AF assist lamp and the continuous AF are disabled.


Food mode

Press [] to display the [SCENE MODE] menu and select a scene mode. (P58)
This mode allows you to take pictures of food with a natural hue without being affected by the ambient light in restaurants etc.



- The focus range is 5 cm (0.16 feet) (Wide)/2 m (6.56 feet) (Tele) to ∞.

Party mode

Press [] to display the [SCENE MODE] menu and select a scene mode. (P58)
Select this mode when you want to take pictures at a wedding reception, indoor party etc. By using the flash and slowing down the shutter speed, both people and the background can be recorded with a brightness close to real life.





■ **Technique for Party mode**


• **Open the flash. (P42)**

- Since the shutter speed becomes slower, we recommend using a tripod and the self-timer (P46) for taking pictures.
- We recommend rotating the zoom lever to Wide (1×) and being about 1.5 m (4.92 feet) from the subject when taking pictures.



- The flash setting can be set to Slow sync./ Red-eye reduction [] or Forced ON/ Red-eye reduction [].

Candle light mode



Press [] to display the [SCENE MODE] menu and select a scene mode. (P58)
This mode allows you to take pictures with a candle-lit atmosphere.



■ **Technique for Candle light mode**


- If you make the most of the candle light, you can take successful pictures without using the flash.
- We recommend using a tripod and the self-timer (P46) for taking pictures.



- The focus range is 5 cm (0.16 feet) (Wide)/2 m (6.56 feet) (Tele) to ∞.
- The flash setting can be set to Slow sync./ Red-eye reduction [] or Forced ON/ Red-eye reduction [].

Fireworks mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)
This mode allows you to take beautiful pictures of fireworks exploding in the night sky.

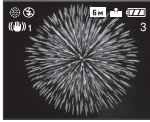

■ Technique for Fireworks mode

We recommend performing the following steps to prefocus on the point the pictures will be taken so that you do not miss taking pictures of the fireworks when they are fired.

- 1 Aim the camera at an object, such as a distant light, that is about the same distance from the camera as the point where the fireworks will rise.
 - 2 Press the shutter button halfway until the focus indication (P25) lights.
 - 3 Switch the AF/MF button to [MF]. (P56)
 - 4 Aim the camera in the direction that the fireworks will be fired and wait.
 - 5 Press the shutter button fully to take the picture when the fireworks are fired.
- If zoom was used, the focus position will not be correct. Perform steps 2 to 5 again.
 - We recommend using a tripod.



- The focus range is 5 m (16.4 feet) to ∞ in AF mode. (We recommend performing steps 1 to 5 above for prefocus.)
- The shutter speed becomes the following.
 - When [OFF] is set on the optical image stabilizer function: Fixed to 2 second
 - When [MODE1] or [MODE2] is set on the optical image stabilizer function: 1/4th or 2 second (The shutter speed becomes 2 second only when the camera has determined that there is

little jitter such as when using a tripod etc.)

- Histograms are always displayed in orange. (P40)
- The flash setting is fixed to Forced OFF [OFF].
- ISO sensitivity is fixed to [ISO80].
- The setting on the AF assist lamp and continuous AF are disabled.


Starry sky mode

Press [MENU] to display the [SCENE MODE] menu and select a scene mode. (P58)
This mode allows you to take vivid pictures of a starry sky or a dark subject that you could not take in [NIGHT SCENERY] by making the shutter speed slower.



■ Setting the shutter speed

- Select a shutter speed of [15 SEC.], [30 SEC.] or [60 SEC.].
- 1 Press \blacktriangle / \blacktriangledown to select the number of seconds and then press [MENU/SET].

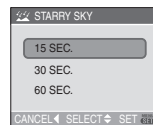

2 Taking Pictures.



- Press the shutter button to display the countdown screen. Do not move the camera after this screen is displayed. When countdown finishes, [PLEASE WAIT...] is displayed for the

same length of time as the set shutter speed for signal processing.

- Press [MENU/SET] to stop taking the picture while the countdown screen is displayed.

■ Technique for Starry sky mode

- The shutter opens for 15, 30 or 60 seconds. Be sure to use a tripod. We also recommend taking pictures with the self-timer. (P46)
- We recommend using prefocus (P58) to focus in advance on a subject, such as a bright star or a distant light, that is easy to focus on.



- Histograms are always displayed in orange. (P40)
- The continuous AF setting is disabled.
- The flash setting is fixed to Forced OFF [☺].
- The optical image stabilizer function is fixed to [OFF].
- ISO sensitivity is fixed to [ISO80].
- You cannot compensate the exposure or set [AUDIO REC.], auto bracket, burst mode.



Baby mode 1

Baby mode 2

Press [MENU/SET] to display the [SCENE MODE] menu and select a scene mode. (P58)


This mode takes pictures of a baby with a healthy complexion. When the flash is used, the light from it is weaker than usual. You can set the birthdays of two babies by using [BABY1] and [BABY2].

- The baby's age can be displayed when playing back pictures.
- The age can also be printed on each picture by using the software [LUMIX Simple Viewer] or [PHOTOfunSTUDIO-viewer-] in the CD-ROM (supplied). (For information

about printing, refer to the separate operating instructions for PC connection.)

■ Age display setting

- If you want the age to be displayed, set the birthday in advance, select [WITH AGE] and press [MENU/SET].
- If you do not want the age to be displayed, select [WITHOUT AGE] and press [MENU/SET].

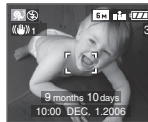

■ Birthday setting


- 1 Press ▲/▼ to select [BIRTHDAY SET.] and then press [MENU/SET].
 - 2 When the message [PLEASE SET THE BIRTHDAY OF THE BABY] appears, select items (Year/Month/Day) using ◀/▶ and set them using ▲/▼.
 - 3 Press [MENU/SET] to finish the setting.
- If you select [WITH AGE] without setting the birthday in advance, a message is displayed. Press [MENU/SET] and set the birthday in steps 2 and 3.



- The focus range is 5 cm (0.16 feet) (Wide)/2 m (6.56 feet) (Tele) to ∞.
- After turning on the camera in [BABY1]/[BABY2] in scene mode or switching to [BABY1]/[BABY2] from other scene modes, the age and current date and time are displayed for about 5 seconds at the bottom of the screen.
- The age display style differs depending on the language setting in the recording mode.
- The display style when printing may differ slightly from the display style on the screen.
- The date of birth is displayed as [0] month [0] day].


- If the age is not properly displayed, check the clock and birthday settings.
- If the camera is set to [WITHOUT AGE], the age is not recorded even if the time and birthday are set. This means the age cannot be displayed even if camera is set to [WITH AGE] after taking the pictures.
- Use [RESET] in the [SETUP] menu to reset the birthday setting. (P23)

Snow mode

Press [] to display the [SCENE MODE] menu and select a scene mode. (P58)
This mode will adjust the white balance and the exposure to show the snow as white as possible.



High Sensitivity mode


Press [] to display the [SCENE MODE] menu and select a scene mode. (P58)
This mode sets the ISO sensitivity higher than usual. A slight blurring of the subject is created when taking pictures indoors etc.




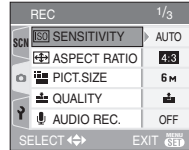
■ Setting the ISO sensitivity

The ISO sensitivity can be set to [AUTO], [ISO800] or [ISO1600] in high sensitivity mode.


- 1 Press [MENU/SET] and then press ◀.

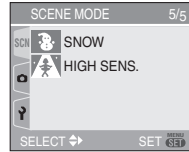

- 2 Press ▼ to select the [REC] menu icon [] and then press ▶.



- 3 Press ▶ and then press ▲/▼ to set.

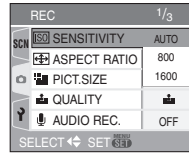


- The focus range is 5 cm (0.16 feet) (Wide)/2 m (6.56 feet) (Tele) to ∞.
- The resolution of the recorded picture decreases slightly because of high sensitivity processing. This is not a malfunction.
- The extended optical zoom and digital zoom cannot be used.

Recording which day of the vacation you take the picture




If you set the departure date in advance, you can record which day of the vacation you take the picture.

- When you play back a picture, the date on which it was taken is displayed.

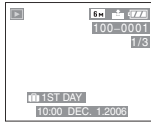


- The number of days that have passed since the departure date can be printed on each picture by using the software [LUMIX Simple Viewer] or [PHOTOfunSTUDIO-viewer-] in the CD-ROM (supplied). (For information about printing, refer to the separate operating instructions for PC connection.)


1 Press [MENU/SET] and then press

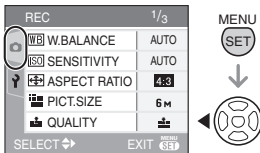


2 Press to select the [SETUP] menu icon and then press .

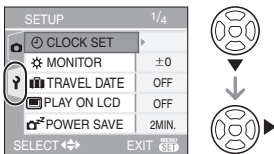

3 Press / to select [TRAVEL DATE] and then press .

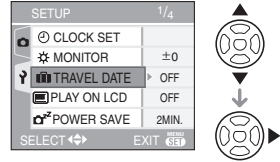

4 Press to select [SET] and then press [MENU/SET].

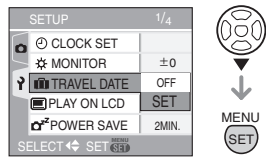

5 Press /// to select the date.



/: Select the desired item.

/: Set the year, month and date.

6 Press [MENU/SET] twice to close the menu.

7 Take a picture.



- The current date and time and which day of the vacation it is are displayed for

about 5 seconds at the bottom of the screen if the camera is turned on when the travel date is set, after setting the clock, departure date or travel date and after switching from playback mode to another mode.

- When [TRAVEL DATE] is set, [] appears on the lower right of the screen.

■ Canceling the travel date

If you leave [TRAVEL DATE] set to [SET], the number of days that have passed since the departure date will continue to be recorded.

When the vacation is finished, set [TRAVEL DATE] to [OFF] on the screen shown in step 4.




- The travel date is calculated using the date in the clock setting (P19) and the departure date you set.
- The travel date setting is memorized even if the camera is turned off.
- If you set a departure date and then take a picture on a date before this departure date, [-] (minus) is displayed in orange and the day of the vacation that you took the picture is not recorded.
- If you set a departure date and then change the clock setting to the date and time at the travel destination, [-] (minus) is displayed in white and the day of the vacation that you took the picture is recorded when the travel destination date is, for example, one day before the departure date.
- If [TRAVEL DATE] is set to [OFF], the number of days that have passed since the departure date will not be recorded even if you set the travel date or the clock. Even if [TRAVEL DATE] is set to [SET] after taking the pictures, which day of the vacation you took them is not displayed.

- If you set a departure date when the clock is not set, the message [PLEASE SET THE CLOCK] appears. In this case, set the clock.

Motion Picture Mode



1 Press the shutter button halfway to focus and then press it fully to start recording.

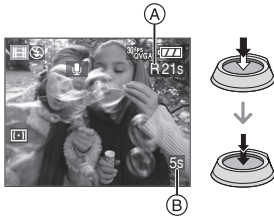

- When the subject is focused, the focus indication lights.
- The focus, zoom and aperture value are fixed to the setting when recording starts (the first frame).
- The available recording time (A) is displayed on the top right and the elapsed recording time (B) is displayed on the bottom right of the screen. For example, 1 hour 20 minutes and 30 seconds is displayed as [1h20m30s].
- The available recording time and the elapsed recording time are approximations.
- Audio recording starts simultaneously from the camera's built-in microphone.


2 Press the shutter button fully to stop recording.

- If the card becomes full in the middle of recording, the camera stops recording automatically.

■ Changing the picture quality setting


1 Press [MENU/SET].

2 Press ▲/▼ to select [ASPECT RATIO] and then press ►.

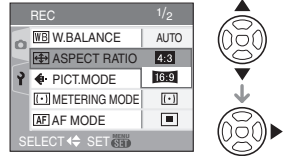

3 Press ▲/▼ to select the item and then press [MENU/SET].

4 Press ▲/▼ to select [PICT.MODE] and then press ►.

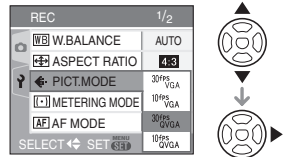

5 Press ▲/▼ to select the item and then press [MENU/SET].

If you selected [4:3] on the screen shown in step 2

| Item | Picture size | fps |
|-----------|----------------|-----|
| 30fpsVGA | 640×480 pixels | 30 |
| 10fpsVGA | | 10 |
| 30fpsQVGA | 320×240 pixels | 30 |
| 10fpsQVGA | | 10 |

If you selected [16:9] on the screen shown in step 2

| Item | Picture size | fps |
|------------|----------------|-----|
| 30fps 16:9 | 848×480 pixels | 30 |
| 10fps 16:9 | | 10 |

- fps (frames per second); This refers to the number of frames used in 1 second.

- You can record smoother motion pictures with 30 fps.
- You can record longer motion pictures with 10 fps although the picture quality is lower.
- The file size with [10fpsQVGA] is small so it is suitable for e-mails.

6 Press [MENU/SET] to close the menu.

- **You can also press the shutter button halfway to close the menu.**



- The focus range is the same as macro mode. [5 cm (0.16 feet) to ∞ (Wide), 1 m (3.28 feet) to ∞ (Tele)]
- Refer to P119 for information about the available recording time.
- The available recording time is an approximation.
(It varies depending on the recording condition and the types of SD memory Card.)
- The available recording time changes with subjects.
- The available recording time displayed on the screen may not decrease regularly.
- Motion pictures cannot be recorded without audio.
- This unit does not support recording motion pictures on MultiMediaCards.
- **When you set the picture quality to [30fpsVGA] or [30fps16:9], we recommend using a high speed SD Memory Card with “10MB/s” or greater displayed on the package.**
- **Depending on the type of SD Memory Card, recording may stop in the middle.**
- **We recommend using Panasonic’s SD Memory Card.**
- Depending on the type of SD Memory Card, the card access indication may

appear for a while after recording motion pictures. This is not a malfunction.


- When motion pictures recorded with the camera are played back on other equipment, the quality of the picture and sound may deteriorate and it may not be possible to play them back. Also the recording information may not be displayed correctly.
- In motion picture mode [M], you cannot use the direction detection function and the review function.
- You cannot set [MODE2] on the optical image stabilizer function.
- The bundled software includes QuickTime to play back motion picture files recorded with the camera on the PC.

Displaying Multiple Screens (Multi Playback)



1 Rotate the zoom lever towards [] [W] to display multiple screens.

(Screen when 9 screens are displayed)

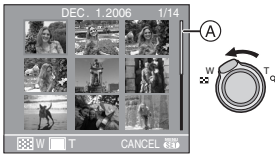

- []: 1 screen → 9 screens → 25 screens → Calendar screen display
- After the multiple screens are displayed, rotate the zoom lever further towards [] [W] to display 25 screens and the calendar screen (P71). Rotate the zoom lever towards [Q] [T] to return to the previous screen.
- When you switch to multiple screens, a scroll bar (A) appears. You can confirm the location of the displayed picture in all the recorded pictures with this scroll bar.

2 Press ▲/▼/◀/▶ to select a picture.



- You can also use the joystick for operation.

- The recording date and number of the selected picture and the total number of recorded pictures are displayed.
- Depending on the recorded picture and the setting, the following icons will appear.
 - [★] (Favorites)
 - [] (Motion picture)
 - [] ([BABY1]/[BABY2] in scene mode, age in months, age in years etc.)
 - [] (Travel date)
 - [] (Flip animation)

Examples of 25 screens



To return to normal playback

Rotate towards [Q] [T] or press [MENU/SET].

- The picture appears framed in orange.

To delete a picture during multi playback

- 1 Press ▲/▼/◀/▶ to select a picture and then press [].
- 2 Press ▲ to select [YES].
- 3 Press [MENU/SET].



- Even if the indications on the screen are turned off in normal playback mode (P38), the recording information etc. appears on the screen in multi playback. If you return to the previous screen, the indications on the screen are displayed as in normal playback mode.
- Pictures will not be displayed in the rotated direction even if [ROTATE DISP.] is set to [ON]. (P89)

Displaying pictures by recording date (Calendar playback)



You can display pictures by recording date using the calendar playback function.

1 Rotate the zoom lever towards [Q] [W] to display the calendar screen.



- The recording date of the picture selected in the playback screen becomes the date selected when the calendar screen is first displayed.
- If there are multiple pictures with the same recording date, the first picture recorded on that day is displayed.
- The calendar is displayed monthly.

2 Press ▲/▼/◀/▶ to select the date to be played back.

◀/▶: Select the date

▲/▼: Select the month

- If there were no pictures recorded during a month, the month is not displayed.

3 Press [MENU/SET] to display the pictures that were recorded on the selected date.



- The pictures that were recorded on the selected date are displayed on the 9 screens playback screen.
- Rotate the zoom lever towards [Q] [W] to return to the calendar screen.

4 Press ▲/▼/◀/▶ to select a picture and then press [MENU/SET].

- The selected picture is displayed on the 1 screen playback screen.

■ To return to the 1 screen playback screen.

After the calendar screen is displayed, rotate the zoom lever towards [Q] [T] to display 25 screens and 9 screens. (P70)



- The pictures are displayed without being rotated even if you set [ROTATE DISP.] to [ON]. (P89)
- You can display the calendar between January 2000 and December 2009.
- If the recording date of the picture selected in 25 screen multi playback is not between January 2000 and December 2009, the camera automatically displays it in the oldest calendar date.
- Pictures edited on a PC will be displayed with dates different from the actual recording dates.
- If the date is not set in the camera (P19), the recording date is set as January 1st, 2006.
- You can also select or set by using the joystick.

Using the Playback Zoom




1 Rotate the zoom lever towards [Q] [T] to enlarge the picture.



- Q : 1X → 2X → 4X → 8X → 16X
- When you rotate the zoom lever towards [] [W] after enlarging the picture, the magnification becomes lower. When you rotate the zoom lever towards [Q] [T], the magnification becomes higher.
- When you change the magnification, the zoom position indication (A) appears for about 1 second so that you can check the position of the enlarged section.

2 Press ▲/▼/◀/▶ to move the position.

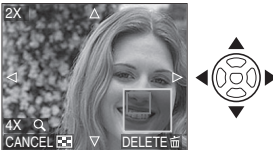

- When you move the position to be displayed, the zoom position indication appears for about 1 second.

■ To stop using the playback zoom

Rotate the zoom lever towards [] [W] or press [MENU/SET].

■ To delete a picture during the playback zoom

- 1 Press [].
- 2 Press ▲ to select [YES].
- 3 Press [MENU/SET].




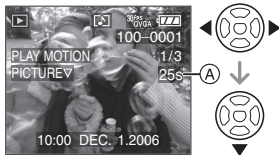
- Even if the indications on the screen are turned off in normal playback mode (P38), the magnification and operation appear on the screen when the playback zoom is activated. You can switch between displaying or not displaying the indications on the screen by pressing [DISPLAY]. When you set the magnification to 1X, the indications on the screen are displayed as in normal playback mode.
- The more a picture is enlarged, the more its quality deteriorates.
- If you want to save the enlarged picture, use the trimming function. (P95)
- The playback zoom may not operate if pictures have been recorded with other equipment.

Playing Back Motion Pictures/Pictures with Audio



■ Motion pictures

Press ◀/▶ to select a picture with a motion picture icon [] and then press ▼ to play back.



- The motion picture recording time (A) is displayed on the screen. After playback starts, the motion picture recording time disappears and the elapsed playback time is displayed on the bottom right of the screen.

For example, 1 hour 20 minutes and 30 seconds is displayed as [1h20m30s].

- The cursor displayed during playback is the same as ▲/▼/◀/▶.
- Press ▼ again to stop motion picture playback and return to the normal playback screen.



Fast forwarding/Fast rewinding


Press and hold ◀/▶ during motion picture playback.

- ◀: Fast rewind
- ▶: Fast forward
- The camera returns to normal motion picture playback when ◀/▶ is released.

To pause

- Press ▲ during motion picture playback.
- Press ▲ again to cancel pause.

■ Pictures with audio

Press ◀/▶ to select a picture with the audio icon [] and then press ▼ to play back.



- Refer to [AUDIO REC.] (P79) and [AUDIO DUB.] (P93) for information about how to create still pictures with audio.



- Sound can be heard through the speaker. Refer to [VOLUME] (P23) for information about how to adjust the volume in the [SETUP] menu.
- The file format that can be played back with this camera is QuickTime Motion JPEG.
- Please note that the bundled software includes QuickTime to play back motion picture files created with the camera on the PC.
- Some QuickTime Motion JPEG files recorded by a PC or other equipment may not play back on the camera.
- If you play back motion pictures that have been recorded with other equipment, the picture quality may deteriorate or the pictures may not play back.
- When using a high capacity card, it is possible that fast rewinding may be slower than usual.
- You cannot use the following functions with motion pictures and pictures with audio.
 - Playback zoom (While playing back or pausing motion pictures and while playing audio)
 - [ROTATE DISP.]/[ROTATE]/[AUDIO DUB.] (Motion pictures only)
 - [RESIZE]/[TRIMMING]/[ASPECT CONV.]

Using the [REC] Mode Menu




Increase the variety of pictures you can take by setting color effect, picture adjustment etc.

- Set the mode dial to the desired recording mode.
- Menu items differ depending on the mode selected with the mode dial (P5). This page describes how to set [AUDIO REC.] in program AE mode [P]. (Refer to P75 to 85 for each menu item.)
- Select [RESET] in the [SETUP] menu to return the menu settings to the initial settings at the time of purchase. (P23)


1 Press [MENU/SET].

2 Press ▲/▼ to select the menu item.

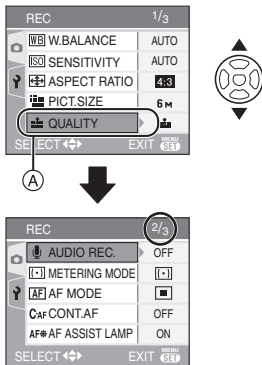

- Press ▼ at (A) to switch to the next menu screen.

3 Press ►, press ▲/▼ to select the setting and then press [MENU/SET].

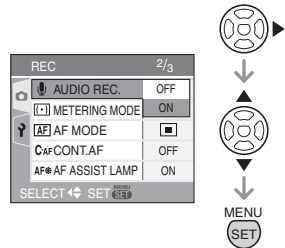


4 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

■ About the menu screen items

- There are 3 menu screens (1/3, 2/3 and 3/3).
- You can switch menu screens from any menu item by rotating the zoom lever.

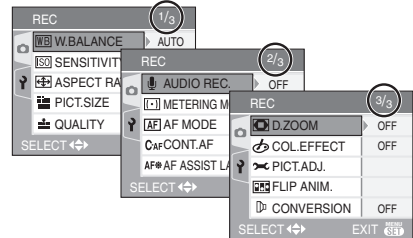

■ Using quick setting




You can use the joystick to easily set the following 4 items when recording.

- White balance (P75)
- ISO sensitivity (P77)
- Picture size (P78)
- Quality (P78)

1 Keep pressing the joystick when recording.



2 Tilt the joystick towards ▲/▼/◀/▶ to select an item and then press the center of the joystick to finish.

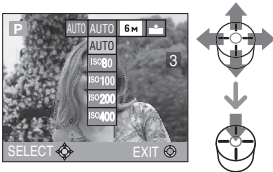

- The menu items that can be set differ depending on the recording mode.

[W.BALANCE]

[WB] Adjusting the hue for a more natural picture



Press [MENU] to display the [REC] mode menu and select the item to set. (P74)

This function allows you to reproduce a white color close to real life in pictures recorded under sunlight, halogen lighting etc. in which the white color may appear reddish or bluish. Select a setting that matches the recording conditions.


| | |
|----------------------|--|
| AUTO | for auto setting (auto white balance) |
| (Daylight) | for recording outdoors on a bright day |
| (Cloudy) | for recording outdoors on a cloudy day |
| (Halogen) | for recording under halogen lighting |
| (Flash) | for recording with the flash only |
| (White set 1) | for using the preset white balance |
| (White set 2) | for using the preset white balance |
| (White set) | for setting the white balance again |

- If you select a setting other than [AUTO], you can finely adjust the white balance.

■ Auto white balance

The available white balance range is shown in the following illustration. When you take a picture beyond the available white balance range, the picture may appear reddish or bluish. Also, auto white balance may not operate properly if the subject is surrounded by many light sources. In these cases, set the white balance to a mode other than [AUTO].

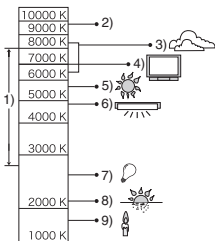


- 1 Auto white balance will work in the following range.
- 2 Blue sky
- 3 Cloudy sky (Rain)
- 4 TV screen
- 5 Sunlight
- 6 White fluorescent light
- 7 Incandescent light bulb
- 8 Sunrise and sunset
- 9 Candlelight




K=Kelvin Color Temperature

■ Setting the white balance manually (White set SET)

Use this to set the white balance manually.

- 1 Select [ SET] (White set) and then press [MENU/SET].
- 2 Select [ WHITE SET 1] or [ WHITE SET 2] and then press [MENU/SET].

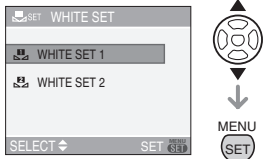






- 3 Aim the camera at a sheet of white paper etc. so that the frame in the center is filled by the white object only and then press [MENU/SET].





   
- 4 Press [MENU/SET] twice to close the menu.
 - You can also press the shutter button halfway to finish.



■ Finely adjusting the white balance (white balance fine adjustment)

You can adjust the white balance finely when you cannot acquire the desired hue by setting the white balance.

- Set the white balance to [] / [] / [] / [] / [].

- 1 Press  several times until [WB ADJUST.] appears and then press  /  to adjust the white balance.



-  [RED]: Press when the hue is bluish.
-  [BLUE]: Press when the hue is reddish.
- Select [0] to return to the original white balance.

- 2 Press [MENU/SET] to finish.

- You can also press the shutter button halfway to finish.

**About the white balance**

- When you take a picture with the flash, the white balance is automatically adjusted [except for [☀] (Daylight)/[🔦] (Flash)]. However, the white balance may not be properly adjusted if the flash level is insufficient.
- The white balance cannot be set in simple mode [♥] and scene mode.

About the white balance fine adjustment

- You can finely adjust the white balance independently for each white balance item.
- The white balance icon on the screen turns red or blue.
- The white balance fine adjustment setting is reflected in the picture when using the flash.
- The white balance fine adjustment setting is memorized even if the camera is turned off.
- The white balance fine adjustment level in [🔧] or [🔧] (White set) returns to "0" when you reset the white balance using White set [🔧]SET].
- You cannot finely adjust the white balance when [COL.EFFECT] (P82) is set to [COOL], [WARM], [B/W] or [SEPIA].

**[SENSITIVITY]***Setting the light sensitivity*

Press [MENU] to display the [REC] mode menu and select the item to set. (P74)
ISO is a measure of sensitivity to light. The higher the sensitivity is set, the less light is needed to take a picture so the camera becomes more suitable for recording in dark places.

- When setting to [AUTO], the ISO sensitivity is automatically adjusted from [ISO80] to [ISO200] according to the brightness. (It can be adjusted from [ISO80] to [ISO400] when using the flash.)




| ISO sensitivity | 80 ←————→ 400 | |
|---|---------------|--------------|
| Use in bright places (e.g. outdoors) | Suitable | Not suitable |
| Use in dark places | Not suitable | Suitable |
| Shutter speed | Slow | Fast |
| Noise | Less | Increased |




- The ISO sensitivity can be set to [AUTO], [ISO800] or [ISO1600] in [HIGH SENS.] in scene mode.
- The ISO sensitivity cannot be set to [AUTO] in Aperture-priority AE, Shutter-priority AE or Manual exposure.
- To avoid picture noises, we recommend reducing the ISO sensitivity, setting [NOISE REDUCTION] in [PICT.ADJ.] to [HIGH] or setting the items except [NOISE REDUCTION] to [LOW] to take pictures. (P83)
- Refer to P53 for information about Shutter speed.
- ISO sensitivity cannot be set in scene mode, motion picture mode [🎥] and simple mode [♥].

**[ASPECT RATIO]***Setting the aspect ratio of pictures*

Press [MENU] to display the [REC] mode menu and select the item to set. (P74)
By changing the aspect ratio, you can select an angle of view that matches the subject.

| | |
|-------------|---|
| 4:3 | <p>Select to take pictures with the same aspect ratio as a 4:3 TV or a computer monitor.</p>  |
| 3:2 | <p>Select to take pictures with the same 3:2 aspect ratio as 35 mm film.</p>  |
| 16:9 | <p>This is suitable for landscapes etc. where a wide view is preferable. This is also suitable for playing back pictures on a wide-screen TV, high-definition TV etc.</p>  |




- In motion picture mode [], you can select [**4:3**] or [**16:9**].
- The ends of the recorded pictures may be cut at printing. (P115)

[PICT.SIZE]/[QUALITY]



Setting a picture size and quality that matches your use of the pictures



Press [] to display the [REC] mode menu and select the item to set. (P74)
A digital picture is made of numerous dots called pixels. Although you cannot see the

78

VQT0V63

difference on the camera's screen, the more the pixels the finer the picture will be when it is printed on a large piece of paper or displayed on a computer monitor. Picture quality refers to the compression rate when saving digital pictures.



- (A) Many pixels (Fine)
- (B) Few pixels (Rough)

■ **Number of pixels**

You can print pictures more clearly when a large picture size [**6M**] (6M) is selected. When a smaller picture size [**0.3M**] (0.3M EZ) is selected, you can record more pictures and attach them to an e-mail or post them on a website because their file size is small.

■ **When the aspect ratio is [**4:3**].**

| | |
|-----------------------|------------------|
| 6M (6M) | 2816×2112 pixels |
| 4M (4M EZ) | 2304×1728 pixels |
| 3M (3M EZ) | 2048×1536 pixels |
| 2M (2M EZ) | 1600×1200 pixels |
| 1M (1M EZ) | 1280×960 pixels |
| 0.3M (0.3M EZ) | 640×480 pixels |

■ **When the aspect ratio is [**3:2**].**




| | |
|-----------------------|------------------|
| 5M (5M) | 2816×1880 pixels |
| 2.5M (2.5M EZ) | 2048×1360 pixels |

■ **When the aspect ratio is [**16:9**].**


| | |
|--------------------|------------------|
| 4.5M (4.5M) | 2816×1584 pixels |
| 2M (2M EZ) | 1920×1080 pixels |


■ Quality

You can increase the number of recordable pictures without changing the picture size if quality is set to [STANDARD].

| | |
|---|--|
|  | TIFF (Uncompressed): This type is suitable when editing and processing pictures with retouch software. |
|  | Fine (Low compression): This gives priority to picture quality. Picture quality will be high. |
|  | Standard (High compression): This gives priority to the number of recordable pictures. Standard quality pictures are recorded. |




- The number of pixels that can be selected differs depending on the aspect ratio. If you change the aspect ratio, set the picture size.
- “EZ” is an abbreviation of [Extended optical Zoom]. This is a function which further extends the optical zoom ratio. If you select a picture size with EZ displayed, the zoom ratio is extended to a maximum of 16.5× when the digital zoom is set to [OFF]. (P31)
- The extended optical zoom does not work in [HIGH SENS.] in scene mode so the picture size for [EZ] is not displayed.
- In motion picture mode [], the picture size is fixed to VGA (640×480 pixels), QVGA (320×240 pixels) or 16:9 (848×480 pixels).
- Pictures may appear mosaic depending on the subject and the recording conditions.
- Refer to P117 for information about the number of recordable pictures.
- The number of recordable pictures depends on the subject.
- The number of recordable pictures displayed on the screen may not correspond with recorded frames.


- In simple mode [], the settings become as follows.

–  ENLARGE:

[] (6M [])/Fine

–  4”×6”/10×15cm:

[] (2.5M EZ [])/Standard

–  E-MAIL:

[] (0.3M EZ [])/Standard


- When the quality is set to [TIFF], a standard quality JPEG picture is created at the same time.
- You cannot select the following functions when the quality is set to [TIFF].
 - Audio Dubbing
 - Burst mode
 - Resize
 - Trimming
 - Audio Recording
 - Auto Bracket




[AUDIO REC.]

Recording still pictures with audio



Press [] to display the [REC] mode menu and select the item to set. (P74)
 You can record audio with the still picture if this is set to [ON]. This means you can record the conversation that took place when you were recording or an explanation of the picture.

- [] appears on the screen when you set [AUDIO REC.] to [ON].
- Focus on the subject and press the shutter button to start recording. Recording will automatically stop about 5 seconds later. There is no need to press and hold the shutter button.
- Audio is recorded from the built-in microphone on the camera.
- If you press [MENU/SET] during audio recording, the audio recording is canceled. The audio is not recorded.

- The total number of pictures that can be stored on each card will decrease slightly when audio is recorded with each picture.




- You cannot take pictures with audio in auto bracket, burst mode or [STARRY SKY] in scene mode.

[METERING MODE]

 
 


Deciding the method to measure brightness




Press [] to display the [REC] mode menu and select the item to set. (P74)

You can switch to the following metering modes.

| | |
|-----|--|
| [•] | <p>Multiple: This is the method in which the camera measures the most suitable exposure by judging the allocation of brightness on the whole screen automatically. Usually, we recommend using this method.</p> |
| [] | <p>Center weighted: This is the method used to focus on the subject on the center of the screen and measure the whole screen evenly.</p> |
| • | <p>Spot: This is the method to measure the subject in the spot metering target .</p>  |

[AF MODE] *Setting the focus method*



Press [] to display the [REC] mode menu and select the item to set. (P74)
Select the mode that matches the recording conditions and the composition.

(9-area-focusing):

The camera focuses on any of 9 focus areas. This is effective when the subject is not in the center of the screen.



[3-area-focusing (High speed)]:

The camera quickly focuses on any of 3 focus areas points – left, right or center. This is effective when the subject is not in the center of the screen.



[1-area-focusing (High speed)]:

The camera quickly focuses on the subject in the AF area on the center of the screen.



(1-area-focusing):

The camera focuses on the subject in the AF area on the center of the screen.



(Spot-focusing):

The camera focuses on a limited narrow area in the screen.



■ About 3-area-focusing (High speed) and 1-area-focusing (High speed)

- You can focus on the subject more quickly than other AF modes.
- The picture may stop moving for a moment before being brought into focus when you press the shutter button halfway. This is not a malfunction.



- The AF area displayed on the center of the screen is bigger than usual when using the digital zoom or when taking pictures in dark places.



- The camera is focusing on all the AF areas when multiple AF areas (max. 9 areas) light at the same time. The focus position is not predetermined. It is set to a position automatically determined by the camera at the time of focusing. If you want to determine the focus position to take pictures, switch the AF mode to 1-area-focusing mode (High speed), 1-area-focusing mode or Spot-focusing mode.
- Switch the AF mode to 1-area-focusing mode (High speed) or 1-area-focusing mode if it is difficult to focus using Spot-focusing mode.
- The AF mode cannot be set in simple mode [♥].

[CONT.AF]



Continuously focusing on a subject



Press [MENU] to display the [REC] mode menu and select the item to set. (P74)

This mode allows you to compose a picture more easily by always focusing on the subject.

The time required for focusing when the shutter button is pressed halfway will be reduced when the AF mode is set to 1-area-focusing, 1-area-focusing (High speed) or spot focusing.

- The [CAF] indication appears when it is set to [ON].



 
- The battery will be consumed faster than usual.
- It may take time to focus on the subject if you rotate the zoom lever from Wide to Tele or suddenly change the subject from a distant one to a nearby one.
- Press the shutter button halfway again when it is difficult to focus on the subject.
- The [CONT.AF] setting is fixed to [OFF] in [NIGHT PORTRAIT] (P60), [NIGHT SCENERY] (P61), [PANNING] (P61), [FIREWORKS] (P63) and [STARRY SKY] (P63) in scene mode, in simple mode [♥] and when manual focus is set.

[AF ASSIST LAMP]
AF* *Focusing in low light conditions becomes easier*



Press [MENU] to display the [REC] mode menu and select the item to set. (P74)
 Illuminating the subject makes it easier for the camera to focus when recording in low light conditions that make focusing difficult.

If the AF assist lamp is set to [ON], an AF area with a size wider than usual is displayed and the AF assist lamp (A) turns on when you press the shutter button halfway in dark places etc.



| | |
|------------|---|
| ON | The AF assist lamp turns on in low light conditions. At this time, the AF assist lamp icon [AF*] appears on the screen. The effective range of the AF assist lamp is 1.5 m (4.92 feet). |
| OFF | The AF assist lamp does not turn on. |



- Be careful about the following when using the AF assist lamp.
 - Do not look at the AF assist lamp from close up.
 - Detach the lens hood.
 - Do not cover the AF assist lamp with your fingers or other objects.
- When the AF assist lamp is turned on, the AF area on the center of the screen is displayed and it is bigger than usual. (P81)
- When you do not want to use the AF assist lamp (e.g. when taking pictures of animals in dark places), set the [AF ASSIST LAMP] to [OFF]. In this case, it will become more difficult to focus on the subject.

- The setting for [AF ASSIST LAMP] is fixed to [ON] in simple mode [♥].
- A vignetting effect may appear on the circumference of the AF assist lamp because the AF assist lamp may be obscured by the lens, however, this does not cause a problem with the performance of the camera.
- The setting for the [AF ASSIST LAMP] is fixed to [OFF] in [SCENERY] (P60), [NIGHT SCENERY] (P61) [PANNING] (P61) and [FIREWORKS] (P63) in scene mode.

[COL.EFFECT]
Setting color effects for the recorded pictures



Press [MENU] to display the [REC] mode menu and select the item to set. (P74)
 Select a color effect that matches the recording conditions and your image of the recording.

| | |
|--------------|--------------------------------------|
| COOL | The picture becomes bluish. |
| WARM | The picture becomes reddish. |
| B/W | The picture becomes black and white. |
| SEPIA | The picture becomes sepia. |

[PICT.ADJ.]
Adjusting the picture quality for the recorded pictures



Press [MENU] to display the [REC] mode menu and select the item to set. (P74)
 Select an effect that matches the recording situation and your image of the recording.

| | | |
|------------------------|-------------|--|
| CONTRAST | HIGH | Increases the difference between the brightness and the darkness in the picture. |
| | LOW | Decreases the difference between the brightness and the darkness in the picture. |
| SHARPNESS | HIGH | The picture is sharply defined. |
| | LOW | The picture is softly focused. |
| SATURATION | HIGH | The colors in the picture become vivid. |
| | LOW | The colors in the picture become natural. |
| NOISE REDUCTION | HIGH | The noise reduction effect is enhanced. Picture resolution may deteriorate slightly. |
| | LOW | The noise reduction effect is reduced. You can obtain pictures with higher resolution. |



- When you take pictures in dark places, noise may become visible. To avoid picture noise, we recommend setting [NOISE REDUCTION] in [PICT.ADJ.] to [HIGH] or setting the items except [NOISE REDUCTION] to [LOW] to take pictures.

[FLIP ANIM.]



Connecting images to create a motion picture file




Press [MENU] to display the [REC] mode menu and select the item to set. (P74)
This camera allows you to create motion picture files up to 20 seconds long by

connecting images recorded in flip animation mode.


Example:

When capturing images of the subject in sequence moving the camera little by little and aligning the images, the subject looks as if it is moving.

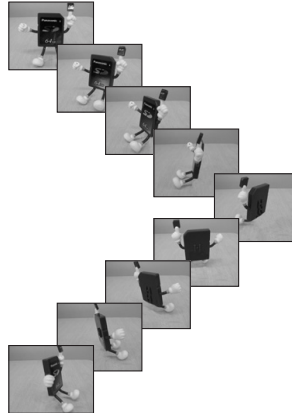


- You can play back created flip animations with the same method used to play back motion pictures. (P73)

1 Press ▲/▼ to select [FLIP ANIM.] and then press ►.

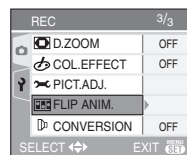


2 Select [PICTURE CAPTURE] and then press ►.

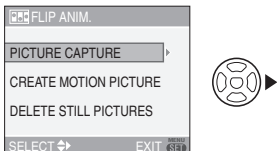


- The picture size is 320×240 pixels.

3 Press the shutter button and capture the images one frame at a time.

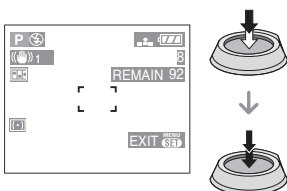


- You can check the recorded image with ▼ and the previous or following image with ◀/▶.
- Delete unnecessary images with the [] button.
- You can record up to 100 pictures. The number of recordable pictures displayed is an approximation.


4 Press [MENU/SET], press ▲/▼ to select [CREATE MOTION PICTURE] and then press ►.

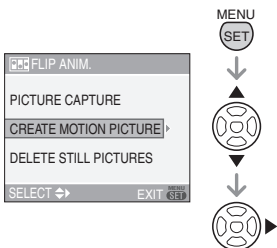

5 Select [FRAME RATE] and then press ►.

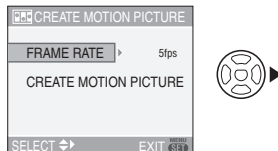


6 Press ▲/▼ to select [5fps] or [10fps] and then press [MENU/SET].

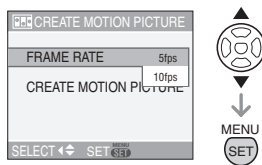

| | |
|--------------|---|
| 5fps | 5 frames/sec. |
| 10fps | 10 frames/sec. (The motion pictures become smoother.) |

7 Press ▼ to select [CREATE MOTION PICTURE], press ► and then create a flip animation.

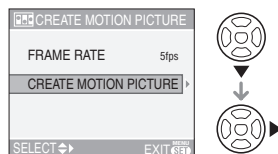

- The file number appears after creating a flip animation.
- Press [MENU/SET] three times to close the menu after creating the flip animation.

■ Deleting all still images used to create flip animation

When selecting [DELETE STILL PICTURES] in [FLIP ANIM.] menu, a

confirmation screen appears. Select [YES] with ▲ and then press [MENU/SET].



- You cannot use the direction detection function, burst mode, auto bracket and [AUDIO REC.].
- The images in each frame do not appear in normal review. (P34)
- If you execute [CREATE MOTION PICTURE], flip animation is made from all pictures recorded for flip animation. Delete unnecessary pictures.
- Audio cannot be recorded.
- You cannot record audio using the audio dubbing. (P93)
- Playback may not be possible on other equipment. You may also hear noise during playback on other equipment which does not have a mute function.



[CONVERSION]

Using an optional lens




Press [MENU/SET] to display the [REC] mode menu and select the item to set. (P74)

The tele conversion lens (DMW-LT55; optional) allows you to record even more close-up pictures (1.7× more). The wide conversion lens (DMW-LW55; optional) allows you to record even wider angle pictures (0.7× wider). The close-up lens (DMW-LC55; optional) allows you to take close-up pictures of a small subject.

- The lens adaptor (DMW-LA2; optional) is necessary to attach a conversion lens or close-up lens.


1 Remove the lens cap, lens hood and hood adaptor.

2 Attach the lens adaptor (DMW-LA2; optional).

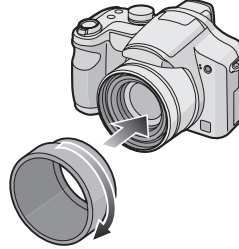


- Conversion lens cannot be used together with the ND filter (DMW-LND52) and the MC protector (DMW-LMC52). Always detach the ND filter or MC protector before attaching the conversion lens.
- Rotate the lens slowly and carefully.

3 Attach the conversion lens or close-up lens.

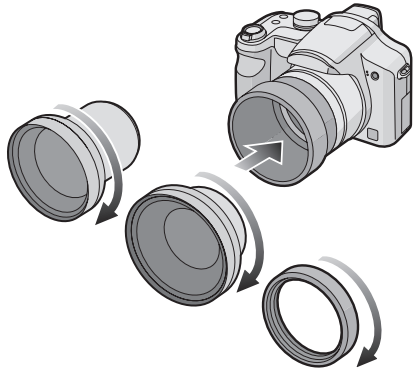


- You cannot attach a conversion lens or the filter to the hood adaptor (supplied).

4 Turn the camera on, press ▲/▼ to select [CONVERSION] and then press ►.

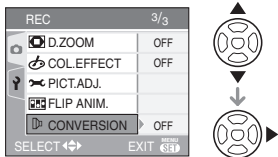

5 Press ▲/▼ to set to [Wide], [Tele] or [Macro] and then press [MENU/SET].

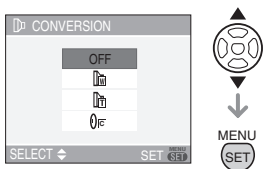

- [OFF]:
When you do not attach the conversion lens.
- [Wide]:
When you attach the wide conversion lens.
- [Tele]:
When you attach the tele conversion lens.
- [Macro]:
When you attach the close-up lens
- Press the shutter button halfway or press [MENU/SET] to close the menu after finishing the setting.

■ Recordable range when using a conversion lens

When attaching the tele conversion lens

| | Wide | Tele |
|---------------|------|----------------------|
| Normal | — | 5.4 m (18 feet) to ∞ |
| Macro | — | 5.4 m (18 feet) to ∞ |

When attaching the wide conversion lens

| | Wide | Tele |
|---------------|-----------------------|------|
| Normal | 15 cm (0.5 feet) to ∞ | — |
| Macro | 15 cm (0.5 feet) to ∞ | — |

When attaching the close-up lens

| | Wide | Tele |
|-------------------|--------------------------------------|--------------------------------------|
| Normal | 20 cm (0.7 feet) to 50 cm (1.7 feet) | 40 cm (1.3 feet) to 50 cm (1.7 feet) |
| Macro | 5 cm (0.17 feet) to 50 cm (1.7 feet) | 40 cm (1.3 feet) to 50 cm (1.7 feet) |
| Tele Macro | — | 33 cm (1.1 feet) to 50 cm (1.7 feet) |

- The zoom is fixed to Wide when using the tele conversion lens and is fixed to Tele when using the wide conversion lens.

| | Indication | Actual magnification |
|-----------------------------|------------|----------------------|
| Tele conversion lens | 12× | 20.4×* |
| Wide conversion lens | 1× | 0.7× |

- * The actual magnification when using the digital zoom (P32) and the extended optical zoom (P31) is 1.7× the zoom magnification displayed when set to Tele.
- The full range of the zoom can be used when using the close-up lens.



- Digital zoom cannot be used when using a wide conversion lens.
- When there is dirt (water, oil, and fingerprints, etc.) on the surface of the lens, the image may be affected. Lightly wipe the surface of the lens with a soft, dry cloth before and after taking pictures.
- Ensure that [CONVERSION] is set to [OFF] when not using a conversion lens.
- When using the conversion lens:
 - The built-in flash cannot be activated.
 - If you set [CONVERSION] to [OFF], the performance of the conversion lens will not be optimal.
- When using the tele conversion lens:
 - We recommend using a tripod.
 - The stabilizer function may not work sufficiently.
 - The focus indication may light due to the jitter even if the subject is not focused.
 - The time required for focusing may become longer than usual.
- If you set [CONVERSION] to [0.5x], [1.5x] or [2.0x], you cannot use the AF assist lamp. (P82)
- Read the operating instructions of the conversion lens for details.

Using the [PLAY] mode menu




You can use various functions in playback mode to rotate pictures, set protection for them etc.

- Refer to P88 to 97 for each menu item.


1 Press [MENU/SET].

2 Press ▲/▼ to select the menu item.

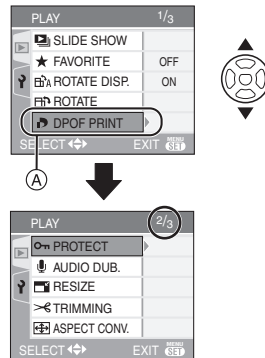

- Press ▼ at (A) to switch to the next menu screen.


3 Press ►.

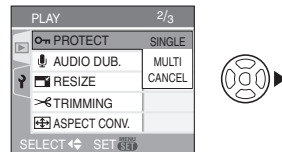

- After selecting a menu item in step 3, refer to the description of the menu item in the operating instructions and then set it.

■ About the menu screen items


- There are 3 menu screens (1/3, 2/3 and 3/3).
- You can switch menu screens from any menu item by rotating the zoom lever.

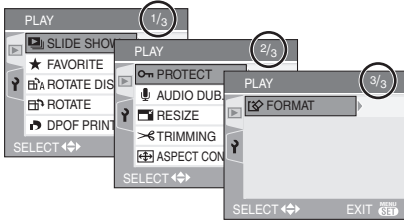

[SLIDE SHOW]
 Playing back pictures in order for a fixed duration

Press [MENU/SET] to display the [PLAY] mode menu and select the item to set. (P87)
 This is recommended when playing back pictures on a TV screen. You can skip unwanted pictures if [FAVORITE] (P89) has been set.

1 Press ▲/▼ to select [ALL] or [★] and then press [MENU/SET].


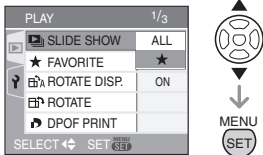


| | |
|-------|---|
| [ALL] | Displays all pictures. |
| [★] | Displays only those pictures that have been set as favorites (P89). |

- The screen shown in step 1 appears when [FAVORITE] is set to [ON]. When [FAVORITE] is set to [OFF], perform step 2 onwards.

- If none of the pictures have [★] displayed, you cannot select [★] even if [FAVORITE] is set to [ON].

 2 Press ▲ to select [START] and then press [MENU/SET].
 (Screen when [ALL] is selected)

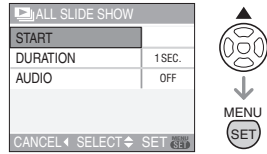

- The cursor displayed during a slide show (A) or while a slide show is paused (B) is the same as ▲/▼/◀/▶.
- Press ▲ to pause the slide show. Press ▲ again to cancel pause.
- Press ◀/▶ while paused to display the previous or next picture.

3 Press ▼ to finish.

■ Setting the audio and duration

Select [DURATION] or [AUDIO] on the screen shown in step 2 and set.

| | |
|------------|---|
| [DURATION] | Can be set to [1SEC.], [2SEC.], [3SEC.], [5SEC.] or [MANUAL] (manual playback). |
| [AUDIO] | If set to [ON], the audio of the pictures with audio is played back. |

- You can only select [MANUAL] when [★] has been selected in step 1.
- Press ◀/▶ to display the previous or next picture when [MANUAL] is selected.



- If you set [AUDIO] to [ON] and then play back a picture with audio, the next picture

will be displayed after the audio has finished.


- You cannot play back motion pictures and use power save in a slide show. (However, the setting for power save mode is fixed to [10MIN.] while pausing a slide show or playing back a manual slide show.)

★ [FAVORITE] Setting your favorite pictures

Press [MENU/SET] to display the [PLAY] mode menu and select the item to set. (P87)
You can do the following if a mark has been added to pictures and they have been set as favorites.

- Delete all the pictures not set as favorites. ([ALL DELETE EXCEPT ★]) (P36)
- Play back the pictures set as favorites only as a slide show. (P88)

1 Press ▼ to select [ON] and then press [MENU/SET].

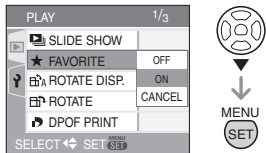

- You cannot set pictures as favorites if [FAVORITE] is set to [OFF]. Also the favorites icon [★] will not appear when [FAVORITE] is set to [OFF] even if it was previously set to [ON].
- You cannot select [CANCEL] if none of the pictures have [★] displayed.

2 Press [MENU/SET] to close the menu.

3 Press ◀/▶ to select the picture then press ▲.



- Repeat the above procedure.
- If ▲ is pressed while the [★] favorites icon (A) is displayed, [★] is cleared, and the favorites setting is canceled.
- You can set up to 999 pictures as favorites.

■ Deleting all favorites

- Select [CANCEL] on the screen shown in step 1 and then press [MENU/SET].
- Press ▲ to select [YES] and then press [MENU/SET].
- Press [MENU/SET] to close the menu.



- When printing pictures at a photo printing store, [ALL DELETE EXCEPT ★] (P36) is useful so only the pictures you want to be printed remain on the card.
- Use [LUMIX Simple Viewer] or [PHOTOfunSTUDIO-viewer-] on the CD-ROM (supplied), to set, confirm or delete favorites. (For information about this, refer to the separate operating instructions for PC connection.)
- You may not be able to set pictures taken with other equipment as favorites.




[ROTATE DISP.]/[ROTATE]

To display the picture rotated

Press [MENU/SET] to display the [PLAY] mode menu and select the item to set. (P87)
This mode allows you to automatically display pictures vertically if they were recorded holding the camera vertically or rotate pictures manually in 90° steps.

■ Rotate display
(The picture is automatically rotated and displayed.)

1 Press ▼ to select [ON] and then press [MENU/SET].

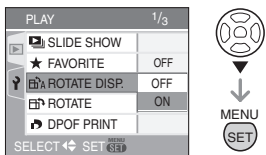


- The pictures are displayed without being rotated when you select [OFF].
- Refer to P35 for information about how to play back pictures.

2 Press [MENU/SET] to close the menu.

■ Rotate
(The picture is rotated manually.)

1 Press ◀/▶ to select the picture and then press ▼.

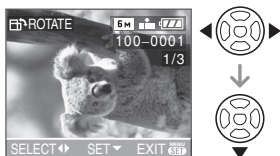

- The [ROTATE] function is disabled when [ROTATE DISP.] is set to [OFF].
- Motion pictures and protected pictures cannot be rotated.

2 Press ▲/▼ to select the direction to rotate the picture and then press [MENU/SET].




| | |
|--|--|
| | The picture rotates clockwise in steps of 90°. |
| | The picture rotates counter-clockwise in steps of 90°. |

3 Press [MENU/SET] twice to close the menu.

■ Example
When rotating clockwise (↷)

 Original picture




- When [ROTATE DISP.] is set to [ON], pictures recorded holding the camera vertically are played back vertically (rotated).
- If you take pictures when aiming the camera up or down, it may not be possible to display the pictures vertically. (P27)
- The picture may be slightly blurred when the camera is connected to the TV with the AV cable (supplied) and played back vertically.
- When you play back pictures on a PC, they cannot be displayed in the rotated direction unless the OS or software is compatible with Exif. Exif is a file format for still pictures which allows recording information etc. to be added. It was

established by JEITA [Japan Electronics and Information Technology Industries Association].



- Rotated pictures are displayed without being rotated when they are played back in multi playback.
- It may not be possible to rotate pictures that have been recorded with other equipment.


[DPOF PRINT]

Setting the picture to print and the number of prints

Press  to display the [PLAY] mode menu and select the item to set. (P87) DPOF (Digital Print Order Format) is a system that allows the user to select which pictures to print, how many copies of each picture to print and whether or not to print the recording date on the pictures when using a DPOF compatible photo printer or photo printing store. For details, ask at your photo printing store.



For more information visit:
http://panasonic.jp/dc/dpof_110/white_e.htm

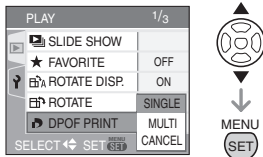Press  to select [SINGLE], [MULTI] or [CANCEL] and then press .




- You cannot select [CANCEL] if there are no prints that have been set in the DPOF print settings.

■ Single setting

1 Press  to select the picture to print and then press  to set the number of prints.





- The number of prints icon  appears.
- The number of prints can be set from 0 to 999. The DPOF print setting is canceled when the number of prints is set to "0".

2 Press  twice to close the menu.

■ Multi setting

1 Press  to select the picture to print then press  to set the number of prints.

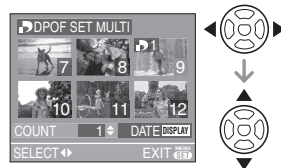


- The number of prints icon  appears.
- Repeat the above procedure. (You cannot set all the pictures at one time.)
- The number of prints can be set from 0 to 999. The DPOF print setting is canceled when the number of prints is set to "0".

2 Press [MENU/SET] twice to close the menu.

■ To cancel all settings

1 Press ▲ to select [YES] and then press [MENU/SET].

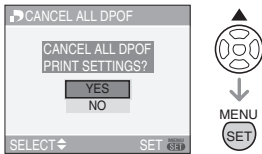

2 Press [MENU/SET] to close the menu.

■ To print the date

After setting the number of prints, set/cancel printing with the recording date by pressing [DISPLAY].



- The date print icon [DATE] appears.
- When you go to a photo printing store for digital printing, be sure to order the printing of the date additionally if required.
- Depending on the photo printing store or the printer, the date may not be printed even if you set to print the date. For further information, ask at your photo printing store or refer to the operating instructions for the printer.




- DPOF is an abbreviation of [Digital Print Order Format]. This feature allows you to write print information to media and then use the information on a DPOF-compliant system.
- DPOF print setting is a convenient function when printing pictures with a printer that supports PictBridge (P100). The date printing setting on the printer may take priority over the date printing setting on the camera. Check the date printing setting on the printer also. (P100)
- It is necessary to delete all previous DPOF print information made on other equipment when setting DPOF print on the camera.
- If the file is not based on the DCF standard, the DPOF print setting cannot be set. DCF is an abbreviation of [Design rule for Camera File system], stipulated by JEITA [Japan Electronics and Information Technology Industries Association].

[PROTECT]

Preventing accidental erasure of pictures

Press [MENU] to display the [PLAY] mode menu and select the item to set. (P87)
You can set protection for pictures you do not want to be deleted by mistake.

Press ▲/▼ to select [SINGLE], [MULTI] or [CANCEL] and then press [MENU/SET].

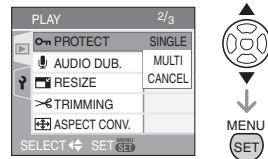

■ Single setting

1 Press ◀/▶ to select the picture and then press ▼ to set/cancel.



| | |
|--------|----------------------------------|
| SET | The protect icon [🔒] appears. |
| CANCEL | The protect icon [🔒] disappears. |

2 Press [MENU/SET] twice to close the menu.

■ Multi setting/To cancel all settings

Perform the same operation as in “[DPOF PRINT] Setting the picture to print and the number of prints”. (P91 to 92)



- If you press [MENU/SET] while canceling protection, the canceling will stop halfway.
- The protect setting may not be effective on other equipment.
- If you want to delete protected pictures, cancel their protection.
- Even if you protect pictures on a card, they will be deleted if the card is formatted. (P97)
- Even if you do not protect pictures on an SD Memory Card, they cannot be deleted when the card's write protect switch (A) is set to [LOCK].



- The following functions cannot be used with protected pictures.
 - [ROTATE]
 - [AUDIO DUB.]




[AUDIO DUB.]

Adding audio after taking pictures


Press [MENU/SET] to display the [PLAY] mode menu and select the item to set. (P87)
You can add the audio after taking a picture.

1 Press ◀/▶ to select the picture and then press ▼ to start audio recording.

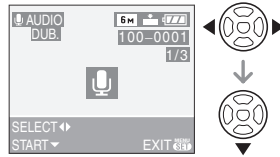

- The message [OVERWRITE AUDIO DATA?] screen appears when audio has already been recorded. Press ▲ to select [YES] and then press [MENU/SET] to start audio recording. (The original audio is overwritten.)
- Audio dubbing cannot be used with the following pictures.
 - Motion pictures
 - Protected pictures
 - Pictures recorded after setting the quality to [TIFF]
- Audio dubbing may not work properly on pictures recorded by other equipment.


2 Press ▼ to stop recording.

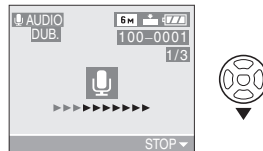

- The audio recording stops automatically if ▼ is not pressed after about 10 seconds.

3 Press [MENU/SET] twice to close the menu.

[RESIZE] Making the picture smaller

Press  to display the [PLAY] mode menu and select the item to set. (P87)
This function is useful if you want to reduce the file size of a picture to attach it to an e-mail or upload it to a website.

1 Press to select the picture and then press .



- The following pictures cannot be resized.
 - When the aspect ratio setting is **[4:3]**.
 - Pictures recorded in **[0.3M]** (0.3M EZ)
 - When the aspect ratio setting is **[3:2]**.
 - Pictures recorded in **[2.5M]** (2.5M EZ)
 - When the aspect ratio setting is **[16:9]**.
 - Pictures recorded in **[2M]** (2M EZ)
 - Pictures recorded after setting the quality to [TIFF]
 - Motion pictures
 - Pictures with audio
 - Flip animation
- It may not be possible to resize pictures recorded with other equipment.

2 Press to select the size and then press .



- Sizes smaller than the recorded picture are displayed.
 - When the aspect ratio setting is **[4:3]**.
 - **[4M]**/**[3M]**/**[2M]**/**[1M]**/**[0.3M]**
 - When the aspect ratio setting is **[3:2]**.
 - **[2.5M]**
 - When the aspect ratio setting is **[16:9]**.
 - **[2M]**

3 Press to select [YES] or [NO] and then press [MENU/SET].



- The picture is overwritten when you select [YES]. Resized pictures cannot be restored when they are overwritten.
- A resized picture is newly created when you select [NO].
- If the original picture is protected, you cannot overwrite it. Select [NO] and newly create a resized picture.

4 Press [MENU/SET] twice to close the menu.

[TRIMMING] Enlarging a picture and trimming it

Press [MENU/SET] to display the [PLAY] mode menu and select the item to set. (P87)
You can enlarge and then clip the important part of the recorded picture.

1 Press ◀/▶ to select the picture and then press ▼.




- The following pictures cannot be trimmed.
 - Pictures recorded after setting the quality to [TIFF]
 - Motion pictures
 - Pictures with audio
 - Flip animation
- It may not be possible to trim pictures recorded with other equipment.

2 Enlarge or decrease the parts to be trimmed with the zoom lever.



3 Press ▲/▼/◀/▶ to move the position of the part to be trimmed.

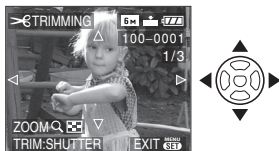

4 Press shutter button.

- The message [DELETE ORIGINAL PICTURE?] appears.

5 Press ▲/▼ to select [YES] or [NO] and then press [MENU/SET].



- The picture is overwritten when you select [YES]. The trimmed pictures cannot be restored when they are overwritten.
- A trimmed picture is newly created when you select [NO].
- When the original picture is protected, you cannot overwrite it. Select [NO] and newly create a trimmed picture.

6 Press [MENU/SET] twice to close the menu.




- Depending on the cut size, the picture size of the trimmed picture may become smaller than that of the original picture.
- The picture quality of the trimmed picture will deteriorate.

[ASPECT CONV.]**Changing the aspect ratio of a 16:9 picture**

Press **[MENU/SET]** to display the [PLAY] mode menu and select the item to set. (P87)
You can convert pictures taken with a [16:9] aspect ratio to a [3:2] or a [4:3] aspect ratio.

1 Press ▲/▼ to select [3:2] or [4:3] and then press [MENU/SET].

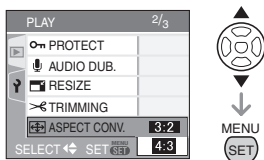


- Only pictures taken with a [16:9] aspect ratio can be converted.
- You may not be able to convert pictures taken on other equipment.

2 Press ◀/▶ to select a picture and then press ▼.




- If you select and set a picture with an aspect ratio other than [16:9], the message [CANNOT BE SET ON THIS PICTURE] is displayed on the screen.

3 Press ◀/▶ to determine the horizontal position and press the shutter button to set.

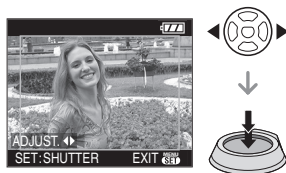

- Use ▲/▼ to set the frame position for pictures rotated vertically.

4 Press ▲/▼ to select [YES] or [NO] and then press [MENU/SET].

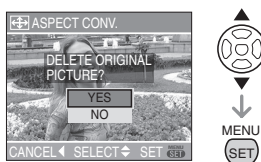


- You cannot overwrite the original picture when it is protected.

5 Press [MENU/SET] twice to close the menu.




- After converting the aspect ratio, the picture size may become larger than that of the original picture.
- The following pictures cannot be converted.
 - Pictures with audio
 - Motion pictures
 - Pictures recorded after setting the quality to [TIFF]
- Files that do not conform to the DCF standard cannot be converted. DCF is an abbreviation of [Design rule for Camera File system], stipulated by JEITA [Japan Electronics and Information Technology Industries Association].

[FORMAT] Initializing the card

Press [] to display the [PLAY] mode menu and select the item to set. (P87)
It is not usually necessary to format a card.
Format it when the message [MEMORY CARD ERROR] appears.

Press ▲ to select [YES] and then press [MENU/SET].

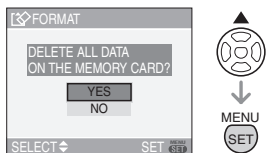

- Formatting irretrievably deletes all the data including any protected pictures. Check the data carefully before formatting.
- If the card has been formatted on a PC or other equipment, format it on the camera again.
- Use a battery with sufficient battery power (P12) or the AC adaptor (DMW-AC7; optional) when formatting.
- Do not turn the camera off during formatting.
- You cannot format an SD Memory Card when the card's write protect switch is set to [LOCK].
- If the card cannot be formatted, consult your nearest servicenter.

For USA assistance, please call: 1-800-272-7033
or send e-mail to : digitalstillcam@panasonic.com

For Canadian assistance, please call:
1-800-561-5505 or visit us at www.panasonic.ca


Connecting to a PC



You can acquire recorded pictures to a PC by connecting the camera and the PC. The software [LUMIX Simple Viewer] or [PHOTOfunSTUDIO-viewer-] (for Windows®) in the CD-ROM (supplied) allows you to easily acquire pictures recorded with the camera to a PC, print them and send them by e-mail.

If you use Windows 98/98SE, install the USB driver and then connect it to the computer.

For information about installing [LUMIX Simple Viewer] or [PHOTOfunSTUDIO-viewer-] etc., refer to the separate operating instructions for PC connection.

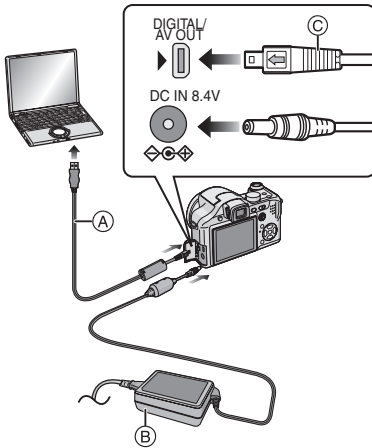

(A): USB connection cable (supplied)

 
(B): AC adaptor (DMW-AC7; optional)

- Use a battery with sufficient battery power or the AC adaptor (DMW-AC7; optional).
- Turn the camera off before inserting or removing the cable for the AC adaptor (DMW-AC7; optional).

1 Turn on the camera and the PC.


2 Connect the camera to a PC via the USB connection cable (A) (supplied).

- Connect the USB connection cable with the [◀] mark facing the [▶] mark on the [DIGITAL] socket.
- Hold the USB connection cable at (C) and insert straight in or take straight out. (If you forcibly insert the USB connection cable at a slant or upside down you can deform the connection terminals and damage the camera or the connected equipment.)



(D): This message appears during data transfer.

3 Press ▲ to select [PC] and then press [MENU/SET].

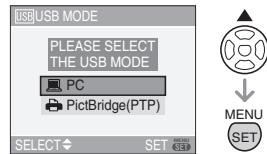

- If you set [USB MODE] in the [SETUP] menu to [PC] in advance, it is not necessary to set this every time you connect to a PC. (P23)
- If you set [USB MODE] to [PictBridge (PTP)] and then connect the camera to the PC, messages may appear on the screen of the PC. Select [Cancel] to close the messages and disconnect the camera from the PC. Set [USB MODE] to [PC] again.

[Windows]

The drive appears in the [My Computer] folder.

- If you are connecting the camera to a PC for the first time, the required driver is installed automatically so that the camera can be recognized by Windows Plug and Play. The drive then appears on the [My Computer] folder.


[Macintosh]

The drive is displayed on the screen.

- The drive is displayed as [LUMIX] when you connect the camera with no card inserted.
- The drive is displayed as [NO_NAME] or [Untitled] when you connect the camera with a card inserted.

■ Folder Composition

Folders are displayed as shown in the following illustration.

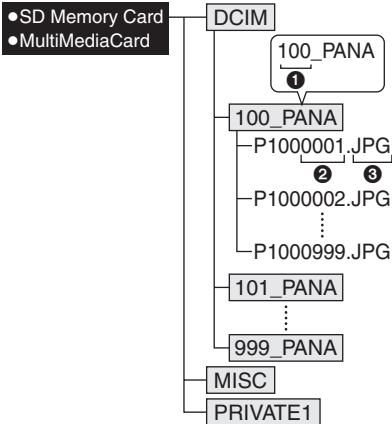

- 1 Folder number
- 2 File number
- 3 JPG: pictures
MOV: motion pictures

The items in each folder are as follows.

| DCIM | Folders from [100_PANA] to [999_PANA] |
|-----------------------------|---|
| 100_PANA to 999_PANA | Pictures/motion pictures |
| MISC | Files on which the DPOF print settings are recorded |
| PRIVATE1 | Pictures recorded in flip animation function |

- The data for up to 999 pictures recorded by the camera can be included in 1 folder. If the number of pictures exceeds 999, another folder is created.
- To reset the file number or the folder number, select [NO.RESET] in the [SETUP] menu. (P23)

■ Conditions under which a different folder number is used

In the following cases, the picture is not recorded in the same folder as the previously recorded picture. It is recorded in a folder with a new number.

- 1 When the folder just recorded to contains a picture file with the number 999 in it (example: P1000999.JPG).
- 2 When the card just recorded to contains, for example, a folder with the number 100 (100_PANA) in it and that card is removed and replaced with a card that has a folder with the number 100 in it recorded by a camera from a different maker (100XXXXX, with XXXXX being the name of the maker) and then a picture is recorded.
- 3 When recording after selecting [NO.RESET] (P23) from the [SETUP] menu. (Pictures will be recorded to the folder recorded to immediately before. By using [NO.RESET] on a card that does not contain folders or pictures, such as one just formatted, the folder number can be reset to 100.)

■ PictBridge (PTP) setting

Even if you set [USB MODE] to [PictBridge (PTP)], you can connect to your PC if the OS is Windows XP Home Edition/ Professional or Mac OS X.

- Pictures can only be read on the camera. They cannot be written to a card or deleted.
- When there are 1000 or more pictures on a card, the pictures may not be imported.




- Do not use any other USB connection cables except the supplied one.
- Do not disconnect the USB connection cable while [ACCESS] is displayed.
- If battery power is exhausted while the camera and the PC are communicating, the recorded data may be damaged. When you connect the camera to the PC, use a battery with sufficient battery power (P12) or the AC adaptor (DMW-AC7; optional).
- If the remaining battery power becomes low while the camera and the PC are communicating, the status indicator blinks and the alarm beeps. In this case, stop the communication at once on the PC.
- **When connecting the camera to a Windows 2000 OS PC with the USB connection cable, do not replace the card while the camera and the PC are connected. The information on the card may be damaged. Disconnect the USB connection cable before replacing the card.**
- Pictures edited or rotated with a PC may be displayed in black in playback mode (P35), multi playback (P70) and calendar playback (P71).
- For information about this, refer to the separate operating instructions for PC connection.
- Read the operating instructions for the PC.

Printing the Pictures



By connecting the camera directly to a printer supporting PictBridge via the USB connection cable (supplied), you can select the pictures to print and start printing on the camera's screen.

Set print settings such as the print quality on the printer beforehand. (Read the printer operating instructions.)

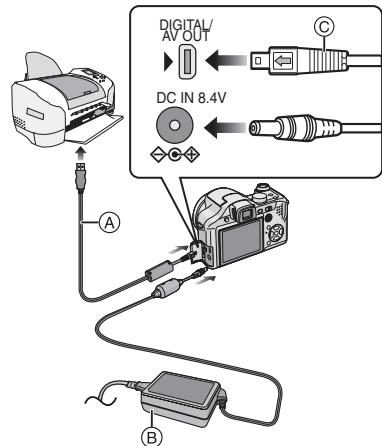

(A): USB connection cable (supplied)

(B): AC adaptor (DMW-AC7; optional)


- It may take time to print some pictures. Use a battery with sufficient battery power (P12) or the AC adaptor (DMW-AC7; optional) when you connect to a printer.
- Turn the camera off before inserting or removing the cable for the AC adaptor (DMW-AC7; optional).

1 Turn on the camera and the printer.

2 Connect the camera to a printer via the USB connection cable (A) (supplied).

- Connect the USB connection cable with the [◀] mark facing the [▶] mark on the [DIGITAL] socket.
- Hold the USB connection cable at © and insert straight in or take straight out.

3 Press ▼ to select [PictBridge (PTP)] and then press [MENU/SET].

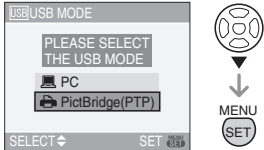


- If you set [USB MODE] in the [SETUP] menu to [PictBridge (PTP)] in advance, it is not necessary to set this every time you connect to a PC. (P23)



- Do not use any other USB connection cables except the supplied one.
- To print the age in [BABY1]/[BABY2] (P64) in scene mode or the departure date for [TRAVEL DATE] (P66), use the software [LUMIX Simple Viewer] or [PHOTOfunSTUDIO-viewer-] in the CD-ROM (supplied) and print from the PC. For information about this, refer to the separate operating instructions for PC connection.
- To find out more about PictBridge compliant printers, contact your local dealer.

■ Single picture

1 Press ▲ to select [SINGLE PICTURE] and then press [MENU/SET].

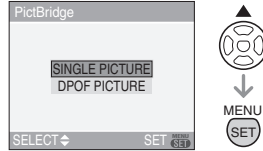


2 Press ◀/▶ to select the picture and then press ▼.



- The message disappears in about 2 seconds.

3 Press ▲ to select [PRINT START] and then press [MENU/SET].

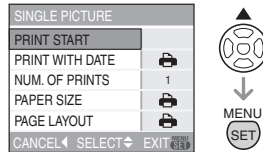

- Press [MENU/SET] to cancel printing.

4 Disconnect the USB connection cable after printing.

■ **Setting date printing, the number of prints, the paper size and the page layout**

Select and set each item in step 3.

- Items not supported by the printer are displayed in gray and cannot be selected.
- When you want to print pictures in a paper size or a layout which is not supported by the camera, set [PAPER SIZE] or [PAGE LAYOUT] to [] and then set the paper size or the layout on the printer. (For details, refer to the operating instructions of the printer.)

• **[PRINT WITH DATE]**

| | |
|-----|--|
| | Settings on the printer are prioritized. |
| OFF | Date is not printed. |
| ON | Date is printed. |

- If the printer does not support date printing, the date cannot be printed on the picture.

• **[NUM. OF PRINTS]**

Set the number of prints.

• **[PAPER SIZE]**

(Paper sizes that can be set with this unit)
The paper sizes are displayed on pages 1/2 and 2/2. Press ▼ to select.

| | |
|-----------|--|
| 1/2 | |
| | Settings on the printer are prioritized. |
| L/3.5"×5" | 89 mm×127 mm |
| 2L/5"×7" | 127 mm×178 mm |
| POSTCARD | 100 mm×148 mm |
| A4 | 210 mm×297 mm |
| 2/2* | |
| CARD SIZE | 54 mm×85.6 mm |
| 10×15cm | 100 mm×150 mm |
| 4"×6" | 101.6 mm×152.4 mm |
| 8"×10" | 203.2 mm×254 mm |
| LETTER | 216 mm×279.4 mm |

*These items cannot be displayed when the printer does not support the paper sizes.

• **[PAGE LAYOUT]**

(Layouts that can be set with this unit)


| | |
|--|--|
| | Settings on the printer are prioritized. |
| | 1 photo/page |
| | 1 photo/page |
| | 2 photo/page |
| | 4 photo/page |

- An item cannot be selected if the printer does not support the page layout.


■ **DPOF picture**

- **Set the DPOF print setting on the camera in advance. (P91)**

1 Press ▼ to select [DPOF PICTURE] and then press [MENU/SET].

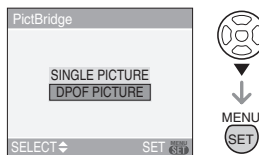

2 Press ▲ to select [PRINT START] and then press [MENU/SET].

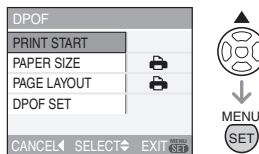

- You cannot select [PRINT START] when the DPOF print setting is not set. Select [DPOF SET] and then set the DPOF print setting. (P91)
- Press [MENU/SET] to cancel printing.

3 Disconnect the USB connection cable after printing.

■ Setting the date printing with the DPOF print in advance

We recommend setting DPOF date printing with [DPOF PRINT] (P92) in advance when the printer supports it. If you select [DPOF PICTURE], printing starts and the recording date is printed.

■ Layout printing

• When printing a picture several times on 1 sheet of paper

For example, if you want to print a picture 4 times on 1 sheet of paper, set [PAGE LAYOUT] to [4] and then set [NUM. OF PRINTS] to 4.

• When printing different pictures on 1 sheet of paper (only in DPOF printing)

For example, if you want to print 4 different pictures on 1 sheet of paper, set [PAGE LAYOUT] to [4] and then set [COUNT] in [DPOF PRINT] (P91) to 1 for each of the 4 pictures.



- Do not disconnect the USB connection cable when the cable disconnection warning icon [⚡] is displayed. (Depending on the printer, the icon may not be displayed.)
- If the remaining battery power becomes low while the camera and the printer are connected, the status indicator blinks and the alarm beeps. If this happens during printing, press [MENU/SET] and stop printing at once. If not printing, disconnect the USB connection cable.
- The camera is receiving an error message from the printer when the [●] indication lights orange during printing. After finishing printing, make sure there are no problems with the printer.


- If the total number of DPOF prints or the number of DPOF pictures printed is high, pictures may be printed several times. The remaining number of prints indicated may differ from the number set. This is not a malfunction.
- With date printing, the setting on the printer may take priority over the setting on the camera. Check the date print setting on the printer also.
- If the printer does not support TIFF printing, the JPEG picture created when the quality is set to [TIFF] is printed.
- If no JPEG picture is created when the quality is set to [TIFF], printing may not be possible.

Playing Back Pictures on a TV Screen



■ Playing back pictures using the AV cable (supplied)

- Set the aspect of the TV on the camera. (P24)
- Turn the camera and the TV off.

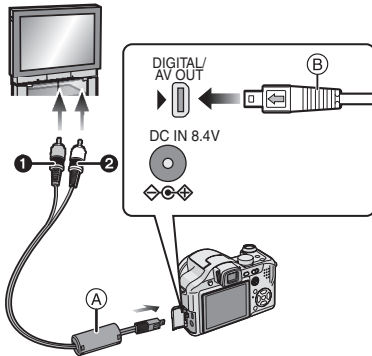

1 Connect the AV cable (A) (supplied) to the [AV OUT] socket on the camera.

- Connect the AV cable with the [←] mark facing the [▶] mark on the [AV OUT] socket.
- Hold the AV cable at (B) and insert straight in or take straight out.

2 Connect the AV cable to the video input and the audio input sockets on the TV.

- ① Yellow: to the video input socket
- ② White: to the audio input socket

3 Turn the TV on and select external input.

4 Turn the camera on.



- Do not use any other AV cables except the supplied one.
- The top and bottom or left and right of the picture may be cut off slightly when it is displayed due to the characteristics of the TV.
- Depending on the screen mode setting of the TV when you connect the camera to a wide-screen TV or a high-definition TV, the picture may be stretched horizontally or vertically and the top and bottom and/or left and right of the picture may be cut off when it is displayed. In this case, change the screen mode setting.
- Audio playback is monaural.
- Read the operating instructions for the TV.
- When you play back a picture vertically, it may be blurry.
- Select [TV ASPECT] to match the aspect of the TV.
- You can view pictures on TVs in other countries (regions) which use the NTSC or PAL system when you set [VIDEO OUT] in the [SETUP] menu. Even if you set [VIDEO OUT] to [PAL], the output signal will still be NTSC in the recording mode.

■ Playing back pictures on a TV with an SD Memory Card slot

Still pictures recorded on an SD Memory Card can be played back on a TV with an SD Memory Card slot.




- Depending on the TV model, pictures may not be displayed on the full screen.
- Motion pictures cannot be played back. To play back motion pictures, connect the camera to the TV with the AV cable (supplied).
- You may not be able to play back MultiMediaCards.

Using the MC Protector/ND Filter


The MC protector (DMW-LMC52; optional) is a transparent filter which affects neither the colors nor the amount of light, so it can always be used to protect the camera's lens.

The ND filter (DMW-LND52; optional) reduces the amount of light to approximately 1/8th (equal to adjusting the aperture value 3 increments) without affecting the color balance.

1 Attach the hood adaptor.

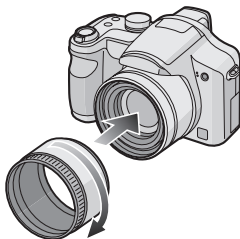


2 Attach the MC protector ① or the ND filter ②.

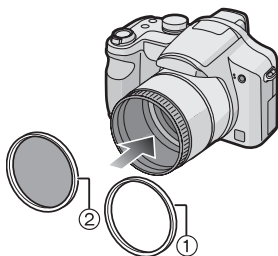

- You cannot attach the MC protector and the ND filter at the same time.
- If the MC protector/ND filter are tightened too much, you may not be able to remove them. Do not tighten them too much.

- Do not hold the MC protector/ND filter too tightly.
- When taking pictures with the flash using the MC protector or ND filter, vignetting effect may occur.
- If the MC protector/ND filter are dropped, they may be destroyed. Be careful not to drop them when attaching them to the camera.
- You can attach the lens hood when the MC Protector and ND Filter are attached.
- You cannot attach a conversion lens or the close-up lens to the hood adaptor.
- The lens adaptor (DMW-LA2; optional) is necessary to attach a conversion lens or close-up lens.
- **MC** = "Multi-coated"
- **ND** = "Neutral Density"

Screen Display

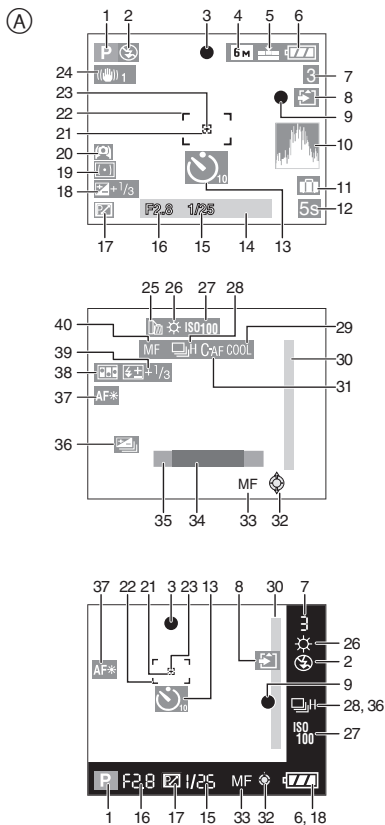

Ⓐ In recording

- 1 Recording mode (P25)
 - 2 Flash mode (P42)
 - 3 Focus (P25)
 - 4 Picture size (P78)
 - 5 Quality (P78)
- In Motion picture mode (P68)
- | | | | | |
|---------------|--------------|---------------|---------------|---------------|
| 30fps VGA | 10fps VGA | 30fps QVGA | 10fps QVGA | 30fps 16:9 |
| 10fps 16:9 | | | | |


: Jitter alert (P28)


- 6 Battery indication (P12)
- 7 Number of recordable pictures/
Available recording time
In Motion picture mode (P68)
e.g.: **R1h20m30s**
- 8 Card access indication (P15)
- 9 Recording state
- 10 Histogram (P40)
- 11 Travel date (P66)
- 12 Elapsed recording time (P68)
- 13 Self-timer mode (P46)
- 14 Current date and time
 - This is displayed for about 5 seconds when the camera is turned on, after setting the clock and after switching from playback mode to recording mode.

Zoom (P31)/Extended optical zoom (P31)/Digital zoom (P32)




- 15 Shutter speed (P25)
- 16 Aperture value (P25)
- 17 Program shift (P26)
- 18 Exposure compensation (P47)
- 19 Metering mode (P80)
- 20 High angle mode (P41)
: Power LCD (P41)
- 21 Spot AF area (P80)
- 22 AF area (P25)
- 23 Spot metering target (P80)
- 24 Optical image stabilizer (P49)
- 25 Conversion lens (P85)
- 26 White balance (P75)
- 27 ISO sensitivity (P77)
- 28 Burst (P50)
: Audio recording (P68, 79)

- 29 Color effect mode (P82)
- 30 Focus range (P56)
- 31 Continuous AF (P81)
- 32 Joystick operation (P26, 35, 36, 53, 54)
- 33 MF operation (P56)
- 34 Number of days that have passed since the travel date (P66)
 - This is displayed for about 5 seconds if the camera is turned on when the travel date is set, after setting the clock, departure date or travel date and after switching from playback mode to another mode.
- 35 Age (P64)
 - This is displayed for about 5 seconds when the camera is turned on in baby mode, after setting the clock or birthday, and after switching from other modes to baby mode.
- 36 Auto bracket (P48)
- 37 AF assist lamp (P82)
 - TELE : Tele macro (P51)
- 38 Flip animation (P83)
- 39 Flash output adjustment (P45)
- 40 MF (P56)

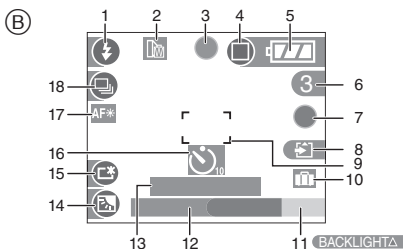

(B) Recording in simple mode

- 1 Flash mode (P42)
- 2 Conversion lens (P85)
- 3 Focus (P25)
- 4 Picture mode (P29)

: Jitter alert (P28)

- 5 Battery indication (P12)
- 6 Number of recordable pictures
- 7 Recording state
- 8 Card Access indication (P15)
- 9 AF area (P25)
- 10 Travel date (P66)
- 11 Operation for backlight compensation (P30)
- 12 Current date and time
 - This is displayed for about 5 seconds when the camera is turned on, after setting the clock and after switching from playback mode to simple mode.

Zoom (P31)/Extended optical zoom (P31)




- 13 Number of days that have passed since the travel date (P66)
 - This is displayed for about 5 seconds if the camera is turned on when the travel date is set, after setting the clock, departure date or travel date and after switching from playback mode to another mode.

14 Backlight compensation (P30)


15 Power LCD (P41)

16 Self-timer mode (P46)

17 AF assist lamp (P82)

TELE : Tele macro (P51)

18 Burst (P50)

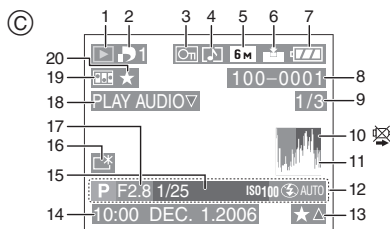


(C) In playback

 
- 1 Playback mode (P35)

- 2 Number of DPOF prints (P91)
- 3 Protected picture (P92)
- 4 Picture with audio/Motion pictures (P73)
- 5 Picture size (P78)
- 6 Quality (P78)



In Motion picture mode (P68)




In Simple mode (P29)


- 7 Battery indication (P12)
- 8 Folder/File number (P99)
- 9 Picture number/Total pictures
- 10 Cable disconnection warning icon (P103)
 - This is displayed when printing using a printer supporting PictBridge. (Depending on the printer, the icon may not be displayed.)

Motion picture recording time (P68):


- 11 Histogram (P40)
- 12 Recording information
- 13 Favorites settings (P89)/Elapsed playback time (P73): 
- 14 Recorded date and time
- 15 Age (P64)
- 16 Power LCD (P41)
- 17 Number of days that have passed since the travel date (P66)
- 18 Audio playback (P73)

 : In motion picture mode (P73)
- 19 Flip animation (P83)
- 20 Favorites (P89)

108

VQT0V63

Cautions for Use

■ Optimal use of the camera

Take care not to drop or knock the unit or put a lot of pressure on it.

- Take care not to drop or knock the bag that you inserted the unit in as it may strongly shock the unit.
- A strong shock may break the lens, screen or outer case and cause the camera to malfunction.

Keep the camera as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use the camera on top of or near a TV, the pictures and sound on the camera may be disrupted by electromagnetic wave radiation.
- Do not use the camera near cell phones because doing so may result in noise adversely affecting the pictures and sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect the camera, disturbing the pictures and sound.
- If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the batteries or disconnect AC adaptor (DMW-AC7; optional). Then reinsert the batteries or reconnect AC adaptor and turn the camera on.

Do not use the camera near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and sound may be adversely affected.

Always use the supplied cords and cables. If you use optional accessories, use the cords and the cables supplied with them.

Do not extend the cords or the cables.

Do not spray the camera with insecticides or volatile chemicals.

- If the camera is sprayed with such chemicals, the body of the camera may be damaged and the surface finish may peel off.
- Do not keep rubber or plastic products in contact with the camera for a long period of time.

Do not use benzine, thinner or alcohol for cleaning the camera.

- Before cleaning the camera, remove the battery or disconnect the AC adaptor (DMW-AC7; optional) from the electrical outlet.
- The body of the camera may be damaged and the surface finish may peel off.
- Wipe the camera with a soft, dry cloth. To remove stubborn stains, wipe with a cloth that is soaked in a detergent diluted with water and then with a soft, dry cloth.
- If you use a chemically treated cloth, read the instructions that come with the cloth.
- Wipe the dust or fingerprints with a soft, dry cloth. To remove stubborn stains, soak a dry cloth in water and then use it to wipe the dirt. Then wipe again with a dry cloth.
- Do not use a kitchen detergent or a chemically treated cloth.
- If rain water or other drops of water splash onto the camera, wet a soft cloth with tap water, wring it well, then use it to wipe the camera body carefully. Lastly, wipe the camera again with a dry cloth.

■ Card

Do not leave the card where the temperature is high, where

electromagnetic waves or static electricity are easily generated or exposed to direct sunlight.

Do not bend or drop the card.

- The card may be damaged or the recorded content may be damaged or deleted.
- Put the card in the card case or the storage bag after use and when storing or carrying the card.
- Do not allow dirt, dust or water to get into the terminals on the back of the card and do not touch the terminals with your fingers.

■ Battery

The battery is a rechargeable lithium ion battery. Its ability to generate power comes from the chemical reaction that takes place inside it. This reaction is susceptible to the surrounding temperature and humidity. If the temperature is too high or too low, the operating time of the battery will become shorter.

If you drop the battery accidentally, check to see if the body of the battery and the terminals are damaged.

- Inserting a damaged battery in the camera will damage the camera.

Bring charged spare batteries when going out.

- Be aware that the operating time of the battery becomes shorter in low temperature conditions such as at a ski resort.
- When you travel, do not forget to bring the battery charger (supplied) so that you can charge the battery in the country that you are travelling in.

Dispose of unusable battery.

- Batteries have a limited life.
- Do not throw batteries into fire because it may cause an explosion.
- Unusable batteries should be discarded in accordance with battery recycling laws.

Call the RBRC hotline on 1-800-822-8837 for information.

Do not allow battery terminals to come into contact with metal objects (such as necklaces, hairpins etc.).

- This can cause short circuiting or heat generation and you may be badly burned if you touch a battery.

■ **Charger**

- If you use the battery charger near a radio, the radio reception may be disturbed. Keep the charger 1 m (3.28 feet) or more away from radios.
- The charger may generate whirring sounds when it is being used. This is not a malfunction.
- After using the charger, be sure to disconnect it from the electrical outlet. (A very small amount of current is consumed if it is left connected.)
- Keep the terminals of the charger and battery clean.

Message Display

Confirmation messages or error messages will be displayed on the screen in some cases.

The major messages are described below as examples.

[THIS MEMORY CARD IS PROTECTED]

The Write-Protect switch on the SD Memory Card is moved to [LOCK]. Move the switch back to unlock it. (P15, 93)

[NO VALID PICTURE TO PLAY]

Record a picture or insert a card with a recorded picture and then play it.

[THIS PICTURE IS PROTECTED]

Delete or overwrite the picture after canceling the protect setting. (P92)

[THIS PICTURE CANNOT BE DELETED]/ [SOME PICTURES CANNOT BE DELETED]

Pictures not based on the DCF standard cannot be deleted. If you want to delete some pictures, format the card after saving necessary data on a PC etc. (P97)

[NO ADDITIONAL DELETE SELECTIONS CAN BE MADE]

You have exceeded the number of pictures that can be set at once with [MULTI DELETE]. Delete the selected pictures and then select [MULTI DELETE] again to delete any remaining pictures. More than 999 favorites have been set.

[CANNOT BE SET ON THIS PICTURE]/ [CANNOT BE SET ON SOME PICTURES]

If the pictures are not based on the DCF standard, the DPOF print cannot be set.

[MEMORY CARD ERROR FORMAT THIS CARD?]

The card format cannot be recognized by the camera. Format the card again with the camera after saving necessary data on a PC etc. (P97)

[PLEASE TURN CAMERA OFF AND THEN ON AGAIN]

This message appears when you exert pressure on the lens with your hand etc. or the camera is not operating properly. Turn the camera off and on. If the message persists, contact the dealer or your nearest servicenter.

[MEMORY CARD ERROR PLEASE CHECK THE CARD]

- An error has occurred accessing the card. Insert the card again.
- A card with a capacity more than 2 GB is inserted. Do not use a card with a capacity more than 2 GB.

[READ ERROR PLEASE CHECK THE CARD]

An error has occurred reading the data. Insert the card again. Make sure the card is inserted properly and then play back again.

[WRITE ERROR PLEASE CHECK THE CARD]

An error has occurred writing the data. Turn the camera off and remove the card. Insert the card again and turn the camera on. Make sure the camera is turned off before removing or inserting the card to avoid damage.

[MOTION RECORDING WAS CANCELLED DUE TO THE LIMITATION OF THE WRITING SPEED OF THE CARD]

- When you set the picture quality to [30fpsVGA] or [30fps16:9], we recommend using a high speed SD Memory Card with “10MB/s” or greater displayed on the package.
- Depending on the type of SD Memory Card, recording may stop in the middle.

[A FOLDER CANNOT BE CREATED]

A folder cannot be created because there are no remaining folder numbers that can be used. (P99)

Format the card after saving necessary data on a PC etc. (P97) If you execute [NO.RESET] in the [SETUP] menu after formatting, the folder number is reset to 100. (P23)

**[PICTURE IS DISPLAYED FOR 4:3 TV]/
[PICTURE IS DISPLAYED FOR 16:9 TV]**

- The AV cable is connected to the camera. Press [MENU/SET] if you want to delete this message at once.
- Select [TV ASPECT] in the [SETUP] menu to change the TV aspect. (P24)
- This message also appears when the USB connection cable is connected to the camera only. In this case, connect the other end of the USB connection cable to a PC or a printer. (P98, 100)

Troubleshooting

If you return the menu settings to the initial settings at the time of purchase, the condition may improve.

Select [RESET] in the [SETUP] menu. (P23)

■ Battery and power source

1: The camera cannot be operated even when it is turned on.

- Is the battery inserted correctly?
- Is the battery sufficiently charged?
 - Use a battery that has been sufficiently charged.

2: The LCD monitor turns off while the camera is turned on.

- Does the picture appear on the Viewfinder?
 - Press the [EVF/LCD] button to switch to LCD monitor display.
- Is power save mode (P22) activated?
 - Press the shutter button halfway to cancel these modes.
- Is the battery exhausted?
 - Charge the battery or replace it with a battery which has enough capacity.

3: The camera turns off immediately after it is turned on.

- Is the battery charge insufficient to operate the camera?
 - Use a battery that has been sufficiently charged.
 - If you leave the camera on, the battery will be exhausted. Turn the camera off frequently by using power save mode (P22) etc.

■ Recording

1: The picture cannot be recorded.

- Is the card inserted?
- Is the mode dial correctly set?
- Is there any memory remaining on the card?

– Before recording, delete some pictures. (P36)

2: The recorded picture is whitish.

The lens is dirty.

- The picture can become whitish if there is dirt e.g. fingerprints on the lens. If the lens is dirty, turn the camera off, retract the lens barrel (P10) and gently wipe the lens surface with a soft dry cloth.

3: The recorded picture is too bright or dark.

- Check that the exposure is correctly compensated. (P47)

4: The subject is not focused properly.

- The focus range varies depending on the recording mode.
 - Rotate the mode dial to set the proper mode for the distance to the subject.
- Is the subject beyond the focus range of the camera? (P27)
- Have you taken a picture with jitter?

5: The recorded picture is blurred. The optical image stabilizer is not effective.

- The shutter speed will become slower and the optical image stabilizer function may not work properly when taking pictures especially in dark places. In this case, we recommend holding the camera firmly with both hands when taking pictures. (P26) We recommend using a tripod and the self-timer (P46) when taking pictures with a slow shutter speed.

6: The recorded picture looks rough. Noise appears on the picture.

- Is the ISO sensitivity high or the shutter speed slow?
 - (ISO sensitivity is set to [AUTO] when the camera is shipped. Therefore, when taking pictures indoors etc. the ISO sensitivity increases.)
 - Decrease the ISO sensitivity. (P77)

- Set [NOISE REDUCTION] in [PICT.ADJ.] to [HIGH] or set every item except [NOISE REDUCTION] to [LOW]. (P82)
- Take pictures in bright places.
- In [HIGH SENS.] (P65) in scene mode, the resolution of the recorded picture decreases slightly because of high sensitivity processing.
This is not a malfunction.

7: The motion picture recording stops in the middle.

- Are you using a MultiMediaCard?
 - This unit does not support MultiMediaCards.
- When you set the picture quality to [30fpsVGA] or [30fps16:9], we recommend using a high speed SD Memory Card with “10MB/s” or greater displayed on the package.
- Depending on the type of SD Memory Card, recording may stop in the middle.

■ LCD monitor/Viewfinder

1: The LCD monitor/Viewfinder becomes darker or brighter for a moment.

- This phenomenon appears when you press the shutter button halfway to set the aperture value and does not affect the recorded pictures.

2: The LCD monitor flickers indoors.

- The LCD monitor may flicker for a few seconds after turning the camera on indoors under fluorescent light.
This is not a malfunction.

3: The LCD monitor/Viewfinder is too bright or dark.

- Adjust the brightness of the screen. (P21)
- Is the power LCD function or high angle mode activated?

4: The picture is not displayed on the LCD monitor.

- Does the picture appear on the Viewfinder?

- Press the [EVF/LCD] button to switch to LCD monitor display.

5: Black, red, blue and green dots appear on the LCD monitor.

- These pixels do not affect the recorded pictures.
This is not a malfunction.

6: Noise appears on the LCD monitor.

- In dark places, noise may appear to maintain the brightness of the LCD monitor.
This does not affect the pictures you are recording.

7: A vertical line appears on the LCD monitor.


 
 
- This is a phenomenon called smear. It is a characteristic of CCD and appears when the subject has a bright part. Uneven colors may also appear around the smear. This is not a malfunction. It is recorded in motion pictures but is not recorded on still pictures.

8: Distortion in the LCD monitor.

- When holding the edge of the LCD monitor, there may be some distortion, however this is not a malfunction. Moreover, this has no effect on the taken pictures or playback.

■ Flash

1: The flash is not activated.

- Is the flash setting set to Forced OFF [?
 - Press the [ OPEN] button to open the flash. (P42)
- The flash is not activated when motion picture mode [], [SCENERY] (P60), [NIGHT SCENERY] (P61), [FIREWORKS] (P63) or [STARRY SKY] (P63) in scene mode is selected.

2: The flash is activated 2 times.

- When you select red-eye reduction (P42), the flash is activated once before the actual recording to reduce the

red-eye phenomenon (eyes of the subject appearing red in the picture) and then activated again for the actual recording.


■ Playback

1: The picture being played back is rotated and displayed in an unexpected direction.

The camera has a function that automatically rotates the display of pictures recorded holding the camera vertically. (If you take pictures when aiming the camera up or down, the camera may recognize that it is being held vertically.)

- You can display the pictures without being rotated when [ROTATE DISP.] (P89) is set to [OFF].
- You can rotate pictures with the [ROTATE] function. (P89)

2: The picture is not played back.

- Is the mode dial set to playback []?
- Is the card inserted?
- Is there a picture in the card?

3: The folder number and the file number are displayed as [—] and the screen turns black.

- Is the picture edited with a PC or recorded with a digital camera from another manufacturer?
This may also happen if the battery is removed immediately after recording or if recording with a exhausted battery.
– Format the data to delete the pictures mentioned above. (P97) (Formatting irretrievably deletes all data including the other pictures. Check the data carefully before formatting.)

4: The picture is displayed with a date different from the actual recording date in calendar playback.

- Was the picture edited with a PC or recorded with a digital camera from another manufacturer?

This kind of picture may be displayed with a date different from the actual recording date in calendar playback. (P71)

- Is the clock in the camera set properly? (P21)

For example, if the clock setting on the camera is different from the date and time set on the PC and you acquire pictures recorded with the camera to the PC and then write them back to the card, the pictures may be displayed with dates different from the actual recording dates in calendar playback etc.

■ TV, PC and printer

1: The picture does not appear on the television.

- Is the camera connected to the TV correctly?
- Set the TV input to external input mode.

2: The display areas on the TV screen and the camera's LCD monitor are different.




Depending on the TV model, the area display may be smaller so the picture may be stretched horizontally or vertically and the top and bottom or left and right of the picture may be cut off when it is displayed. This is due to the TV specifications and is not a malfunction.

3: The motion pictures cannot be played back on a TV.

- Are you trying to play back the motion pictures by directly inserting the card in the card slot of the TV?
– Connect the camera to the TV with the AV cable (supplied) and then play back the pictures on the camera.

4: The picture cannot be transferred when the camera is connected to a PC.

- Is the camera connected to the PC correctly?

- Is the camera recognized by the PC correctly?
 - Set [USB MODE] to [PC]. (P23, 98)
- 5: The card is not recognized by the PC.**
- Disconnect the USB connection cable. Connect it again while the card is inserted in the camera.
- 6: The picture cannot be printed when the camera is connected to a printer.**
- Does the printer support PictBridge?
 - You cannot print pictures with printers which do not support PictBridge. (P100)
 - Set [USB MODE] to [PictBridge (PTP)]. (P23, 100)
- 7: The ends of the pictures are cut at printing.**
- When using a printer with a trimming or borderless printing function, cancel this function before printing. (For details, refer to the operating instructions for the printer.)
 - When you order photo studios to print pictures, ask the photo studio if the pictures can be printed with both ends.
- 8: The picture is not displayed fully on the TV.**
- Set the aspect of the TV on the camera. (P24)
-
- Others**
- 1: An unreadable language was selected by mistake.**
- Press [MENU/SET], select the [SETUP] menu icon [] and then select the [] icon to set the desired language. (P24)
- 2: The camera will make sounds caused by internal mechanical movement when it is shaken.**
- The sound arises when the lens moves. This is not a malfunction.
- 3: The setting for the auto review function is disabled.**
- Are you taking pictures using auto bracket (P48)? Is the camera in burst mode (P50) or motion picture mode [] (P68)? Is [AUDIO REC.] set to [ON] (P79)?
 - In these cases, you cannot set the auto review function in the [SETUP] menu.
- 4: A red lamp sometimes turns on when the shutter button is pressed halfway.**
- In dark places, the AF assist lamp (P82) lights red to make it easier to focus on a subject.
- 5: The AF assist lamp does not turn on.**
- Is [AF ASSIST LAMP] on the [REC] mode menu set to [ON]? (P82)
 - Are you taking pictures in dark places?
 - The AF assist lamp does not turn on in bright places.
 - The AF assist lamp does not turn on when [SCENERY] (P60), [NIGHT SCENERY] (P61), [FIREWORKS] (P63) or [PANNING] (P61) in scene mode is selected.
- 6: The camera becomes warm.**
- The surface of the camera may become warm during use. This does not affect the performance or quality of the camera.
- 7: The lens clicks.**
- When the brightness changes due to zoom or camera movement etc., the lens may click and the picture on the screen may drastically change. However, the picture is not affected. The sound is caused by the automatic adjustment of the aperture. This is not a malfunction.

8: The clock is reset.

- If you do not use the camera for a long time, the clock may be reset. When the message [PLEASE SET THE CLOCK] appears, set the clock again. (P19)
- When you take a picture before setting the clock, [0:00 0. 0. 0] is recorded.

9: Colors appear on the picture which were not found in the actual scene.

- Depending on the zoom magnification, the picture may have some colored fringes around the subject. This is called chromatic aberration and may be more visible when recording distant subjects. However this is not a malfunction.

10: The file numbers are not recorded consecutively.

- When you perform an operation after taking a certain action, the pictures may be recorded in folders with different numbers from the ones used prior to the operation. (P99)

11: The file numbers are recorded in ascending order.

- If the battery is inserted or removed when the camera is not turned off, the recorded folder numbers are lost. However if you turn the camera on again and record pictures, the recorded folder numbers are different from the prior recorded folder numbers.










12: The picture is displayed in black.


 
 

 
 



- Pictures edited or rotated with a PC may be displayed in black in playback mode (P35), multi playback (P70) and calendar playback (P71).
-





Number of recordable pictures and available recording time





- The number of recordable pictures and the available recording time are an approximation. (These vary depending on the recording conditions and the type of card.)
- The number of recordable pictures varies depending on the subjects.

■ Number of recordable pictures

| Aspect ratio | | 4:3 | | | | | | | | |
|--------------|--------|--------------------------------|--|---|-----------------------------------|--|---|-----------------------------------|--|---|
| Picture size | | 6M (6M): (2816×2112 pixels) | | | 4M (4M EZ): (2304×1728 pixels) | | | 3M (3M EZ): (2048×1536 pixels) | | |
| Quality | | TIFF |  /  |  | TIFF |  /  |  | TIFF |  /  |  |
| Card | 16 MB | 0 | 4 | 8 | 1 | 6 | 13 | 1 | 8 | 16 |
| | 32 MB | 1 | 9 | 19 | 2 | 14 | 28 | 2 | 18 | 36 |
| | 64 MB | 3 | 20 | 40 | 4 | 30 | 59 | 6 | 38 | 75 |
| | 128 MB | 6 | 41 | 82 | 9 | 61 | 120 | 12 | 78 | 150 |
| | 256 MB | 12 | 81 | 160 | 19 | 120 | 230 | 24 | 150 | 290 |
| | 512 MB | 25 | 160 | 320 | 38 | 240 | 470 | 48 | 300 | 590 |
| | 1 GB | 51 | 320 | 640 | 76 | 480 | 940 | 96 | 600 | 1180 |
| 2 GB | 100 | 660 | 1270 | 150 | 970 | 1860 | 195 | 1220 | 2360 | |

| Aspect ratio | | 4:3 | | | | | | | | |
|--------------|--------|-----------------------------------|--|---|----------------------------------|--|---|-------------------------------------|--|---|
| Picture size | | 2M (2M EZ): (1600×1200 pixels) | | | 1M (1M EZ): (1280×960 pixels) | | | 0.3M (0.3M EZ): (640×480 pixels) | | |
| Quality | | TIFF |  /  |  | TIFF |  /  |  | TIFF |  /  |  |
| Card | 16 MB | 2 | 13 | 27 | 3 | 21 | 40 | 13 | 68 | 110 |
| | 32 MB | 4 | 29 | 58 | 7 | 45 | 85 | 28 | 145 | 230 |
| | 64 MB | 10 | 61 | 120 | 15 | 93 | 175 | 58 | 290 | 480 |
| | 128 MB | 20 | 125 | 240 | 31 | 190 | 350 | 115 | 600 | 970 |
| | 256 MB | 39 | 240 | 470 | 61 | 370 | 690 | 230 | 1170 | 1900 |
| | 512 MB | 78 | 480 | 940 | 120 | 730 | 1370 | 450 | 2320 | 3770 |
| | 1 GB | 155 | 970 | 1880 | 240 | 1470 | 2740 | 910 | 4640 | 7550 |
| 2 GB | 310 | 1920 | 3610 | 490 | 2920 | 5120 | 1800 | 8780 | 12290 | |

| Aspect ratio | | 3:2 | | | | | |
|--------------|--------|--------------------------------|---|---|---------------------------------------|---|---|
| Picture size | | 5M (5M): (2816×1880 pixels) | | | 2.5M (2.5M EZ): (2048×1360 pixels) | | |
| Quality | | TIFF |  |  | TIFF |  |  |
| Card | 16 MB | 0 | 4 | 10 | 1 | 9 | 18 |
| | 32 MB | 1 | 10 | 21 | 3 | 20 | 40 |
| | 64 MB | 3 | 22 | 45 | 6 | 43 | 83 |
| | 128 MB | 7 | 46 | 92 | 13 | 88 | 165 |
| | 256 MB | 14 | 91 | 180 | 27 | 170 | 330 |
| | 512 MB | 28 | 180 | 350 | 54 | 340 | 650 |
| | 1 GB | 57 | 360 | 710 | 105 | 680 | 1310 |
| 2 GB | 115 | 730 | 1420 | 210 | 1360 | 2560 | |

| Aspect ratio | | 16:9 | | | | | |
|--------------|--------|------------------------------------|---|---|-----------------------------------|---|---|
| Picture size | | 4.5M (4.5M): (2816×1584 pixels) | | | 2M (2M EZ): (1920×1080 pixels) | | |
| Quality | | TIFF |  |  | TIFF |  |  |
| Card | 16 MB | 0 | 5 | 11 | 2 | 12 | 25 |
| | 32 MB | 2 | 12 | 25 | 4 | 27 | 53 |
| | 64 MB | 4 | 27 | 53 | 9 | 57 | 105 |
| | 128 MB | 8 | 55 | 105 | 18 | 115 | 220 |
| | 256 MB | 17 | 105 | 210 | 36 | 230 | 430 |
| | 512 MB | 33 | 210 | 420 | 72 | 450 | 860 |
| | 1 GB | 67 | 430 | 850 | 145 | 910 | 1720 |
| 2 GB | 135 | 870 | 1700 | 290 | 1800 | 3410 | |

■ Available recording time (seconds)

| Picture quality setting | 30fps VGA | 10fps VGA | 30fps QVGA | 10fps QVGA | 30fps 16:9 | 10fps 16:9 | |
|-------------------------|--------------|--------------|---------------|---------------|---------------|---------------|------|
| SD Memory Card | 16 MB | 5 | 25 | 25 | 82 | 5 | 22 |
| | 32 MB | 15 | 55 | 55 | 170 | 14 | 50 |
| | 64 MB | 35 | 120 | 120 | 360 | 33 | 106 |
| | 128 MB | 80 | 250 | 250 | 740 | 71 | 217 |
| | 256 MB | 160 | 490 | 490 | 1440 | 140 | 420 |
| | 512 MB | 320 | 980 | 980 | 2870 | 280 | 840 |
| | 1 GB | 660 | 1970 | 1970 | 5700 | 560 | 1690 |
| | 2 GB | 1350 | 4020 | 4020 | 11700 | 1160 | 3450 |



- The numbers inside the thick black line are the number of recordable pictures in simple mode. (P29)
- The number of recordable pictures and the available recording time displayed on the LCD monitor may not decrease in order.
- This unit does not support recording motion pictures on MultiMediaCards.
- The extended optical zoom does not work in [HIGH SENS.] (P65) in scene mode so the picture size for [EZ] is not displayed.

Specifications

Digital Camera: Information for your safety

| | |
|---------------------------|--|
| Power Source: | DC 8.4 V |
| Power Consumption: | 2.0 W (When recording with LCD Monitor) 1.9 W (When recording with Viewfinder) 1.0 W (When playing back with LCD Monitor) 0.9 W (When playing back with Viewfinder) |

| | |
|---------------------------------------|--|
| Camera effective pixels: | 6,000,000 pixels |
| Image sensor: | 1/2.5" CCD, total pixel number 6,370,000 pixels Primary color filter |
| Lens: | Optical 12× zoom, f=6 mm to 72 mm (35 mm film camera equivalent: 36 mm to 432 mm)/F2.8 to F3.3 |
| Digital zoom: | Max. 4× |
| Extended optical zoom: | (Except for the maximum picture size for each aspect ratio) Max. 16.5× |
| Focus: | Normal/Macro/Manual focus, 9-area-focusing/3-area-focusing (High speed)/1-area-focusing (High speed)/1-area-focusing/ Spot-focusing |
| Focus range: | Program AE (P): 30 cm (0.98 feet) (Wide)/2 m (6.56 feet) (Tele) to ∞ Macro (Excluding Tele)/Simple/Motion pictures/Aperture-priority AE (A)/Shutter-priority AE (S)/Manual exposure (M): 5 cm (0.16 feet) (Wide)/2 m (6.56 feet) (Tele) to ∞ (However, in macro mode, simple mode and motion picture mode, the focus range is only in Tele.): 1 m (3.28 feet) (Tele) to ∞ |
| Shutter system: | Electronic shutter+Mechanical shutter |
| Burst recording | |
| Burst speed: | 3 frames/second (High speed), 2 frames/second (Low speed), Approx. 2 frames/second (Unlimited) |
| Number of recordable pictures: | Max. 13 frames (Standard), max. 7 frames (Fine), Depends on the remaining capacity of the card (Unlimited). (Performance in burst recording is only with SD Memory Card. MultiMediaCard performance will be less.) |
| Motion picture recording: | 848×480 pixels/640×480 pixels/320×240 pixels (30 or 10 frames/second with audio. The maximum recording time depends on the capacity of the card.) |
| ISO sensitivity: | AUTO/80/100/200/400/ [HIGH SENS.] mode: AUTO/800/1600 |
| Shutter speed: | 60 to 1/2000th [STARRY SKY] mode: 15 seconds, 30 seconds, 60 seconds Motion picture mode: 1/30th to 1/2000th |
| White balance: | AUTO/Daylight/Cloudy/Halogen/Flash/White set1/White set2 |
| Exposure (AE): | Program AE (P)/Aperture-priority AE (A)/ Shutter-priority AE (S)/Manual exposure (M) Exposure compensation (1/3 EV Step, -2 EV to +2 EV) |
| Metering mode: | Multiple/Center weighted/Spot |
| LCD monitor: | 2.5" low-temperature polycrystalline TFT LCD (Approx. 114,000 pixels) (field of view ratio about 100%) |
| Viewfinder: | Color LCD Viewfinder (Approx. 114,000 pixels) (field of view ratio about 100%) (with diopter adjustment -5 to +3 diopter) |

| | |
|-------------------------------|--|
| Flash: | Built-in pop up flash Flash range: (ISO AUTO) Approx. 30 cm (0.98 feet) to 6 m (19.7 feet) (Wide) AUTO, AUTO/Red-eye reduction, Forced ON (Forced ON/ Red-eye reduction), Slow sync./Red-eye reduction, Forced OFF |
| Microphone: | Monaural |
| Speaker: | Monaural |
| Recording media: | SD Memory Card/MultiMediaCard (Still pictures only) |
| Picture size | |
| Still picture: | When the aspect ratio setting is [4:3] 2816×2112 pixels, 2304×1728 pixels, 2048×1536 pixels, 1600×1200 pixels, 1280×960 pixels, 640×480 pixels When the aspect ratio setting is [3:2] 2816×1880 pixels, 2048×1360 pixels When the aspect ratio setting is [16:9] 2816×1584 pixels, 1920×1080 pixels |
| Motion pictures: | When the aspect ratio setting is [4:3] 640×480 pixels/320×240 pixels When the aspect ratio setting is [16:9] 848×480 pixels |
| Quality: | Fine/Standard/TIFF |
| Recording file format | |
| Still Picture: | JPEG (based on Design rule for Camera File system, based on Exif 2.2 standard)/TIFF (RGB)/DPOF corresponding |
| Picture with audio: | JPEG (based on Design rule for Camera File system, based on Exif 2.2 standard)+640×480 pixels QuickTime (picture with audio) |
| Motion pictures: | QuickTime Motion JPEG (motion pictures with audio) |
| Interface | |
| Digital: | USB 2.0 (Full Speed) |
| Analog video/audio: | NTSC/PAL Composite (Switched by menu), Audio line output (monaural) |
| Terminal | |
| DIGITAL/AV OUT: | Dedicated jack (8 pin) |
| DC IN: | Type 3 jack |
| Dimensions: | Approx. 112.5 mm (W)×72.2 mm (H)×79.0 mm (D) [4 7/16" (W)×2 13/16" (H)×3 1/8" (D)] (excluding the projection part) |
| Mass: | Approx. 310 g/10.9 oz (excluding card and battery), Approx. 357 g/12.6 oz (with card and battery) |
| Operating temperature: | 0 °C to 40 °C (32 °F to 104 °F) |
| Operating humidity: | 10% to 80% |
| Battery Charger | |
| (Panasonic DE-993B): | Information for your safety |


 
 



 
 





| | |
|----------------|-----------------------------------|
| Input: | 110 V to 240 V ~ 50/60 Hz, 0.15 A |
| Output: | CHARGE 8.4 V === 0.43 A |

Equipment mobility: Movable

Battery Pack (lithium-ion)
(Panasonic CGR-S006A): Information for your safety

| | |
|--------------------------|----------------|
| Voltage/capacity: | 7.2 V, 710 mAh |
|--------------------------|----------------|

Digital Camera Accessory System

| Accessory# | Figure | Description |
|--|---|---|
| CGR-S006A |  | Lithium Ion Battery |
| DMW-AC7 |  | AC Adaptor |
| (A): DMW-CZS7 (B): DMW-CZH7 | (A)  (B)  | (A): Soft Case (B): Semi Hard Case |
| (C): DMW-LMC52 (D): DMW-LND52 | (C)  (D)  | (C): MC Protector (D): ND Filter |
| (E): DMW-LT55 (F): DMW-LW55 | (E)  (F)  | (E): Tele Conversion Lens (F): Wide Conversion Lens |
| DMW-LC55 |  | Close-up Lens |
| DMW-LA2 |  | Lens Adaptor |
| RP-SDK02GU1A RP-SDK01GU1A RP-SDK512U1A RP-SD512BU1A RP-SDH256U1A RP-SD256BU1A RP-SD128BU1A RP-SD064BPPA |  | 2 GB SD Memory Card 1 GB SD Memory Card 512 MB SD Memory Card 512 MB SD Memory Card 256 MB SD Memory Card 256 MB SD Memory Card 128 MB SD Memory Card 64 MB SD Memory Card |
| BN-SDCAPU/1B |  | SD USB Reader/Writer (compatible with MultiMediaCard) |
| BN-SDABPU/1B |  | SD PC Card Adaptor (compatible with MultiMediaCard) |

- Refer to P12 for information about the battery charging time and the number of recordable pictures.
- NOTE: Accessories and/or model numbers may vary between countries. Consult your local dealer.

Digital Camera Accessory Order Form

(For USA Customers)

Please photocopy this form when placing an order.

1. Digital Camera Model # _____

2. Items Ordered

| Accessory # | Description | Price Each | Quantity | Total Price |
|------------------------------|-------------|------------|----------|-------------|
| | | | | |
| | | | | |
| | | | | |
| Subtotal | | | | |
| Your State & Local Sales Tax | | | | |
| Shipping & Handling | | | | 6.95 |
| Total Enclosed | | | | |

3. Method of payment (check one)

- Check of Money Order enclosed (NO C.O.D.SHIPMENTS)
- VISA Credit Card # _____
- MasterCard Expiration Date _____
- Discover Customer Signature _____

Make Check or Money Order to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms.

First

Last

Phone#:

Day () _____

Street Address _____

Night () _____

City _____

State _____

Zip _____

TO OBTAIN ANY OF OUR DIGITAL CAMERA ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368

[6 AM-5 PM M-F, 6 AM-10:30 AM SAT, PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC SERVICES COMPANY ACCESSORY ORDER OFFICE

20421 84th Avenue South Kent, WA. 98032

In CANADA, please contact your local Dealer for more information about accessories.

Request for Service Notice (For USA Only)

Please photocopy this form when making a request for service notice.

In the unlikely event this product needs service.

Request for Service Notice:

- Please include your **proof of purchase.**
(Failure to do so will delay your repair.)
- To further speed your repair, please provide an explanation of what wrong with the unit and any symptom it is exhibiting.

Mail this completed form and your Proof of Purchase along with your unit to:

Panasonic Services Company

410B Airport Road

Elgin, IL 60123-9333

Attn: Digital Camera Repair

Limited Warranty (For USA Only)

PANASONIC CONSUMER ELECTRONICS COMPANY, DIVISION OF
 PANASONIC CORPORATION OF NORTH AMERICA
 One Panasonic Way, Secaucus, New Jersey 07094
 PANASONIC PUERTO RICO, INC.
 Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto
 Rico 00985

Panasonic Digital Still Camera Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Puerto Rico, Inc. (collectively referred to as “the warrantor”) will, for the length of the period indicated on the chart below, which starts with the date of original purchase (“warranty period”), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or refurbished product. The decision to repair or replace will be made by the warrantor.

| PRODUCT OR PART NAME | PARTS | LABOR |
|--|-------------------------|-------------------------|
| DIGITAL STILL CAMERA (EXCEPT ITEMS LISTED BELOW) | 1 (ONE) YEAR | 90 (NINETY) DAYS |
| CCD | 6 (SIX) MONTHS | 90 (NINETY) DAYS |
| RECHARGEABLE BATTERY PACK (IN EXCHANGE FOR DEFECTIVE BATTERY PACK) | 90 (NINETY) DAYS | NOT APPLICABLE |
| SD MEMORY CARD (IN EXCHANGE FOR DEFECTIVE SD CARD) | 90 (NINETY) DAYS | NOT APPLICABLE |

During the “Labor” warranty period there will be no charge for labor. During the “Parts” warranty period, there will be no charge for parts. You must carry-in or mail-in your product during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold “as is”. A purchase receipt or other proof of the original purchase date is required for warranty service.

Carry-In or Mail-In Service

For Carry-In or Mail-In Service in the United States call

1-800-272-7033.

For assistance in Puerto Rico call Panasonic Puerto Rico, Inc.

(787)-750-4300 or fax (787)-768-2910.

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, travel to and from the servicer, loss of media or images, data or other memory content. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer Services Directory (For USA Only)

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:

1-800-272-7033, Monday-Friday 8:30am-8pm EST.

Web Site: <http://www.panasonic.com/consumersupport>

You can purchase parts, accessories or locate your nearest servicer by visiting our Web Site.

Accessory Purchases:

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:
npcparts@us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Customer Orders Only)

Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032

(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)

(Visa, MasterCard, Discover Card, American Express, Check)

Product Repairs

Centralized Factory Servicer

MAIL TO :

Panasonic Services Company
410B Airport Road
Elgin, IL 60123-9333
Attention: Digital Camera Repair

Please carefully pack and ship, prepaid and insured, to the Elgin Centralized Factory Servicer.

Customer's in Puerto Rico, please ship or carry in to location below ("Service in Puerto Rico").

Service in Puerto Rico

Panasonic Puerto Rico, Inc.:

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Phone (787) 750-4300 Fax (787) 768-2910

As of October 2005

Index

| A | |
|--|-------------|
| AC Adaptor | 98, 100 |
| Adjusting Flash Output | 45 |
| AF Assist Lamp | 82 |
| AF Mode | 80 |
| AF/AE Lock | 27 |
| Aperture-priority AE | 55 |
| Aspect Ratio | 77 |
| Aspect Ratio Conversion | 96 |
| Audio Dubbing | 93 |
| Audio Recording | 68, 79 |
| Auto Bracket | 48 |
| Auto Review | 22 |
| Auto White Balance | 75 |
| Available Recording Time | 119 |
| B | |
| Baby Mode | 64 |
| Backlight Compensation | 30 |
| Brightness of the LCD Monitor/ Viewfinder | 21 |
| Built-in Flash | 42 |
| Burst Mode | 50 |
| C | |
| Calendar Playback | 71 |
| Candle Light Mode | 62 |
| Card Access Indication | 15 |
| Center Weighted | 80 |
| Charger | 110 |
| Charging | 12 |
| Clock Set | 19, 21 |
| Close-up Lens | 18, 85, 105 |
| Color Effect | 82 |
| Condensation | 4 |
| Continuous AF | 81 |
| Conversion Lens | 85 |
| D | |
| Date Printing | 92, 102 |
| Deleting Pictures | 36 |
| Demonstration of the Optical Image Stabilizer | 49 |
| Digital Zoom | 32 |
| Diopter Adjustment | 39 |
| DPOF Print Setting | 91 |

| E | |
|----------------------------------|-------------|
| Exposure | 28 |
| Exposure Compensation | 47 |
| Extended Optical Zoom | 31 |
| EZ | 31, 78 |
| F | |
| File Number | 23, 99, 108 |
| Fine | 79 |
| Fireworks Mode | 63 |
| Flip Animation | 83 |
| Focus | 27 |
| Folder Composition | 99 |
| Folder Number | 23, 99, 108 |
| Food Mode | 62 |
| Formatting | 97 |
| H | |
| High Angle Mode | 41 |
| High Sensitivity Mode | 65 |
| Highlight Display | 24, 39 |
| Histogram | 40 |
| Hood Adaptor | 17 |
| I | |
| ISO Sensitivity | 77 |
| J | |
| Jitter | 28 |
| L | |
| Language Setting | 24 |
| Layout | 102 |
| LCD Monitor | 106 |
| LCD Monitor/Viewfinder | 38 |
| Lens Cap | 16 |
| Lens Hood | 17 |
| M | |
| Macro Mode | 51 |
| MANUAL | 88 |
| Manual Exposure | 56 |
| Manual Exposure Assistance | 54 |
| Manual Focus | 56 |
| Mass Storage | 23 |
| MC Protector | 105 |
| Metering Mode | 80 |
| MF Assist | 22, 57 |
| MF m/ft | 24 |

| | |
|---------------------------|--------|
| Monitor Priority | 22, 39 |
| Motion Picture Mode | 68 |
| Multi Playback | 70 |
| Multiple | 80 |

N

| | |
|-------------------------------------|---------|
| ND Filter | 105 |
| Night Portrait Mode | 60 |
| Night Scenery Mode | 61 |
| NO.RESET | 23 |
| NTSC | 24 |
| Number of Prints | 91, 102 |
| Number of Recordable Pictures | 12, 117 |

O

| | |
|--------------------------------|----|
| Operational Sound | 22 |
| Optical Image Stabilizer | 49 |
| Optical Zoom | 31 |
| Out-of-frame Display | 39 |

P

| | |
|---|---------|
| PAL | 24 |
| Panning Mode | 61 |
| Paper Size | 102 |
| Party Mode | 62 |
| PC | 23, 98 |
| PictBridge | 23, 100 |
| Picture Adjustment | 82 |
| Picture Quality Setting (Motion Picture Mode) | 68 |
| Picture Quality Setting (Simple Mode) | 29 |
| Picture Size | 78 |
| Pictures with Audio | 73 |
| Playback Pictures on TV | 104 |
| Playback Zoom | 72 |
| Playing Back Motion Pictures | 73 |
| Portrait Mode | 59 |
| Power LCD | 41 |
| Power Save | 22 |
| Prefocus | 58 |
| Program AE | 25 |
| Protect | 92 |

Q

| | |
|---------------|----|
| Quality | 78 |
|---------------|----|

R

| | |
|----------------------------|----|
| Recording Guide Line | 39 |
| Reset of Setting | 23 |
| Resizing | 94 |
| Review | 34 |
| Rotate | 89 |

| | |
|----------------------|----|
| Rotate Display | 89 |
|----------------------|----|

S

| | |
|---------------------------|----|
| Scene Menu | 24 |
| Scene Mode | 58 |
| Scenery Mode | 60 |
| Self-timer | 46 |
| Setting Favorites | 89 |
| Setup Menu | 20 |
| Shutter sound | 23 |
| Shutter-priority AE | 55 |
| Simple Mode | 29 |
| Slide Show | 88 |
| Snow Mode | 65 |
| Soft Skin Mode | 59 |
| Sports Mode | 60 |
| Spot | 80 |
| Spot-focusing | 80 |
| Standard | 79 |
| Starry Sky Mode | 63 |
| Status Indicator | 25 |
| Strap | 17 |

T

| | |
|---------------------------|--------|
| Tele-macro Function | 51 |
| TIFF | 79 |
| Travel Date | 21, 66 |
| Trimming | 95 |
| TV Aspect | 24 |

U

| | |
|----------------------------|-------------|
| USB Connection Cable | 98, 100 |
| USB Mode | 23, 98, 101 |

V

| | |
|--------------------------|---------|
| Video Output | 24, 104 |
| Volume of Speakers | 23 |

W

| | |
|-------------------------------------|----|
| White Balance | 75 |
| White Balance Fine Adjustment | 76 |
| White Set | 76 |


Numerics

| | |
|------------------------------------|----|
| 1-area-focusing | 80 |
| 1-area-focusing (High speed) | 80 |
| 3-area-focusing (High speed) | 80 |
| 9-area-focusing | 80 |

Spanish Quick Use Guide/Guía rápida en español


Ésta es una visión de conjunto que trata del procedimiento para grabar y reproducir las imágenes con la cámara.

1 Inserte la batería y la tarjeta.

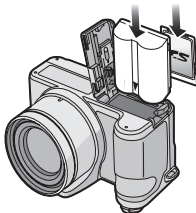


2 Encienda la cámara para tomar las imágenes.

- Ajuste el reloj.

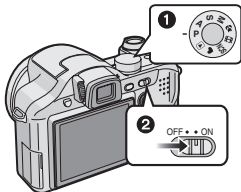

- 1 Ajuste el disco del modo a [P].
- 2 Pulse el botón del obturador para tomar las imágenes.

3 Reproduzca las imágenes.

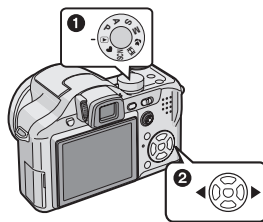

- 1 Ajuste el disco del modo a [▶].
- 2 Elija la imagen que quiere ver.

MEMO



QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Computer, Inc., used under license.

**Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America**

One Panasonic Way, Secaucus, NJ 07094

Panasonic Puerto Rico, Inc.

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

© 2006 Matsushita Electric Industrial Co., Ltd.



VQT0V63

F0106Hy0 (10000 Ⓐ)

