

Door Instructions



The control panel is to the left hand side of the mechanical control box for the door mechanism



When locking the door, the door setting **MUST** be in the manual control. This can be activated by pushing the right hand bottom button - the hand icon will show on the screen. If the door is not in manual there is a real possibility of burning out the motor should the door be activated via the push pads.



To automate the door, so it can be operated via the push pads, press the top middle button and the icon of open doors will show on the screen.



To leave the doors permanently open push the top left hand button and the door will remain open

Reset procedure

To reset the system, press the bottom middle and right hand button at the same time.